




# Packard Bell ms-Hera c Disassembly

Written By: Smilzo






## Step 1 — Unscrew the lid

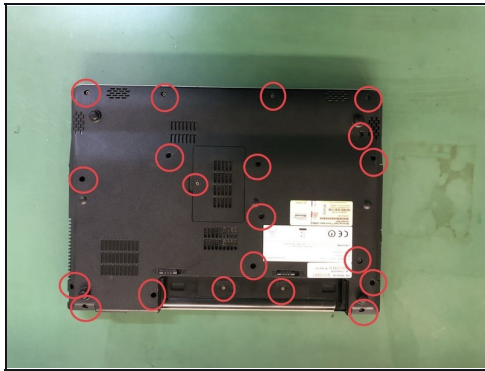

- Remove the battery.
- Unscrew the red marked screws with a Phillips screwdriver.
- Remove the DVD reader.

## Step 2 — Disconnect the keyboard

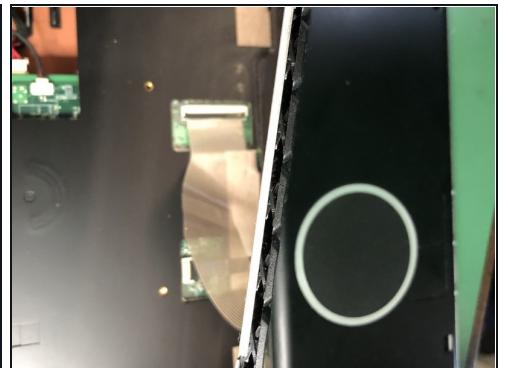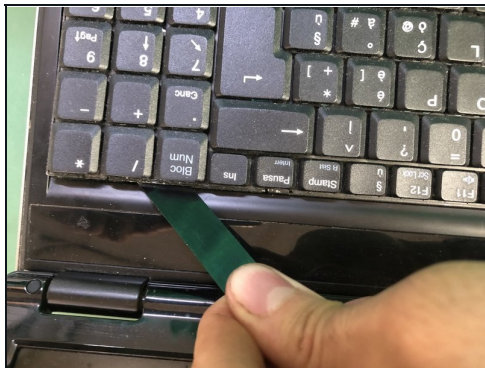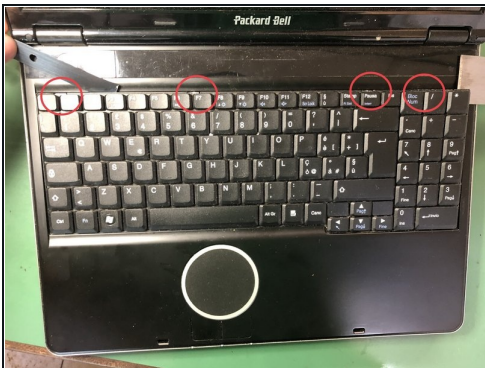


- Pry in the red marked spots to release the keyboard
- Unplug the keyboard connector.

### Step 3 — Unplug the cables



- Unplug the 3 connectors on the motherboard
- Remove the 2 screws holding the display in place
- Use a thin tool to pry up the back cover of the laptop on the side


### Step 4 — Unscrew the motherboard

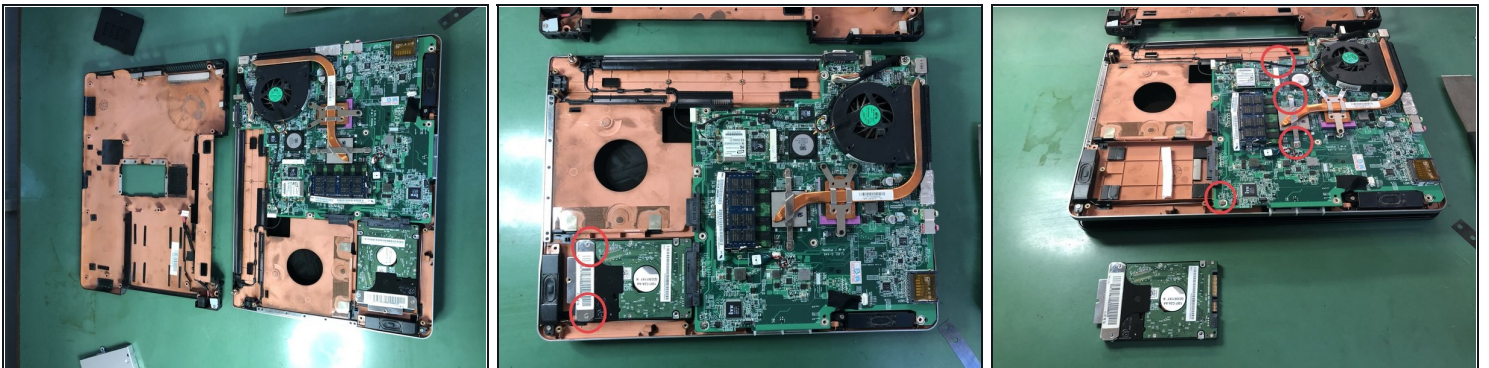

- Remove the back cover.
- Remove the HDD.
- Remove the screws that hold the motherboard.




## Step 5 — Remove the display

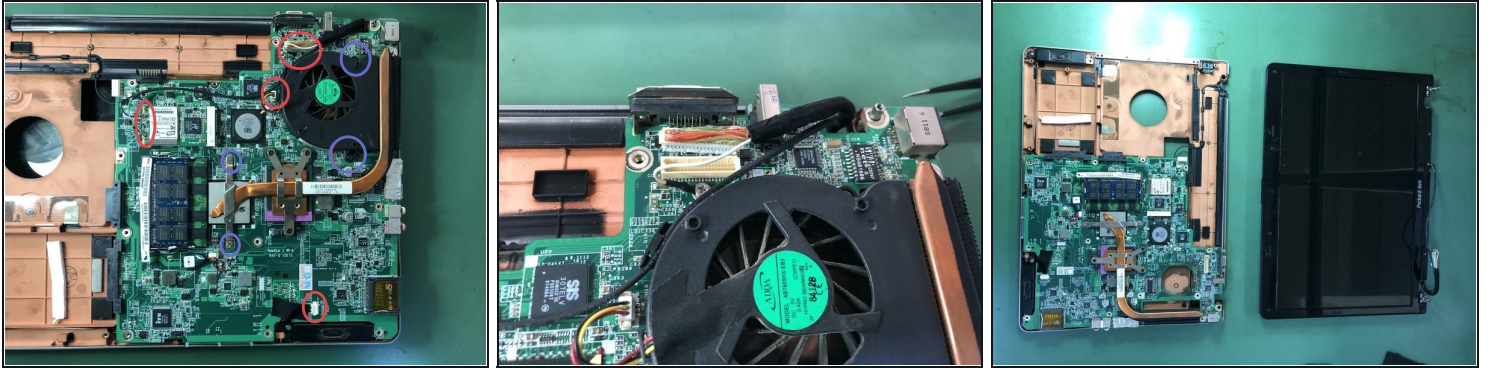


- Remove the marked screws and connectors.
- Disconnect the display connector.
- Remove the display.

## Step 6 — Remove the heatsink

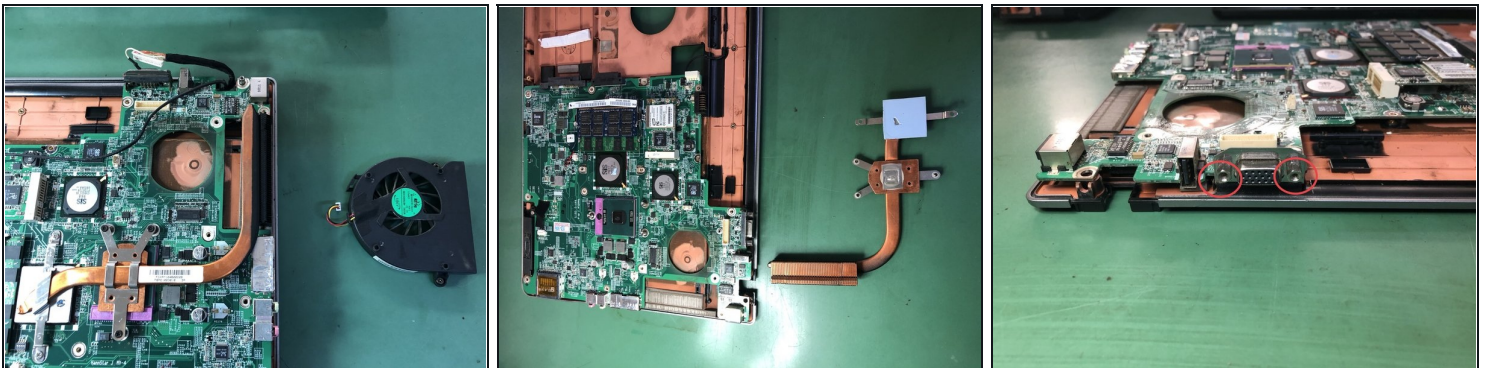

- Remove the cooling fan.
- Remove the heatsink.
- Remove the screws on the connector.

## Step 7 — Remove the motherboard

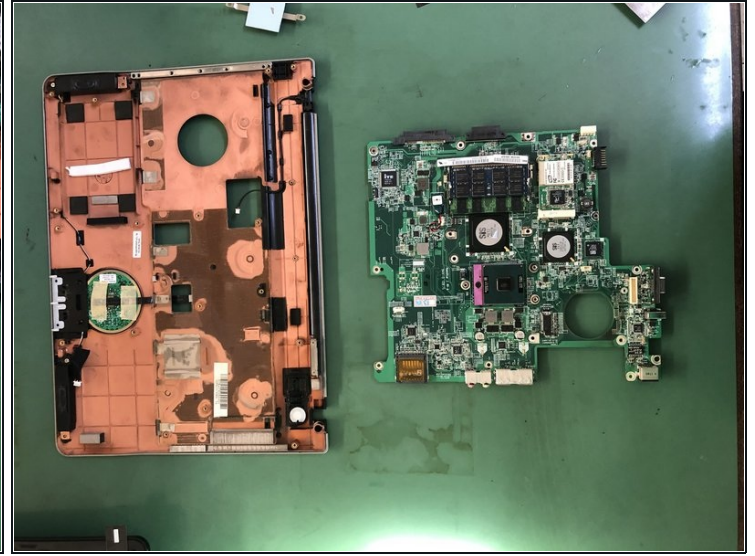

- Remove the screws to remove the motherboard.

To reassemble your device, follow these instructions in reverse order.