



liftmaster garage will not open, red/yellow led blink and beep

Liftmaster garage door was blinking/beeping and would not open. This guide is to replace the 2 failing capacitors in the opener to fix the issue.

Written By: Parnell



INTRODUCTION

I have a liftmaster 8500 and one day I got home, the opener wouldn't open the door. I heard a faint beep, so I went inside and found the wired opener (888LM) was blinking both red/yellow lights and beeping constantly. The troubleshooting guide said the main opener's board was bad. Ordered and replaced that (large cost) and still didn't change the issue. Figured I would pull this opener apart and poke around. Bulging caps were immediately spotted. Figured ~\$2 in parts was worth a shot. The replacement opener is ~\$45 retail.

TOOLS:

- [Lead-Free Solder](#) (1)
- [Soldering Workstation](#) (1)
- [Desoldering Pump](#) (1)
- [Philips Screwdrivers \(one normal, one small\)](#) (1)

PARTS:

- [JUWT1105MCD](#) (2)
Capacitor

Step 1 — Model and issue



- This is the door opener, 888LM. I had a constant red/yellow light blinking and a beep coming from the unit. Replacing the garage door opener main board, did not change anything. (screw is marked)

Step 2 — Remove opener and PCB



- Flip up the cover, remove the screw. Then slide the opener up the wall. Turn around and you'll see a wire attached to two screws. Remove those screws and pull up the back

Reinstalled after replacing caps and now my garage door functions like it should! I read some reviews off liftmaster's site for the 888LM and many complain of its short life and replacement.