




Replacement of speakers on the Dell XPS 13 9380

This guide explains how to remove the speakers from your Dell XPS 13 9380.

Written By: Schwarzer

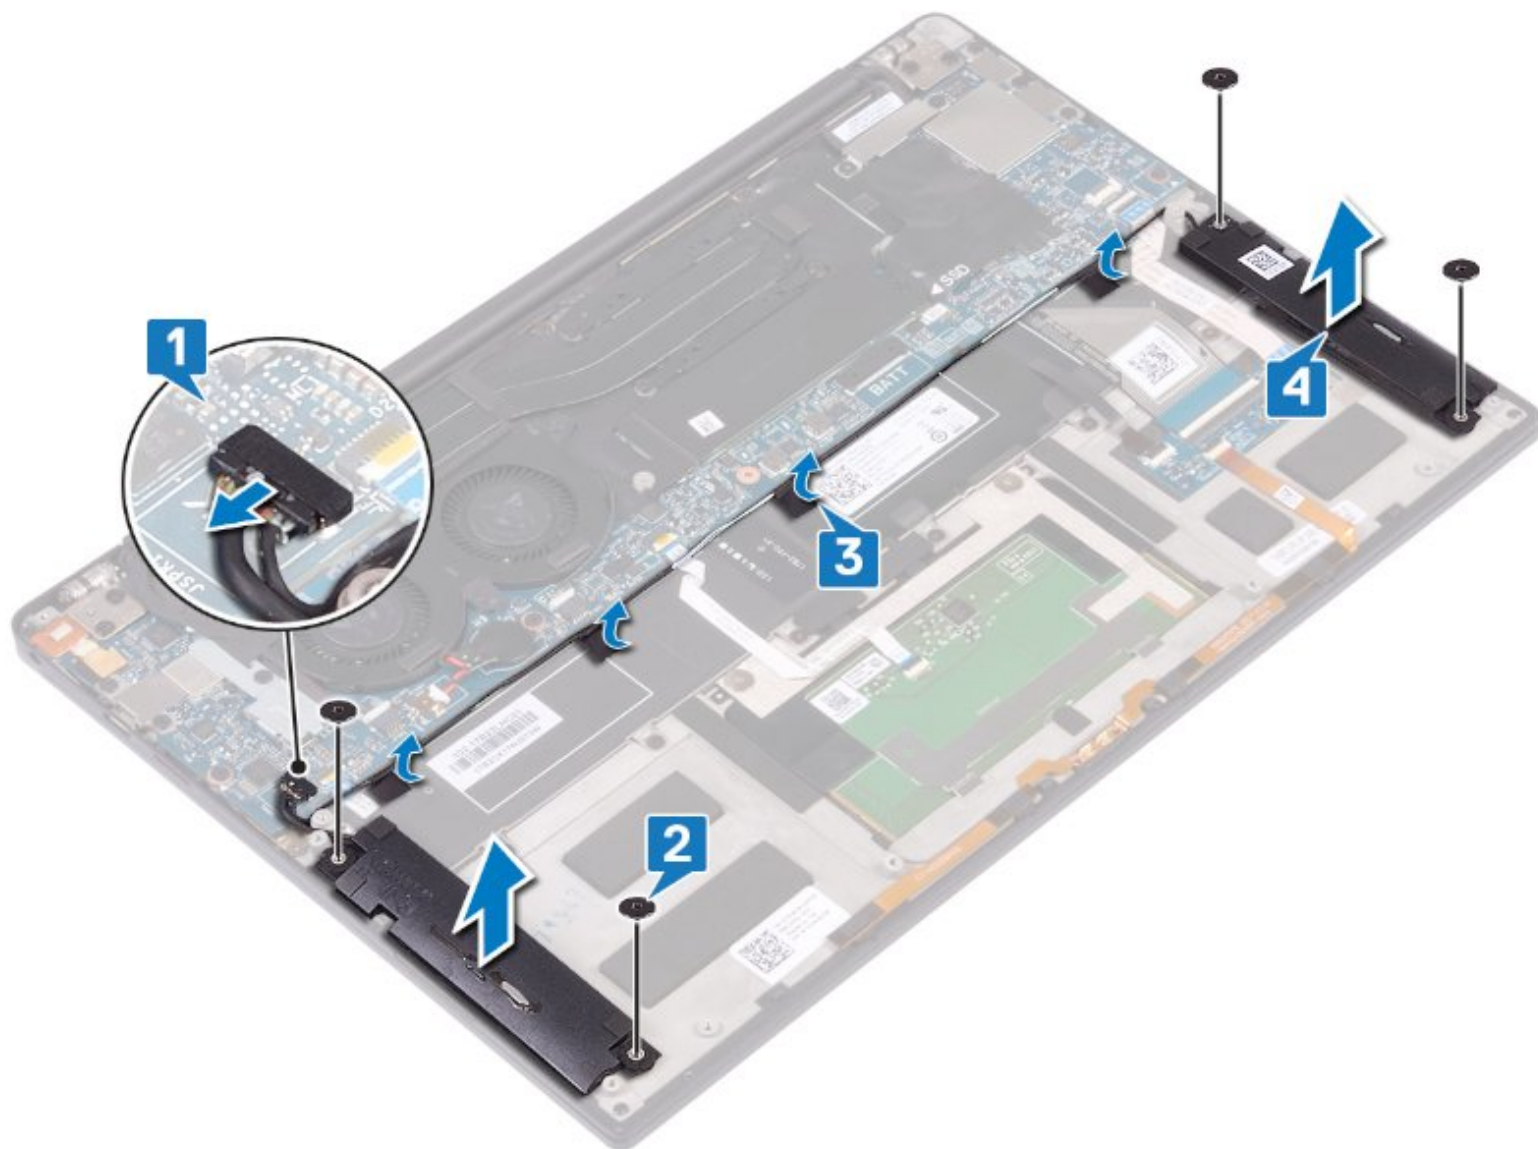

INTRODUCTION


You need to disconnect or replace the speakers of your Dell XPS 13 9380, this guide is for you!



TOOLS:

- [Mako Driver Kit - 64 Precision Bits](#) (1)
-


Step 1 — Remove the back panel

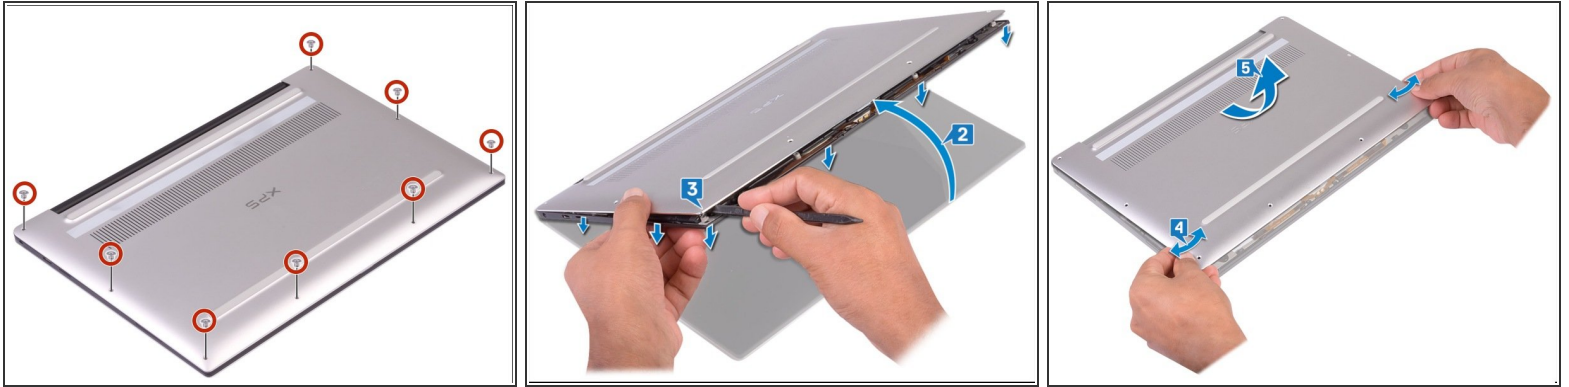

i Before you begin, be sure to turn off your laptop and unplug it from the outlet.

- Use a Torx T5 driver to unscrew the eight screws securing the back panel.
- Use a spudger to pry up and loosen the back panel.
- Lift the back panel up slightly from the non-hinged edge.
- Pull the back panel away from the hinged edge, wiggling it back and forth to loosen the clips.
- When the back panel clips are free, remove the back panel.

Step 2 — Remove the battery

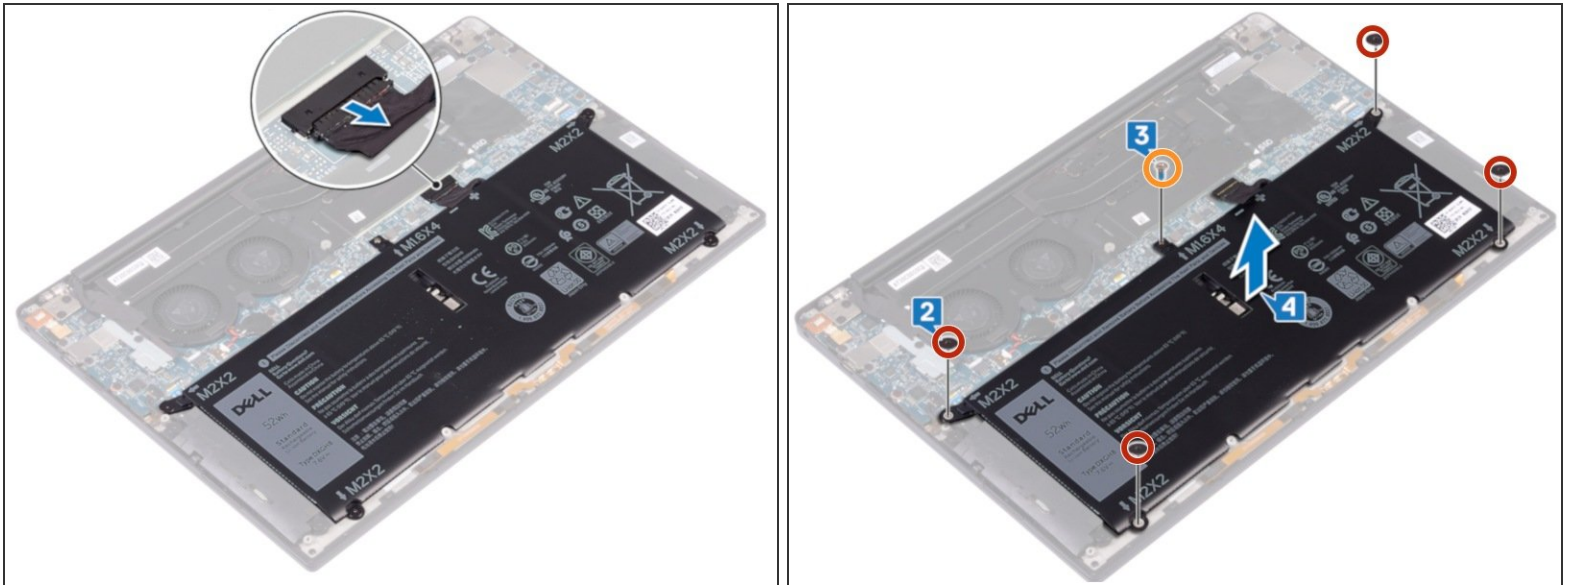


- Disconnect the cable from the battery by pulling the connector towards the battery.

⚠ Pull parallel to the battery, not straight up.

- Remove the four screws (M2 x 2) securing the battery.
- Remove the screw (M1.6 x 4) securing the battery.
- Remove the battery from its recess.

Step 3 — Remove the speakers

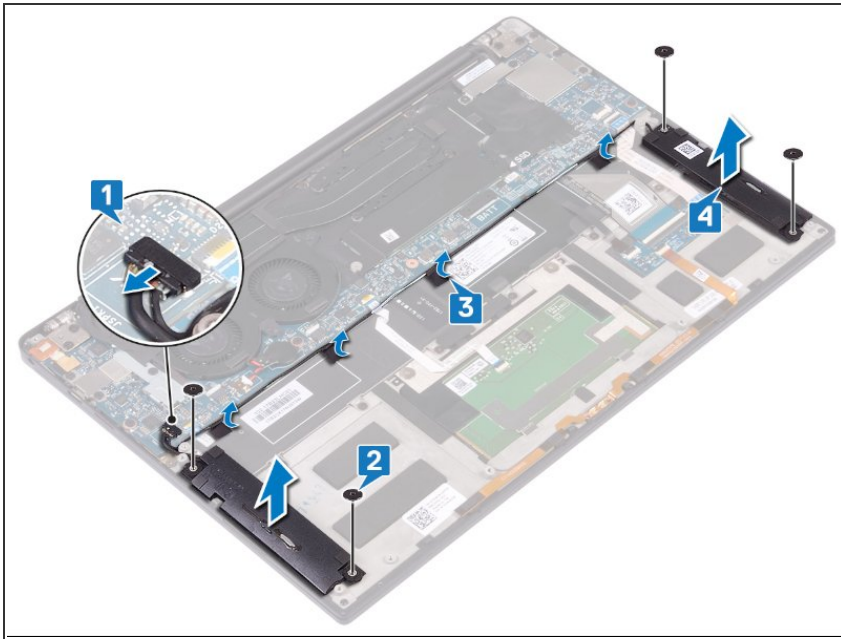

- ★ *We removed or disconnected the battery to avoid any electrical discharge.*
- 1- Disconnect the speaker cable from the motherboard.
 - 2- Remove the four screws (M2x2) that attach the left and right speakers.
 - 3- Note the routing of the cable from the speakers and remove the adhesive tapes (4) that attach the cable to the keyboard.
 - 4- Lift up the left and right speakers and their cables and remove them.

To reassemble your device, follow the instructions in reverse order.