




Dell Latitude 5480 Battery Replacement

This guide will walk you through replacing the...

Written By: Jordan

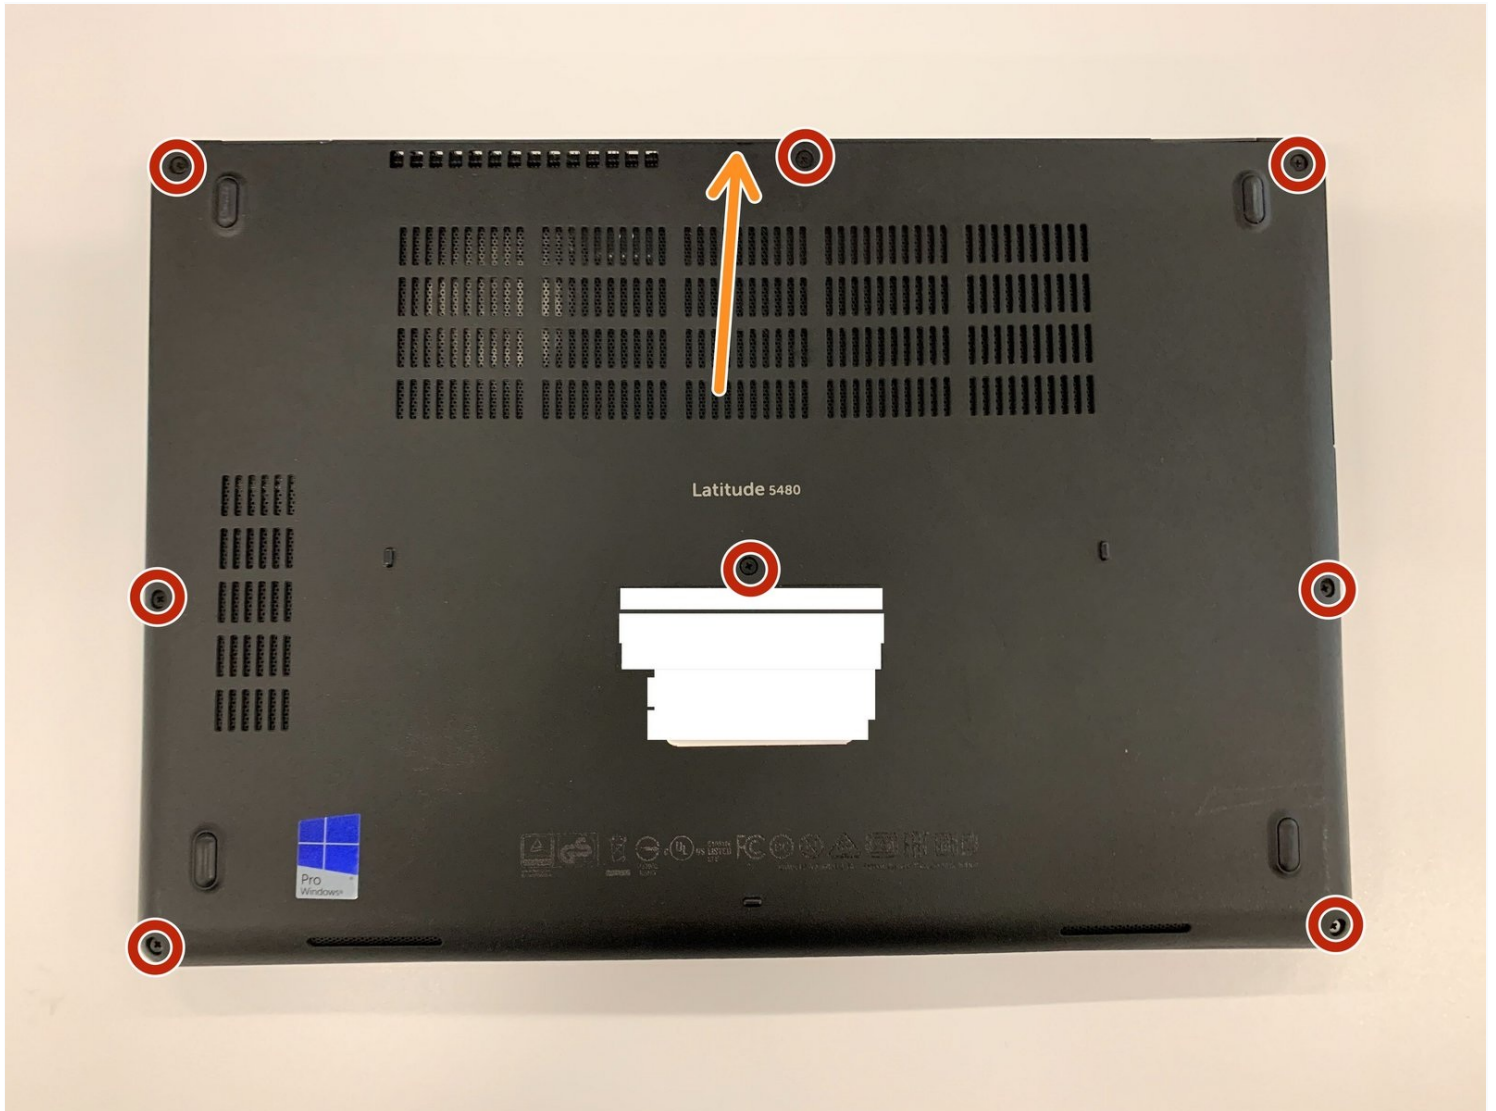

INTRODUCTION

This guide will walk you through replacing the battery on a Latitude 5480, 5490, 5491 series laptop. You'll need a #1 Phillips screwdriver, and about ten minutes of patience.

TOOLS:


Phillips #1 Screwdriver (1)

PARTS:

Latitude 5480 Battery (1)


Dell GJKNX Laptop Battery (1)

Step 1 — Opening the laptop

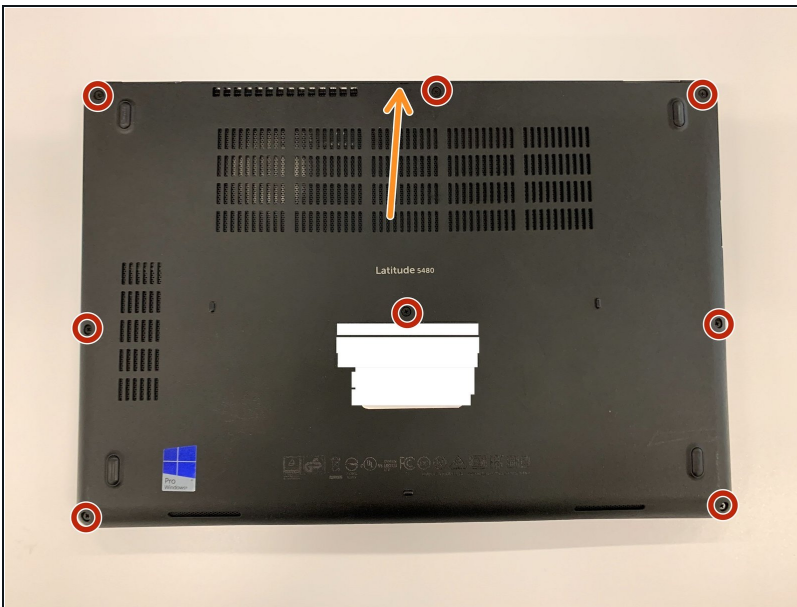

- Start by loosening the 8 captive screws on the backplate. These screws will not come fully out of the backplate, so you can't lose them.
- Pry the backplate off with a spudger or long fingernail. There is an opening marked by the orange arrow, but you can open it any way you see fit.

Step 2 — Removing the battery

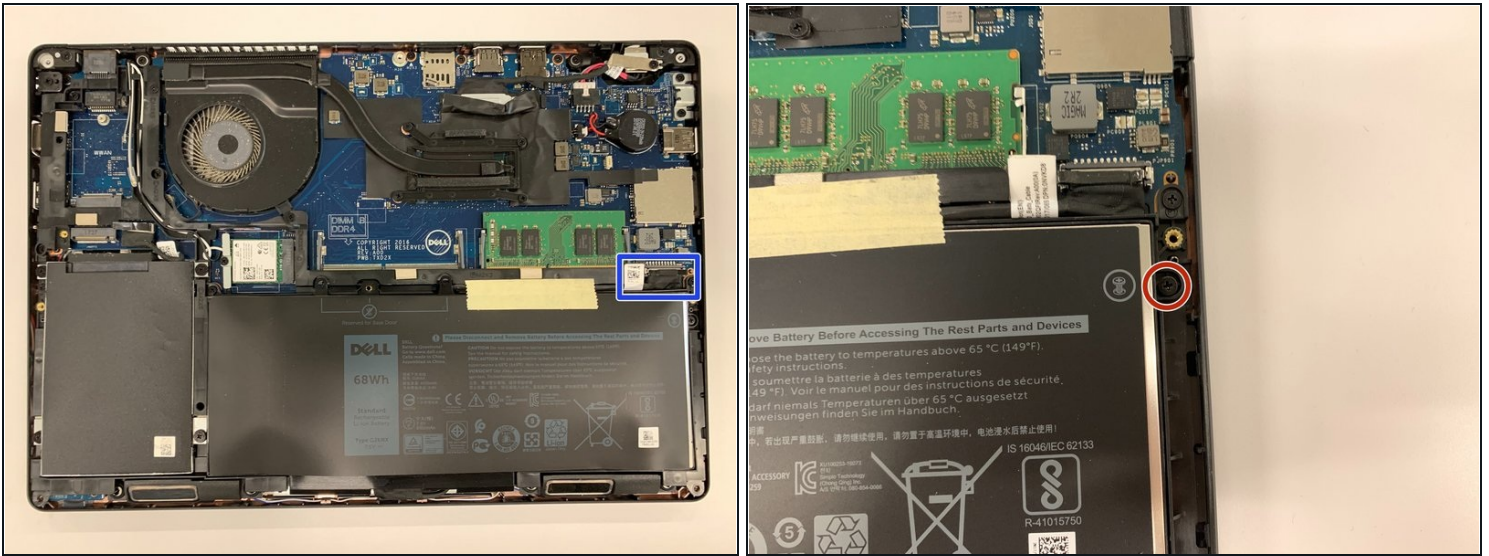

- Unplug the battery using the little plastic tab. This is marked with the blue rectangle.
- Remove the screw to the right of the battery holding the battery frame in. There is only one on this model of laptop. It is marked by the red circle in picture two.

Step 3 — Reassembly



- Remove the screw located at the top right corner of the battery, then the three additional screws located along the top of the battery.
- Identify the battery connection cable, located at the top of the battery compartment.
- Release the battery connection cable from its secured position.

To reassemble your device, follow these instructions in reverse order.

