




# Samsung Notebook 7 Spin NP740U3MK01US

## Touch Screen Replacement

How to replace the touch screen of the Samsung Notebook 7 Spin NP740U3MK01US.

Written By: Luis La Torre Colondres

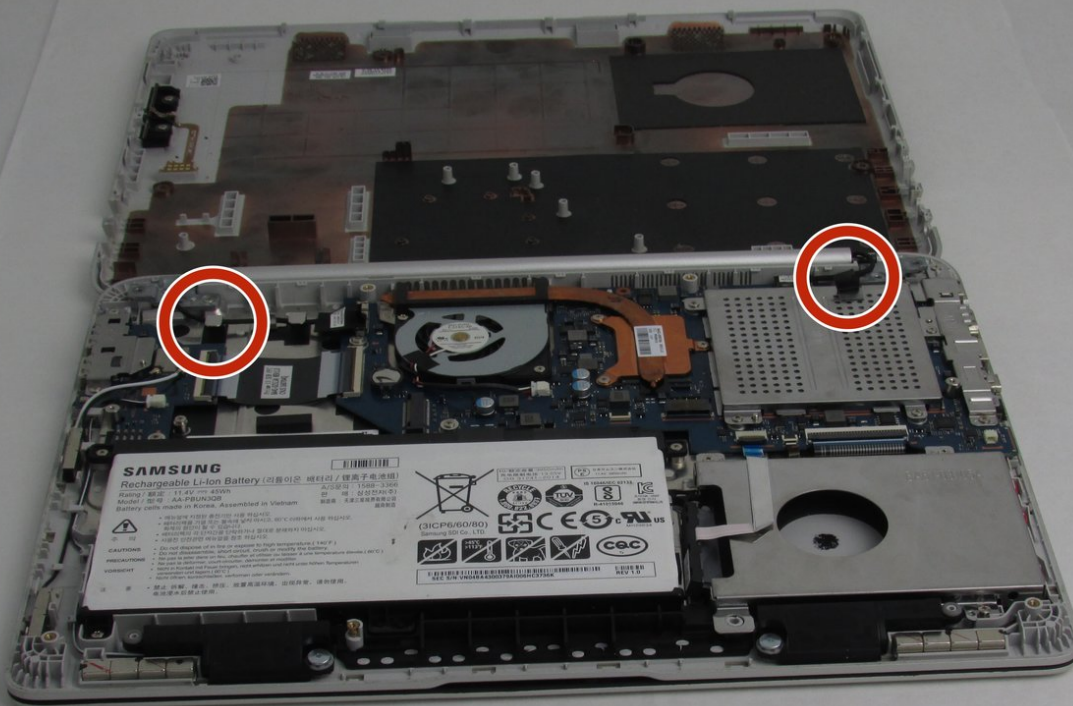

## INTRODUCTION

When your laptop is dropped from an elevated surface, there's a very good chance the screen will be damaged. You may notice that your screen is cracked or unresponsive to touch. You may also notice a few dead pixels on your screen and that the color may be a little off.

This is a replacement guide for the touch screen of the Samsung Notebook 7 Spin. If your touch screen is unresponsive or is cracked, it needs to be replaced.

---

### TOOLS:

- [Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [iOpener](#) (1)
  - [Suction Handle](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery



- Flip your laptop over so that the back is face up.


## Step 2



- Use a Phillips #00 screwdriver to remove the four 6.5mm screws and the six 4.5mm screws that secure the back plate.





## Step 3

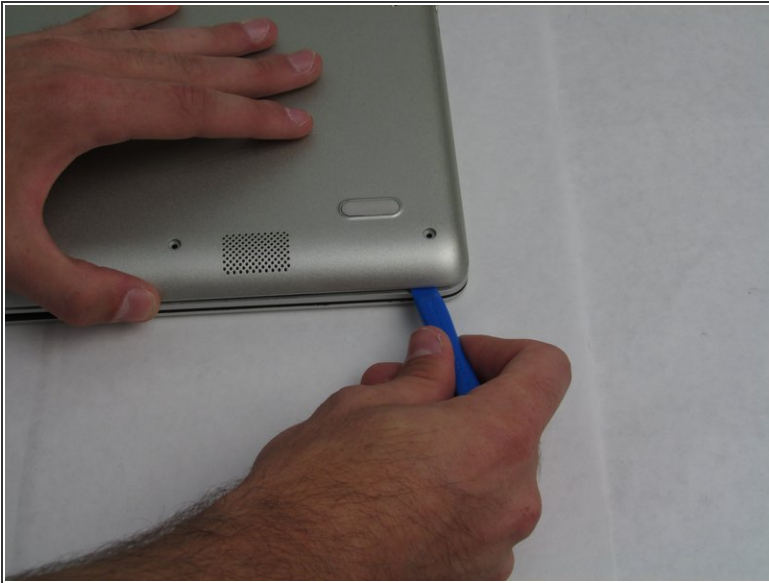


- Use a plastic opening tool to remove the back plate from the laptop.
- ❗ It is recommended that you start from a corner then run the tool along the edge of the back plate.

## Step 4

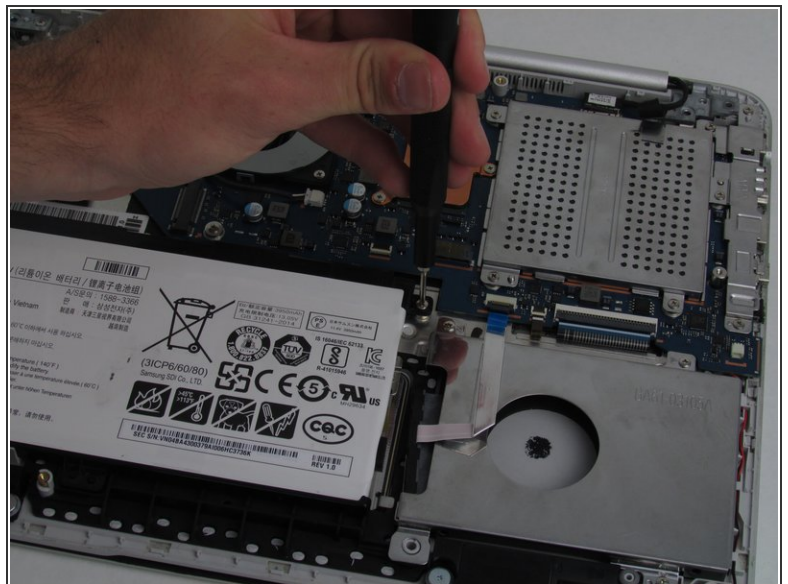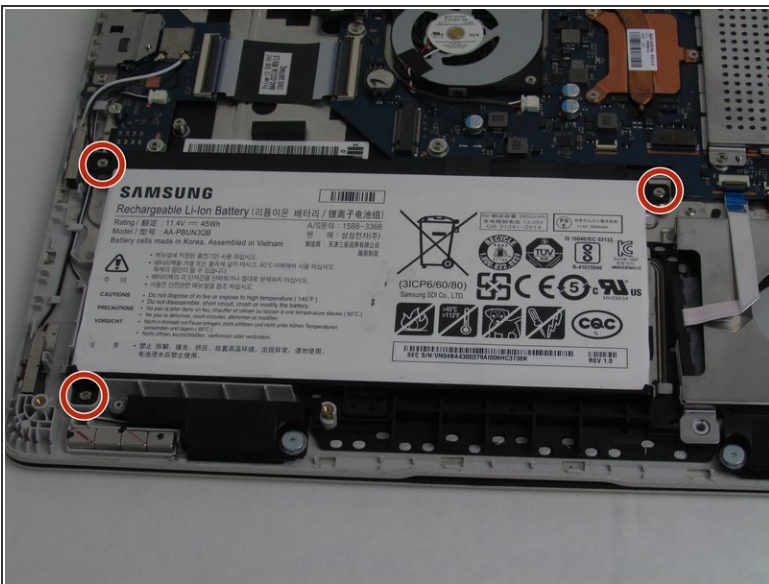



- Use a Phillips #00 screwdriver to remove the three 4.5 mm screws holding the battery in place.

## Step 5

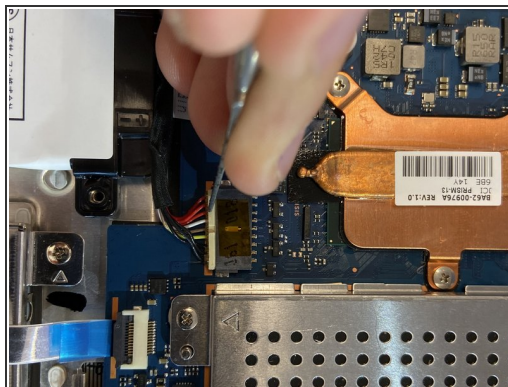

- Use a spudger to pry the battery connecting cable from the laptop and remove the battery.
- ⚠ Using the metal spudger may severely damage the internal components in your device.




## Step 6 — Touch Screen

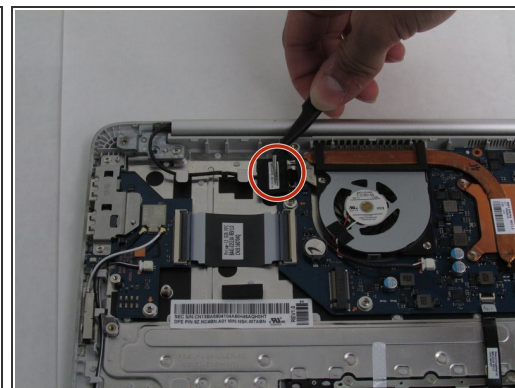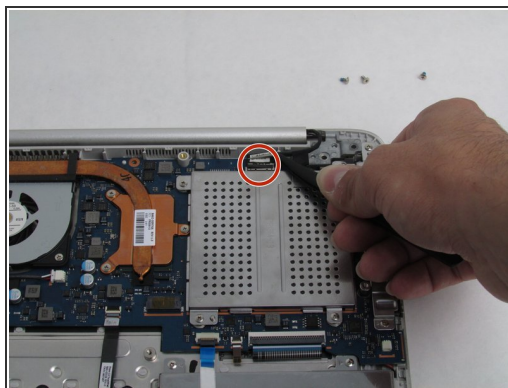

- Remove the connections for the screen using a pair of tweezers or your fingers.



## Step 7

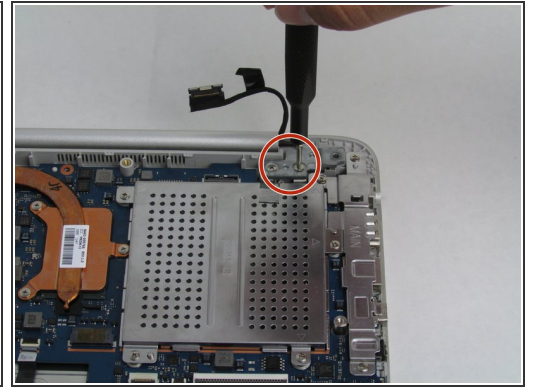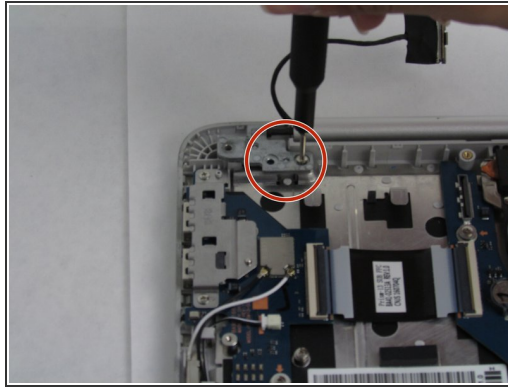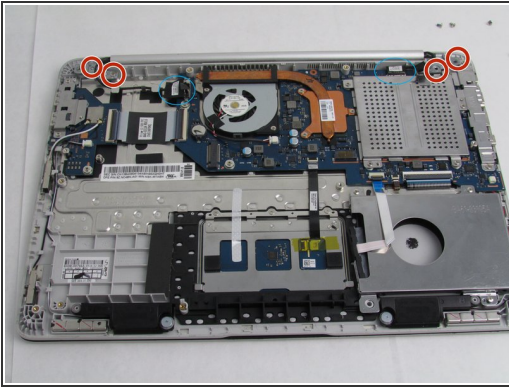


- Remove the four 4.5mm screws using a Phillips #00 screwdriver that connect the top and bottom of the computer through the hinge.

## Step 8



- Separate the top and bottom of the computer.

## Step 9

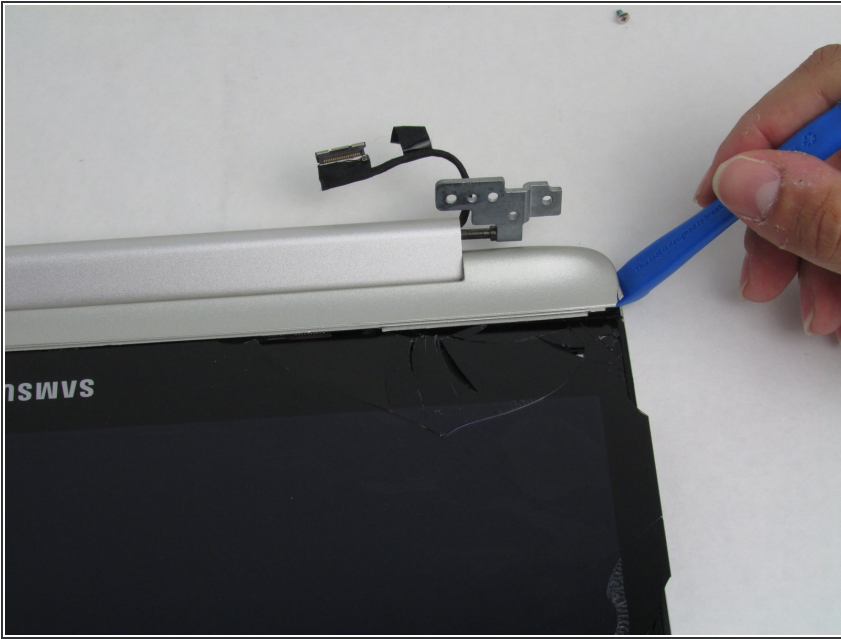

- Gently remove the screen guard on the front end using the plastic opening tool.


## Step 10



- Heat the iFixit iOpener in the microwave for 30-45 seconds and apply it to the edges of the screen to loosen the adhesive.

⚠ iOpener will be HOT. Exercise caution.

## Step 11

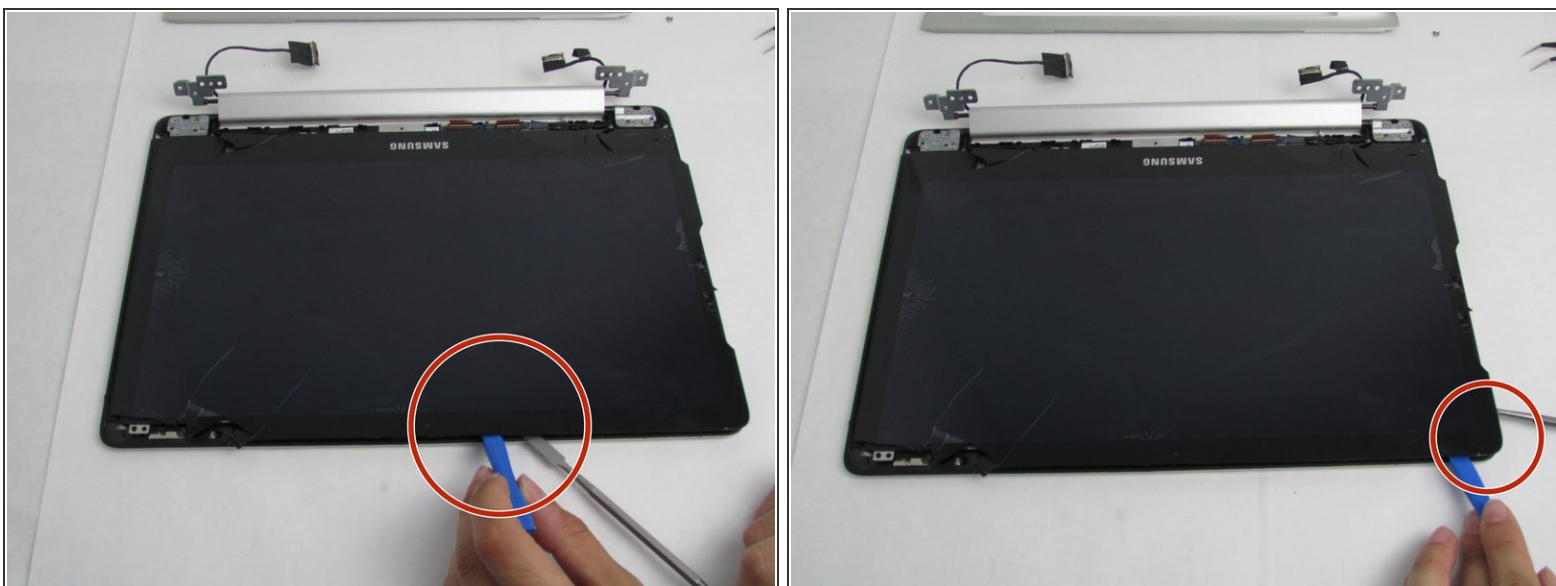


- Once enough heat has been applied, use the plastic opening tool and the metal spudger to separate the screen from the backing.

⚠ Using the metal spudger may severely damage the internal components of your device. Using the metal spudger to remove any glass component is **especially** dangerous and may cause harm to the device and the user.

ⓘ The adhesive is thickest in the corners.


## Step 12

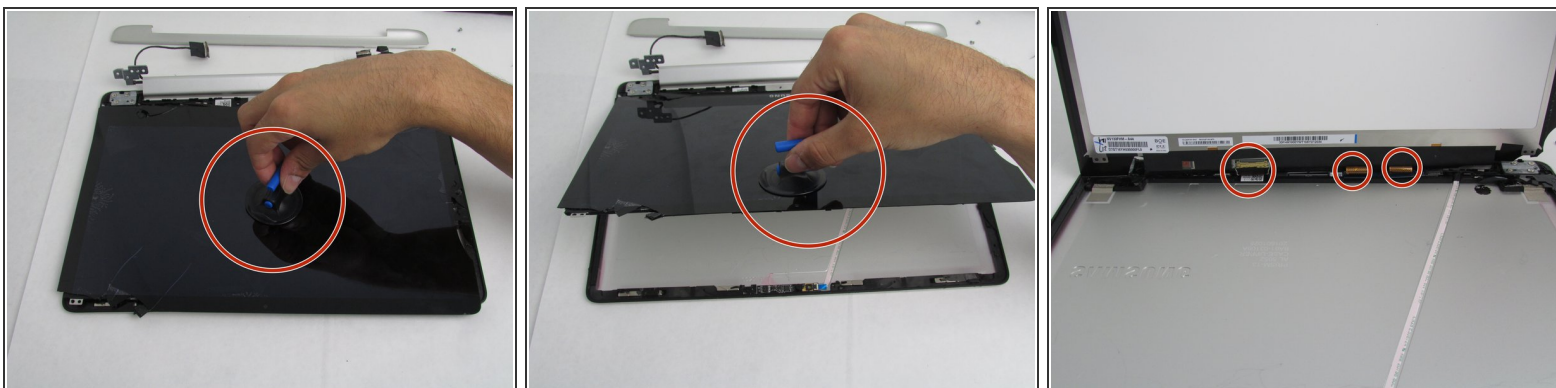

- Use the suction cup to raise the screen backing with care. **Do not** remove the screen from the device yet as there are cables connected along the bottom.




## Step 13

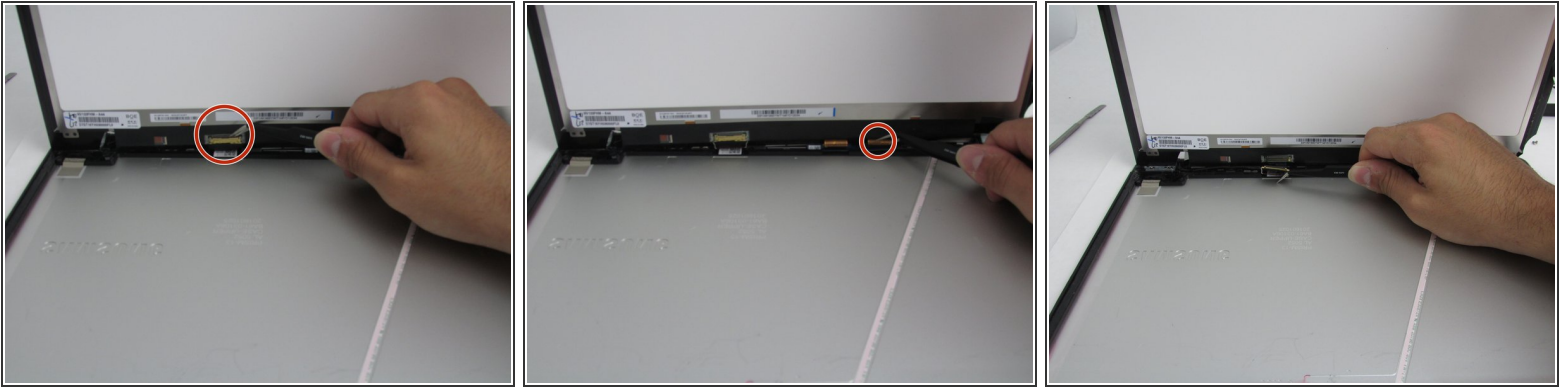

- Use tweezers to detach the cables connecting to the back of the screen.

## Step 14

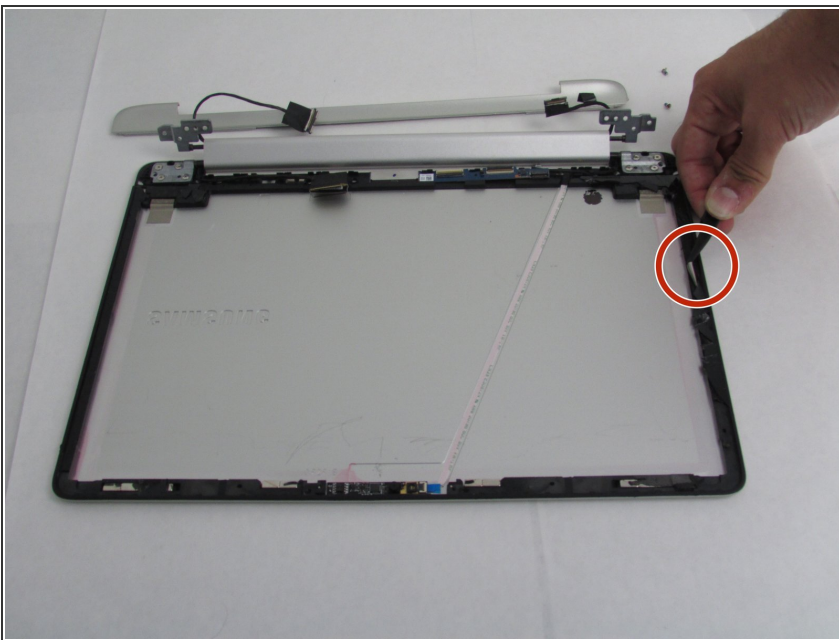

- Remove the screen and use tweezers to remove any shards of glass.

To reassemble your device, follow these instructions in reverse order.