



Written By: Roberto Apodaca



INTRODUCTION

The ASUS Q503UA-BSI5T17 is a 2-in-1 portable PC with a 15.6-inch screen. This guide is designed to help you replace the battery of an ASUS Q503UA-BSI5T17 laptop. A battery that is in need of replacement may result in the laptop not holding a charge as long as it used to, or no longer having the capability of being charged. These are two of the symptoms that would suggest you to replace your ASUS's battery.

Be sure to power off your device prior to starting the guide.



TOOLS:


- [Magnetic Project Mat](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [iFixit Opening Picks \(Set of 6\)](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery Replacement



- Flip the computer upside down. In order to ensure that the correct side is up, you should be able to read the sticker that indicates the serial number on the bottom.

Step 2

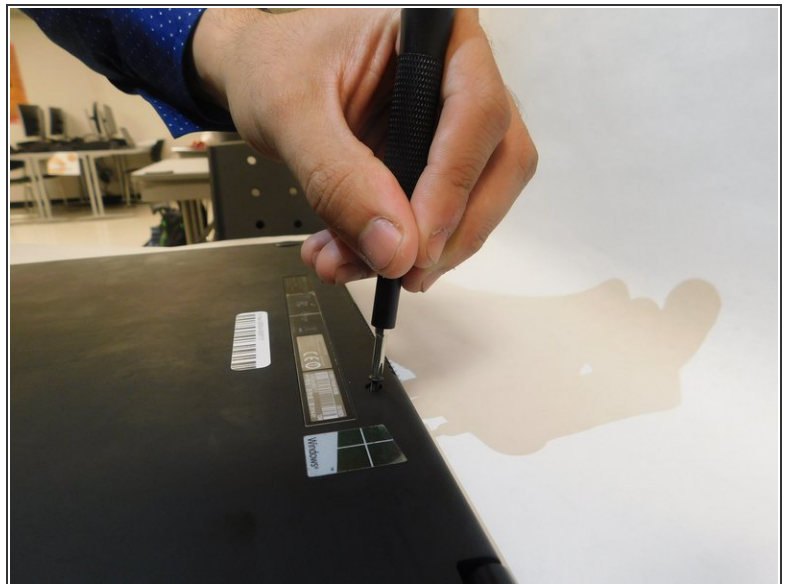


- Remove the ten circled screws along the perimeter of the laptop with a Phillips #0 screwdriver.

Step 3



- Starting from the top right corner, use a plastic prying tool to separate the cover from the laptop. Use light pressure to prevent the plastic from breaking.
- ⓘ You should feel the frame coming loose. If necessary, use spacers to keep the frame from locking back into place.
- Repeat the above step around the laptop until you are able to lift the cover.


Step 4 — Battery

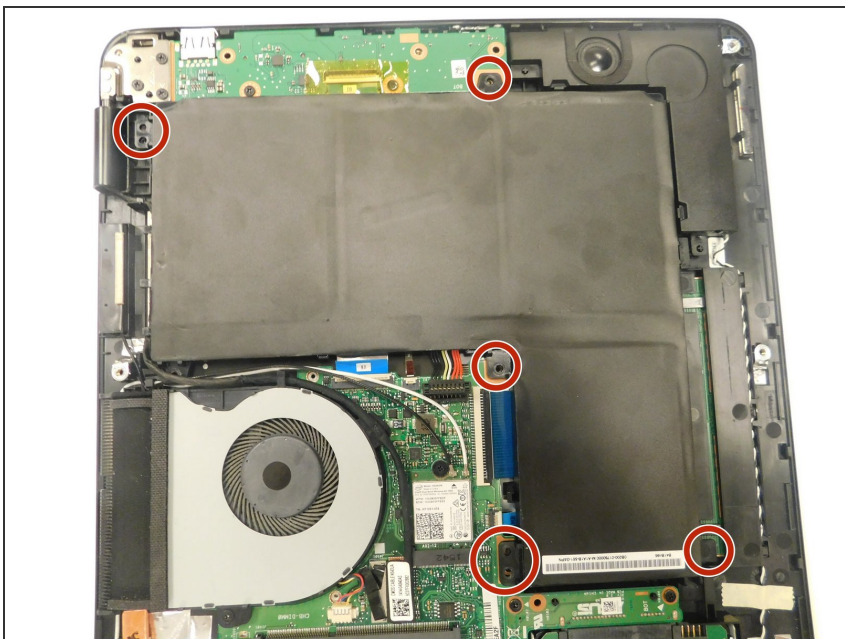

- Remove the five screws holding the battery in place using a Phillips #0 screwdriver.

⚠ Screw locations are approximate. If you find screws to be located elsewhere, please [update this step](#) with their correct locations.

Step 5

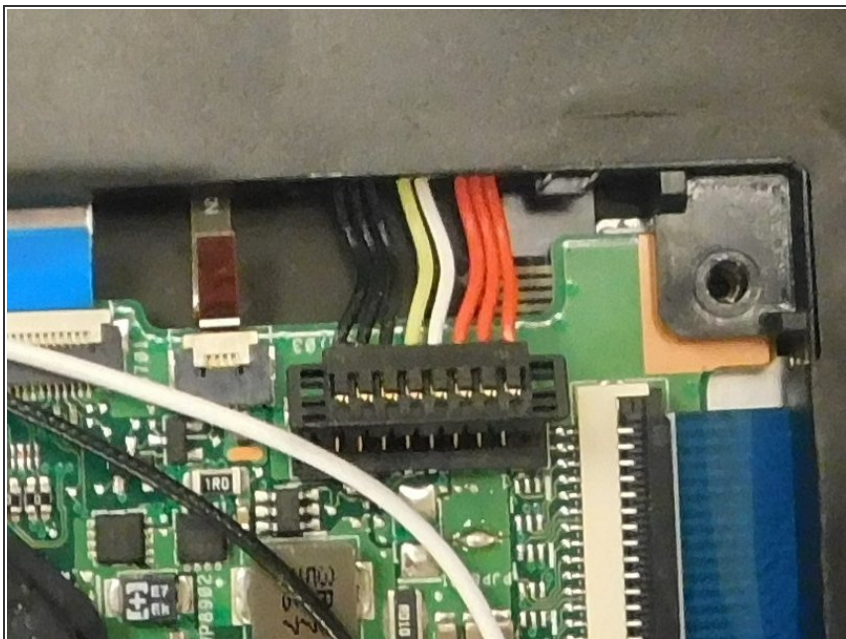

- Disconnect the battery connection.

Step 6



- Grab and lift the battery from the top right-hand side.
- ⓘ If all screws are removed, it should come out with no struggle at all.

To reassemble your device, follow these instructions in reverse order.