



Dell Latitude E7470 RAM Replacement

This guide will show you how to remove the RAM from the Dell Latitude E7470 laptop.

Written By: Mengyu Li



INTRODUCTION

The RAM is a place gathering all the data from the laptop. The quality of a RAM determines the running speed of a computer. This guide introduced the method of RAM replacement.



TOOLS:



- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Remove the eight 4 mm screws on the back cover using a Phillips #0 screwdriver.

Step 2 — RAM

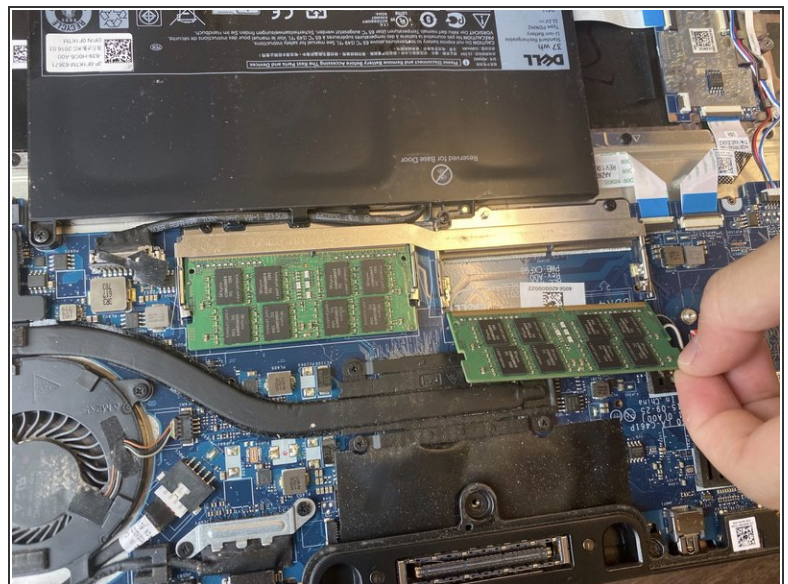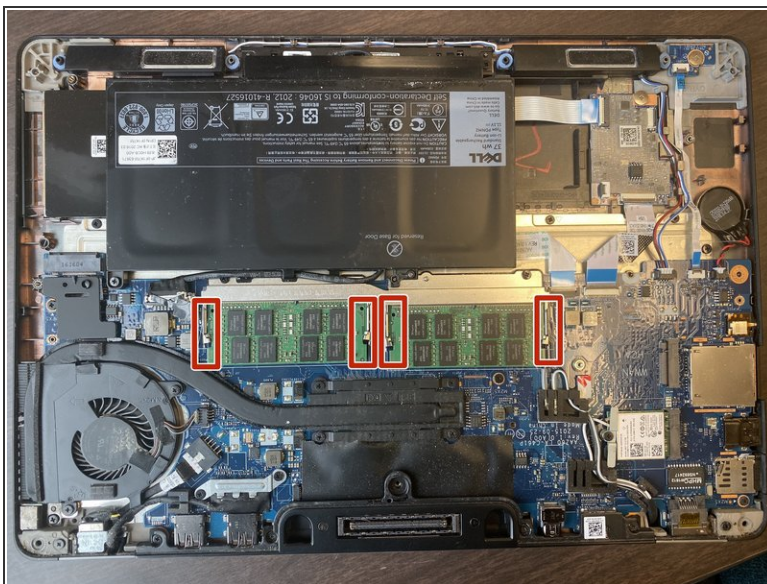

- Grab the two clips beside the RAM stick and pull them outward. The RAM stick should release.
- Remove the RAM from the device.
- Repeat this for second RAM stick

To reassemble your device, follow these instructions in reverse order.