



# HP 15-bs168cl Battery Replacement

Use this guide to remove and/or replace the battery on an HP 15-bs168cl laptop.

Written By: Ian Gascon



---

## INTRODUCTION

Here is a step by step way to remove and replace your battery for the HP 15-bs168cl. Please make sure that you have tested the battery following the instructions listed [here](#).

If your battery fails the tests and needs to be replaced, you are able to purchase a new battery and replace it following this guide.



### TOOLS:

- [Fingers](#) (1)

## Step 1 — Battery



- Unplug your laptop from its power adapter.
- Turn the laptop over.

## Step 2



- Slide the Battery lock slider to the right until you see the “Unlocked” lock symbol.

## Step 3



- Slide the Battery release slider towards the battery while pulling the battery out.

To reassemble your device, follow these instructions in reverse order.