




# Acer Chromebook Spin 15 CP315-1H-P1K8

## USB-C Port Replacement

This guide will help you successfully replace your USB-C port in the Acer Chromebook Spin 15 CP315-1H-P1K8 laptop.

Written By: Devyn Perry

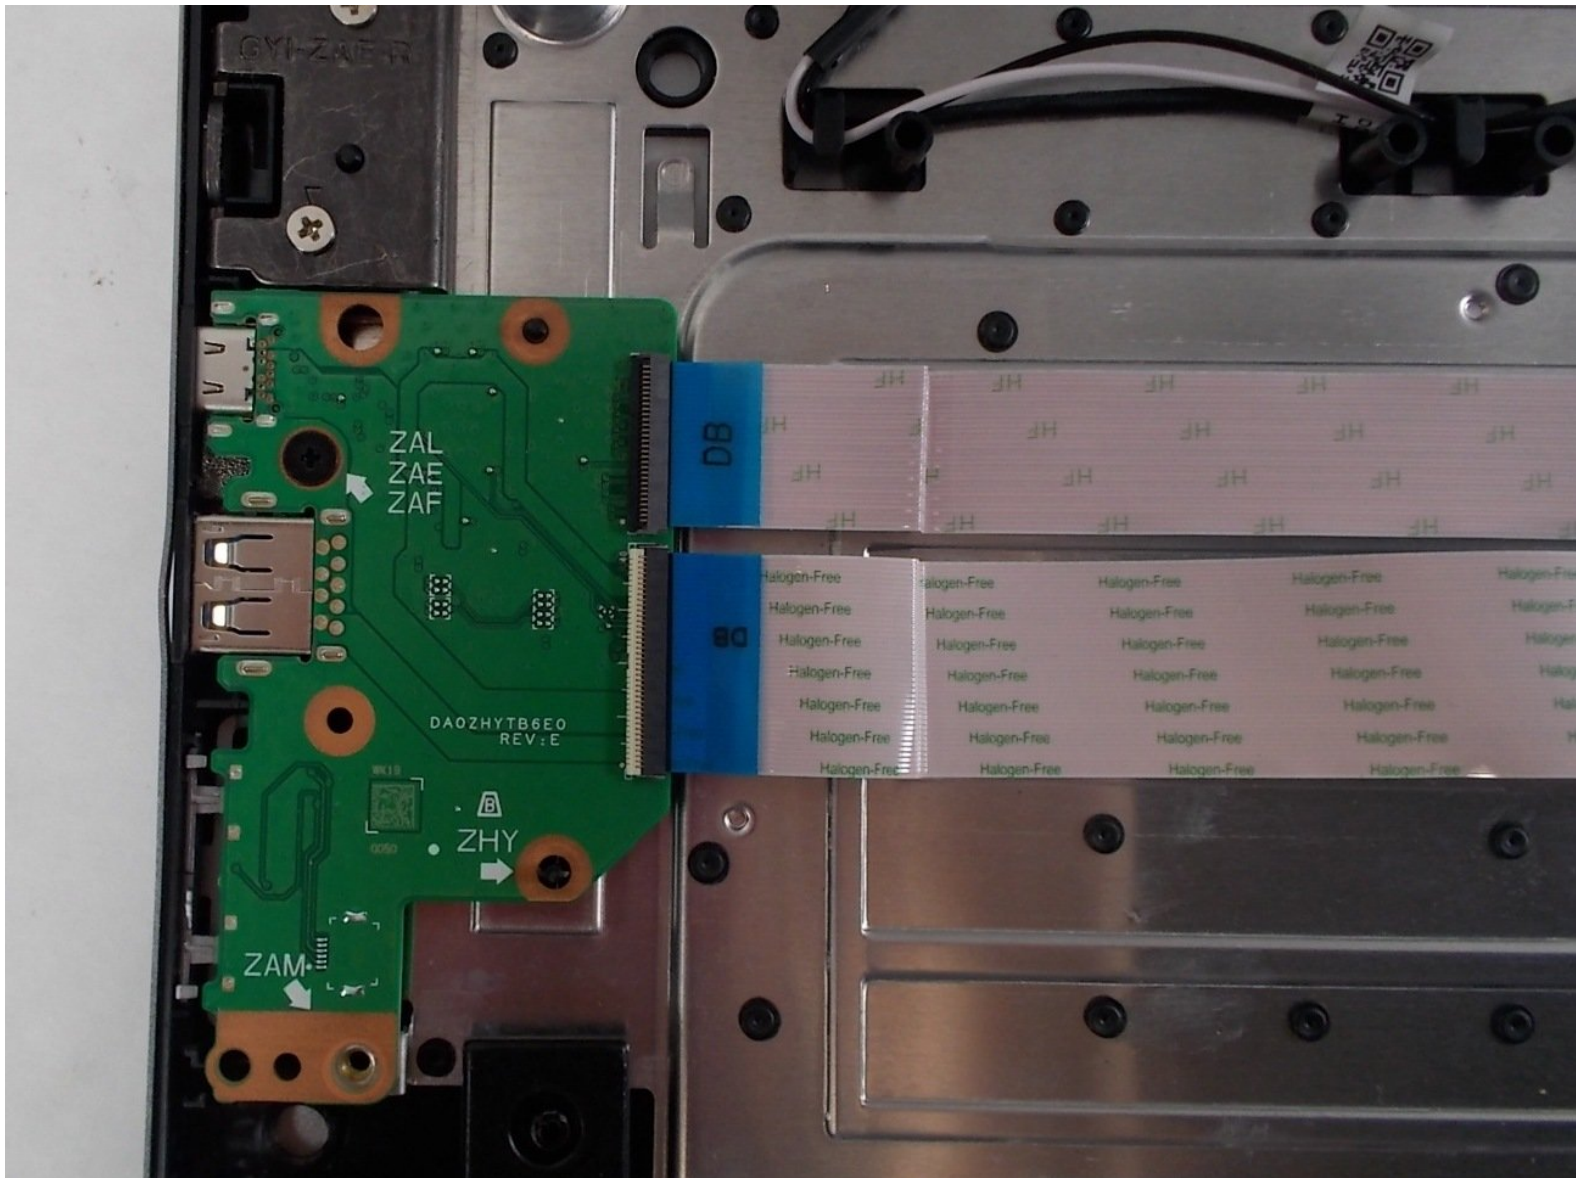

This document was generated on 2020-11-28 07:47:32 AM (MST).

## INTRODUCTION

This guide is useful for replacing the USB-C port on the Acer Chromebook Spin 15 CP315-1H-P1K8. If the USB-C port has received any damage or if you have troubleshot for problems already then follow this guide for replacement of the USB-C port. Be careful to not strip the screws on the USB-C port, as this will make it hard to take the part out.



### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:

- [Acer Chromebook Spin 15 USB-C Board](#) (1)

## Step 1 — Back Cover

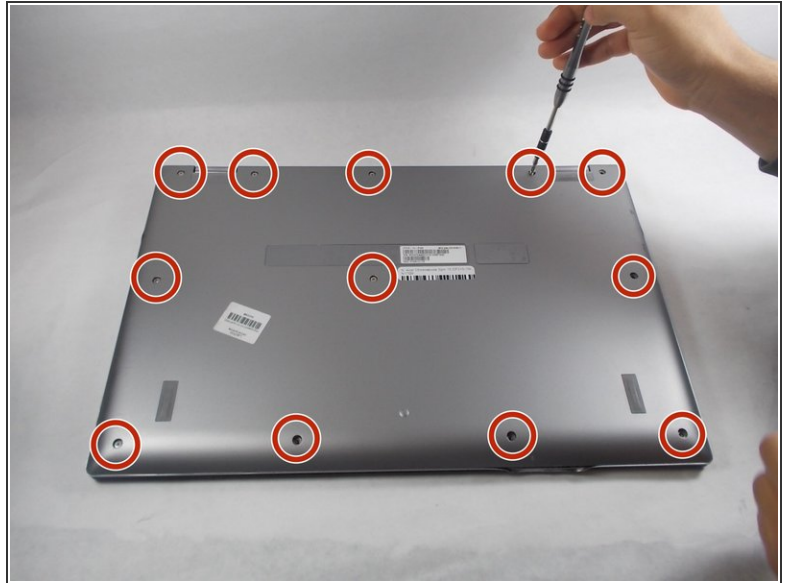

⚠ Make sure the device is fully powered off.

- Flip the computer over so that the back is facing up.
- Remove the twelve 6mm Phillips #1 screws from the bottom of the laptop.


## Step 2



- Use the iFixit opening tools as wedges to pry the back of the laptop off.

⚠ Go slow, making sure not to snap the plastic. With enough of a gap made, you can use your hand to finish taking off the back.

## Step 3 — USB-C Port

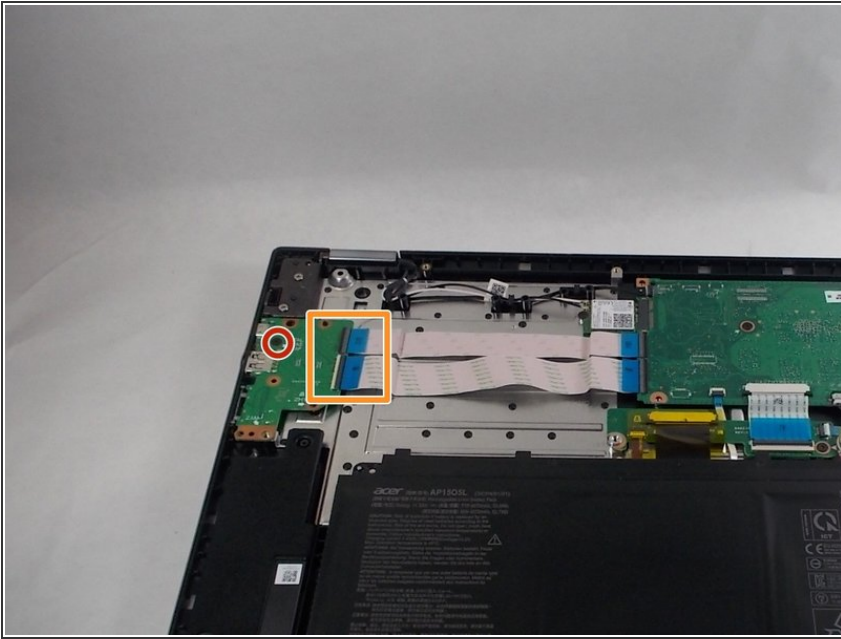

- Remove the single 3mm Phillips #1 screw from the circuit board.
- Remove the two ribbon cables from the circuit board.
- Remove the USB-C port from the laptop.

To reassemble your device, follow these instructions in reverse order.