



HP Pavilion 15-cd040wm Battery Replacement

This is a guide to demonstrate how to replace the battery of the HP Pavilion 15-cd040wm.

Written By: Joe Krawczyk



INTRODUCTION

If your battery [fails to charge](#) or doesn't hold a charge long enough to be productive anymore, you most likely have a faulty battery that requires replacement.

To access the battery, you will first need to open your HP Pavilion 15-cd040wm by disassembling its back cover.

Before beginning, make sure to power off your laptop completely and disconnect it from any external power source.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-



Step 1 — HP Pavilion 15-cd040wm Back Cover Disassembly



- The first step is to remove the four rubber non-slip pads on the bottom of the laptop to expose screws hidden underneath them. Peel off each tab with your fingers.


i If you have trouble gripping a tab, use a spudger to wedge it loose.

Step 2

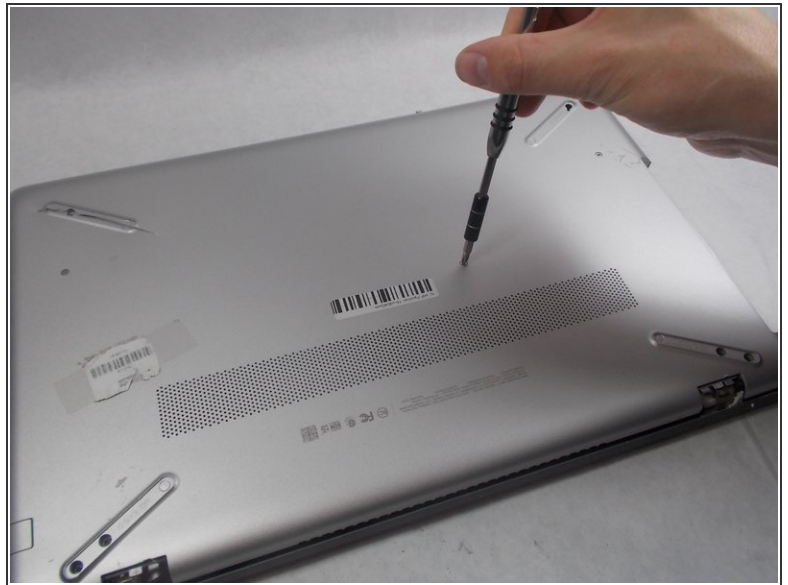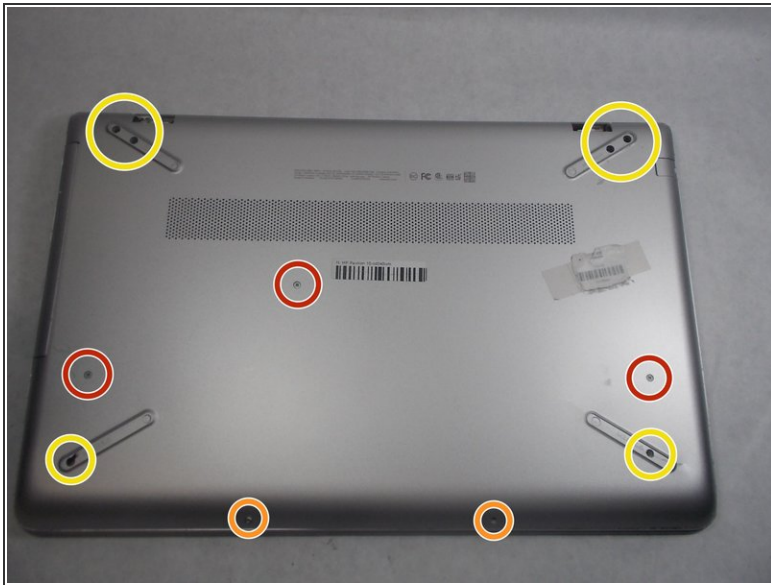


- 3x 10mm Phillips screws
- 2x 5mm Phillips screws
- 6x 6mm Phillips screws
- Remove all screws using a size Phillips #0 screwdriver.

Step 3

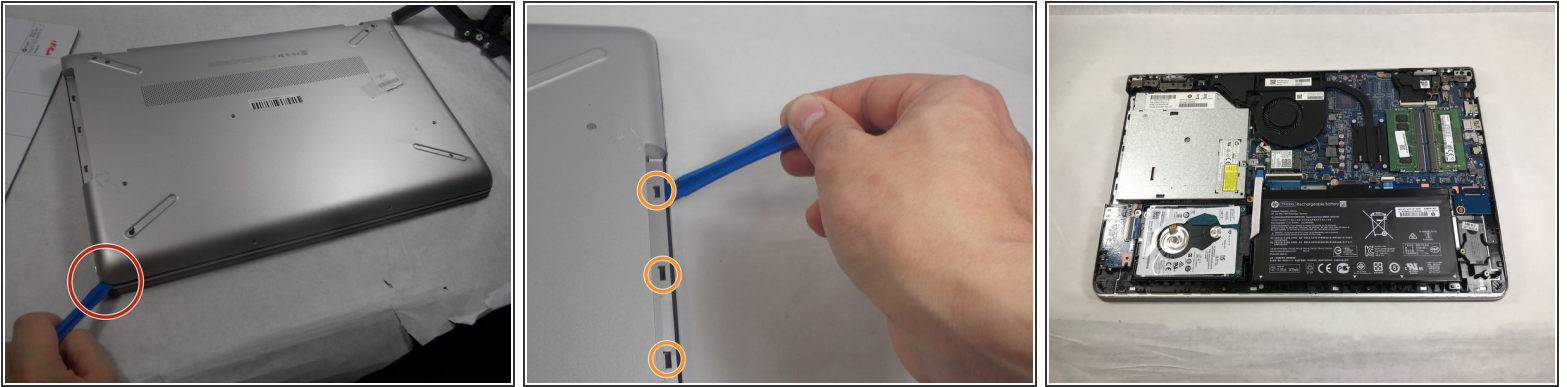

- Using the iFixit opening tool, carefully pry along the sides of the back cover.
- After all of the edges of the back cover have been freed, use your opening tool to carefully unclip the tabs holding the back cover to the CD drive.
- After everything is unclipped, you can safely remove the back cover from the rest of the device.

Step 4 — Battery

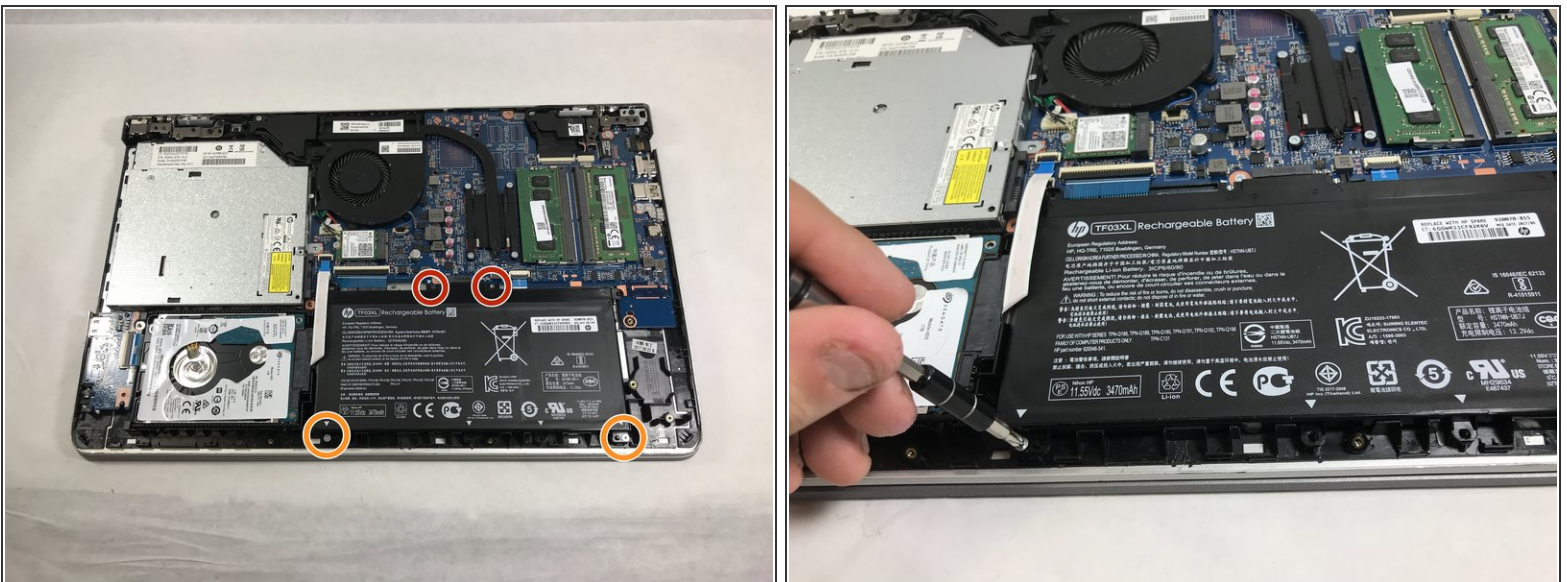

- 2x 5mm Philips screws
- 2x 3mm Philips screws
- Remove all screws using a size Phillips #0 screwdriver.

Step 5



- Gently pull up on the battery and tilt it away from the rest of the laptop chassis.
- Pull out the battery at an angle and lift it out of the laptop.

To reassemble your device, follow these instructions in reverse order.