




# Nikon Coolpix 5600 Screen Bracket Replacement

This guide is a walkthrough of removing the screen bracket on a Nikon Coolpix 5600.

Written By: Melissa

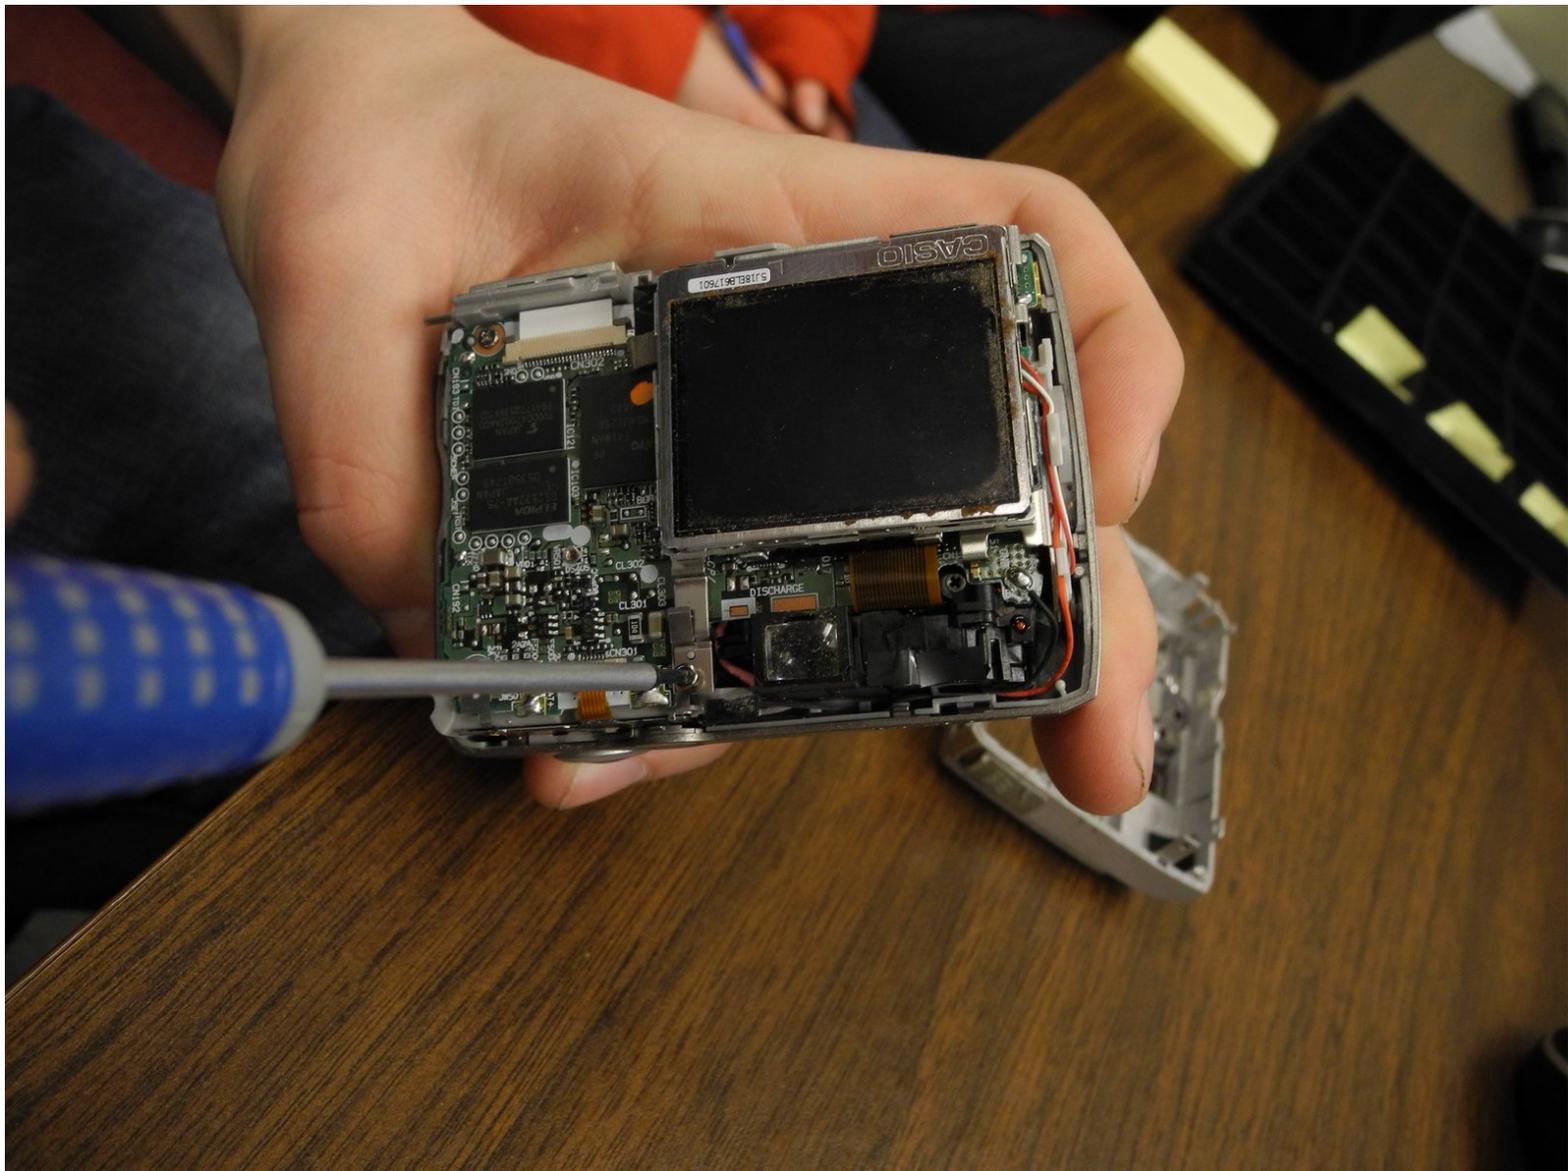

## **TOOLS:**


- [Phillips #00 Screwdriver \(1\)](#)
-

## Step 1 — Remove Screws




- Remove the screws from the bottom, right, and left side of camera.

## Step 2 — Remove back

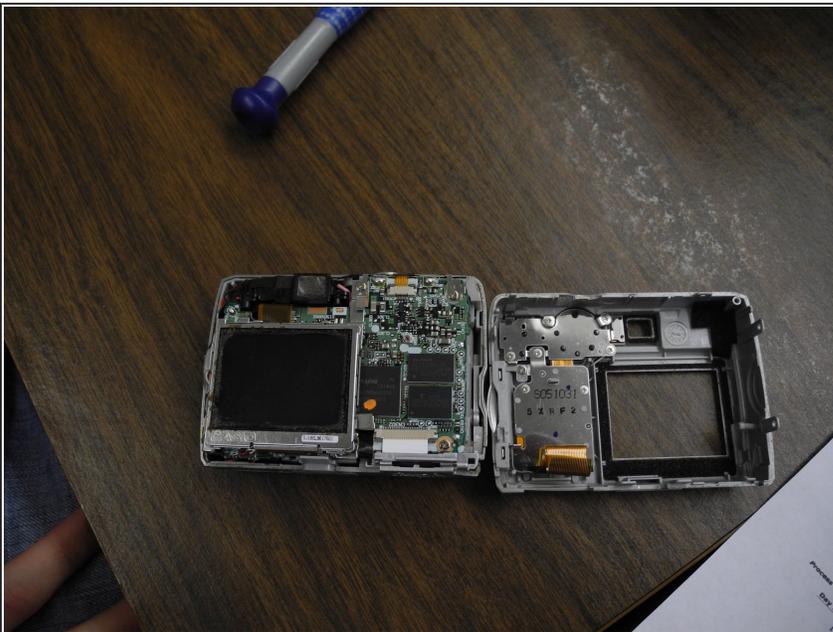

- Remove the back of the camera, this may require force.

### Step 3 — Remove Metal Bracket

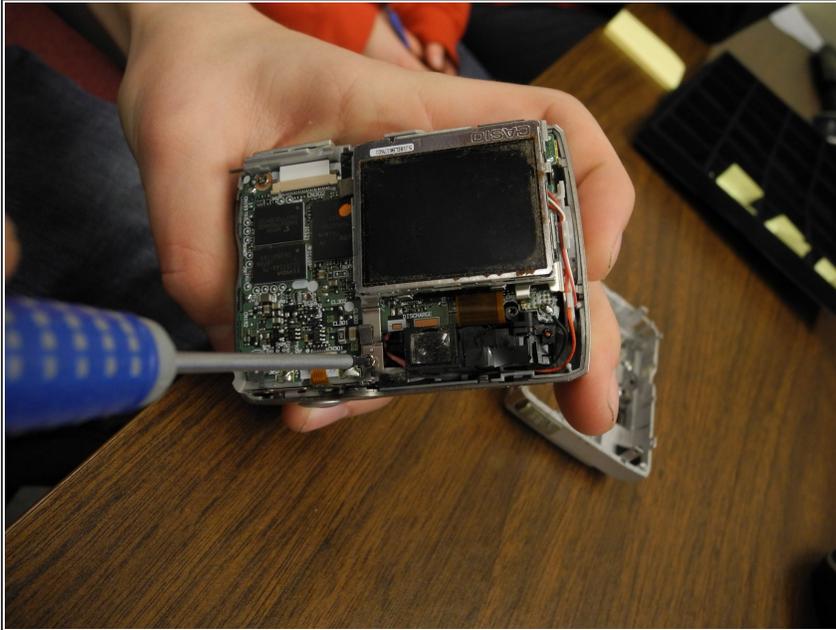

- Unscrew the right metal bracket of the viewing lens

To reassemble your device, follow these instructions in reverse order.