



# Dyson V8 Animal Bin Replacement

Use this guide to replace a dirty bin inside your Dyson V8 Animal.

Written By: AJ McLean-Scholz



## INTRODUCTION

The bin holds the debris that the vacuum collects. If your Dyson V8 Animal's bin is clogged or full, use this guide to clear the debris. A [clogged or full bin](#) will cause the vacuum to be ineffective at picking up debris and may cause the vacuum to not power on.

Before using this guide, visually inspect the bin to see if it is clogged or full. If the bin is not clogged or full and your vacuum is still experiencing problems refer to this [Dyson V8 Troubleshooting guide](#).

No special skills are required for this guide.


Before beginning, make sure to turn off the vacuum and disconnect it from any external power source.



### PARTS:

- [Dyson V7 Animal, V8 Animal, SV11 Animal Bin Service Assembly](#) (1)
-

## Step 1 — Bin

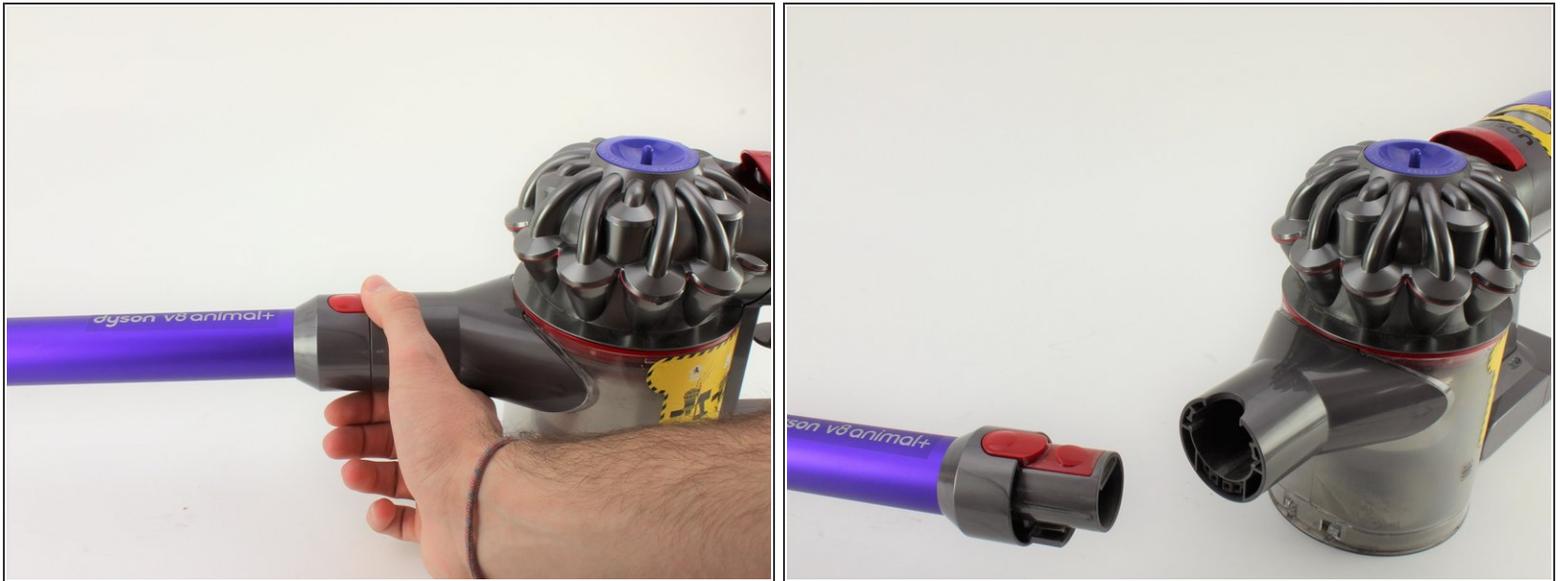

- Push the red button and slide the connecting shaft off.
- ⓘ The shaft must be held from moving when disconnecting from the motor.

## Step 2



- Pull up on the red tab and continue to slide the motor completely up.
- ⓘ The dust bin will open on the bottom.

## Step 3



- Push the red tab down.
- Pull the dust bin out from the handle head.

To reassemble your device, follow these instructions in reverse order.