




# Lenovo Yoga 910-13IKB Speakers Replacement

This guide describes how to replace the speakers for the Lenovo Yoga 910-131KB.

Written By: Connor Dilloughery

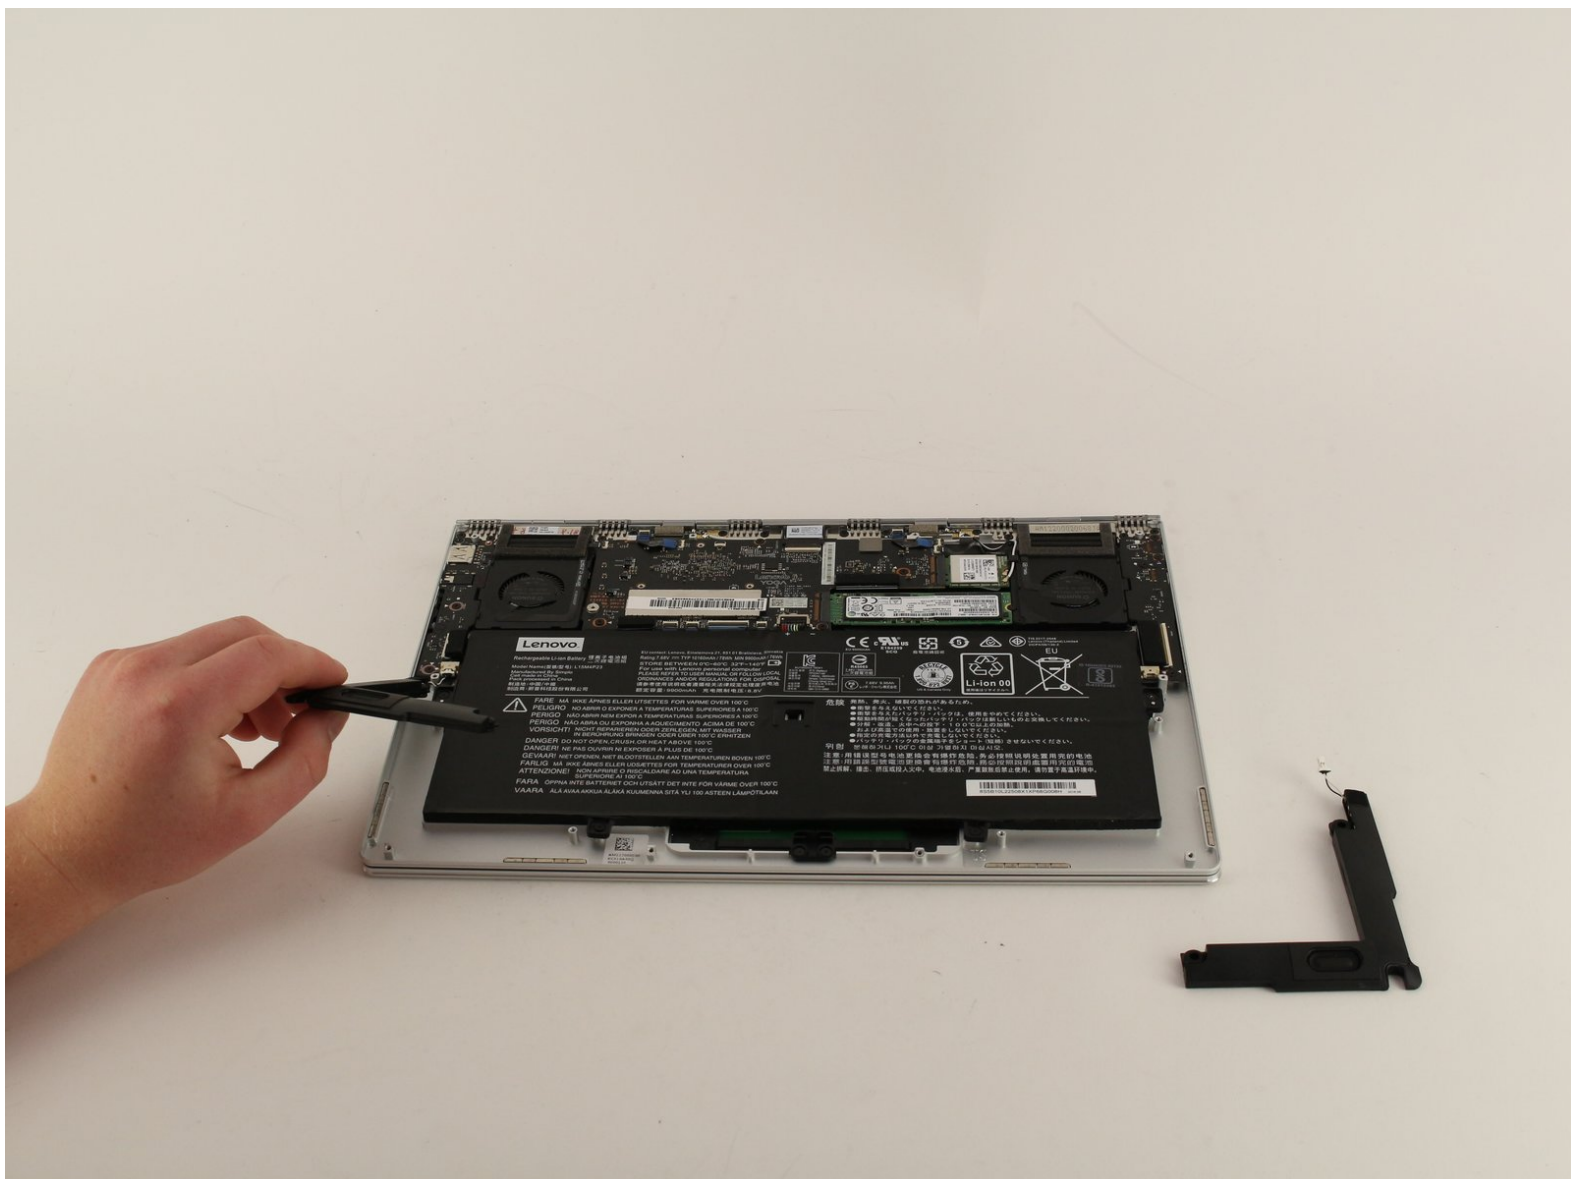

## INTRODUCTION



If your Lenovo Yoga 910-13IKB speakers sound muffled, distorted, or fail to produce any sound at all, access and replace them using this guide. This is a simple procedure, only requiring a JIS #00 screwdriver.



### TOOLS:

- [JIS #00 Screwdriver](#) (1)
-


## Step 1 — Bottom Panel

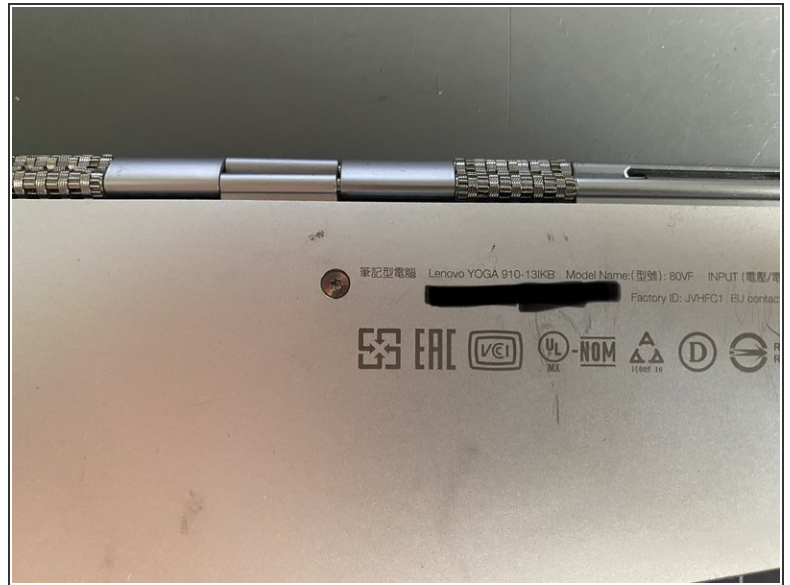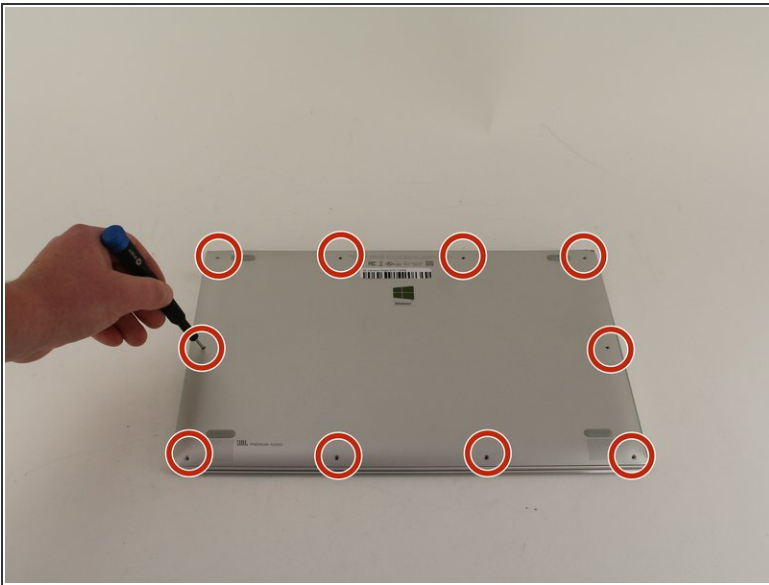

**i** Before you begin, be sure to turn off your laptop and unplug it from the outlet.

- Turn the laptop over and remove the ten Torx T5 screws along the perimeter of the bottom panel.
- Remove the panel.

## Step 2

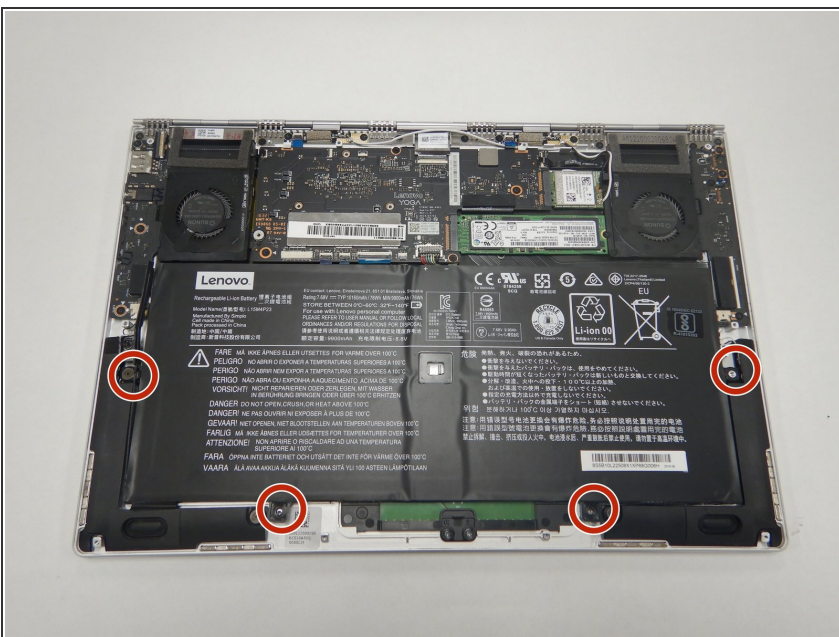


- Remove all 4 screws attached to the battery with a small Phillips head screwdriver.
- Each screw on the back is M2 x 1.7mm
- After the screws are taken out, remove the battery.

## Step 3



- Remove all 6 screws attached to the trackpad with a small Phillips head screwdriver.
- Each screw on the back is M2 x 1.7mm
- Detach the ribbon cable connected to the trackpad using a wedge device.
- Remove the trackpad using a wedge device


## Step 4

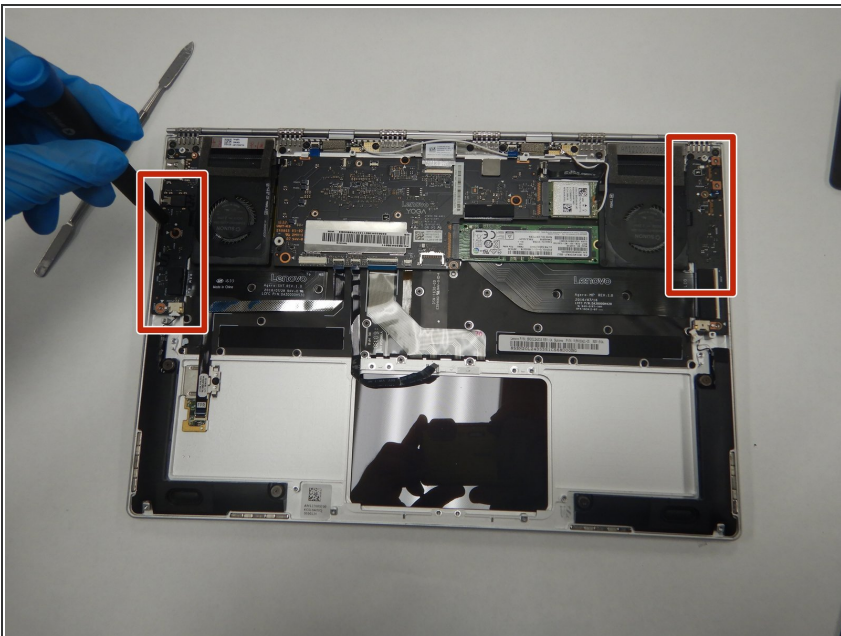

- Remove all 6 screws attached to the USB ports on both sides of the device with a small Phillips head screwdriver.
- Detach both ribbon cables attached to each USB port with a wedge device, then detach the USB ports.




## Step 5

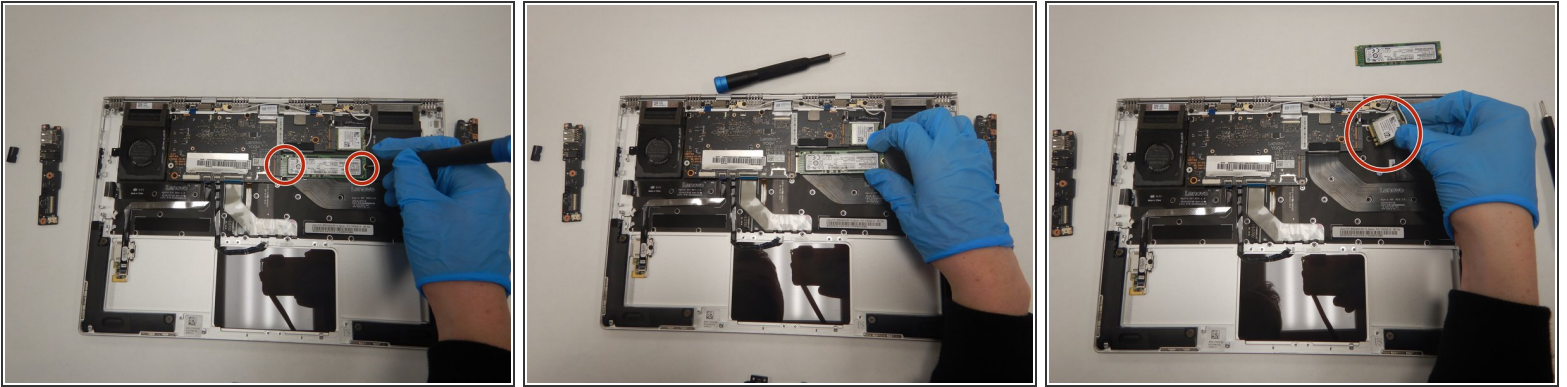



- Remove all 4 screws attached to SSD stick with a small Phillips head screwdriver.
- Pull the SSD stick directly to the right until it shifts out of place to remove it.
- The storage chip above it (further away from you) may also simply be detached by pulling it directly to the right until it clicks out.

## Step 6

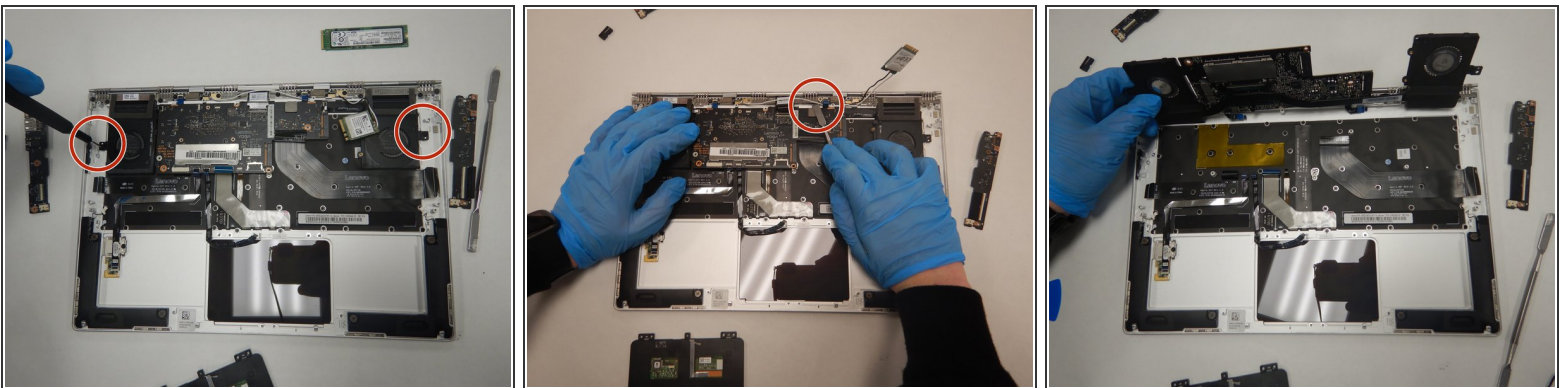



- Remove all 4 screws attached to both fans, and the back connector strip (long metal piece furthest from you with screws in it) with a small Phillips head screwdriver
- Remove the back connector strip using a wedge device to pry it off of the device
- With the back connector strip removed, pry the fans (which are attached) using a wedge device and the fans will now be maintainable.

## Step 7 — Speakers

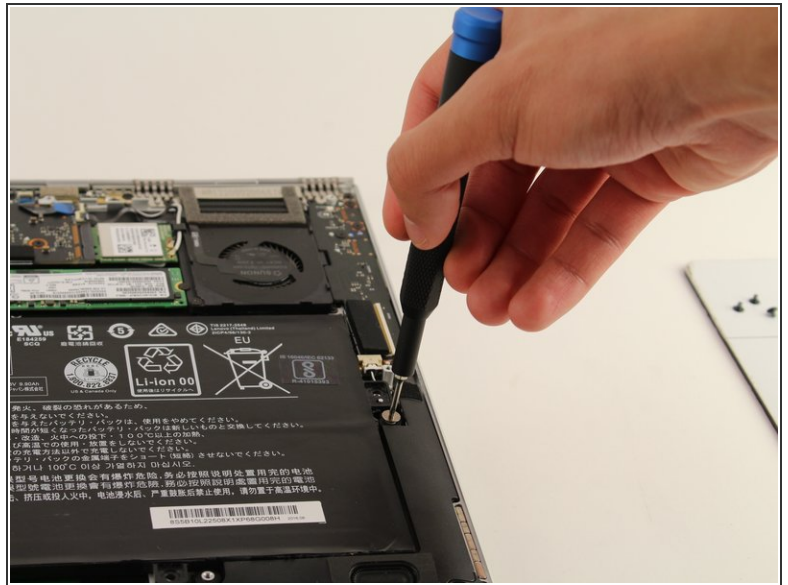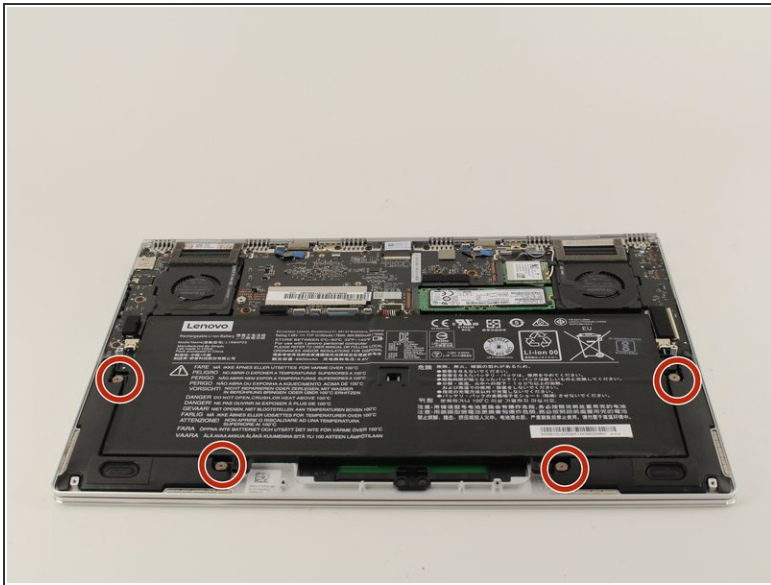



- Remove the four silver 3mm JIS #00 screws holding the speakers in place.

## Step 8

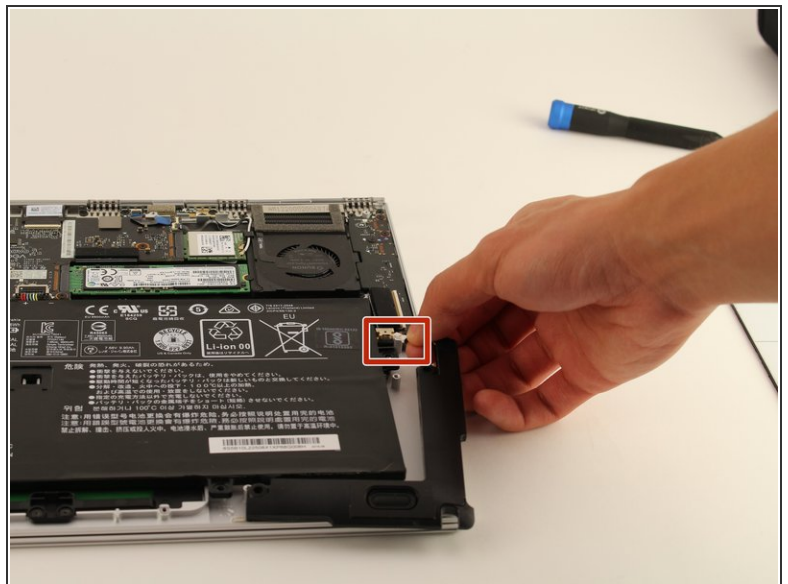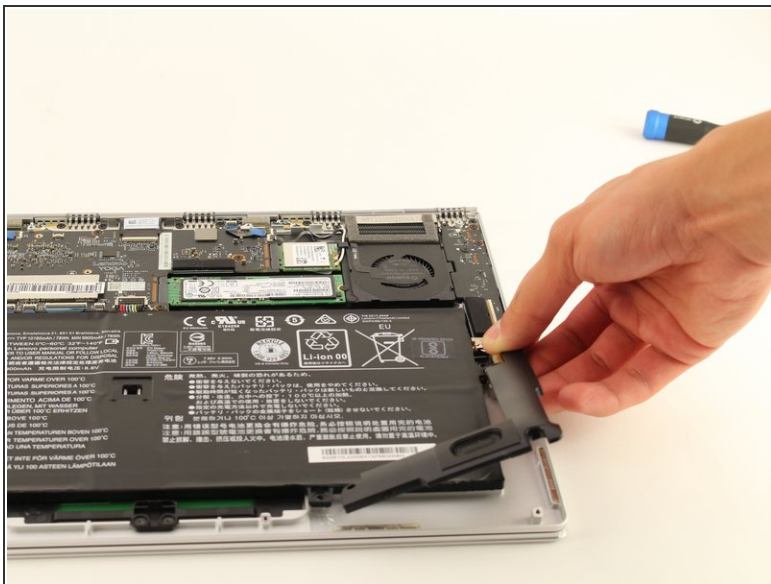

- Lift up the speaker from the corner of the device.
  - Pull gently on the bundled cable connector at the top of the speaker.
- ⚠ Pull evenly on the width of the cable so that no individual wire is overly strained.

## Step 9

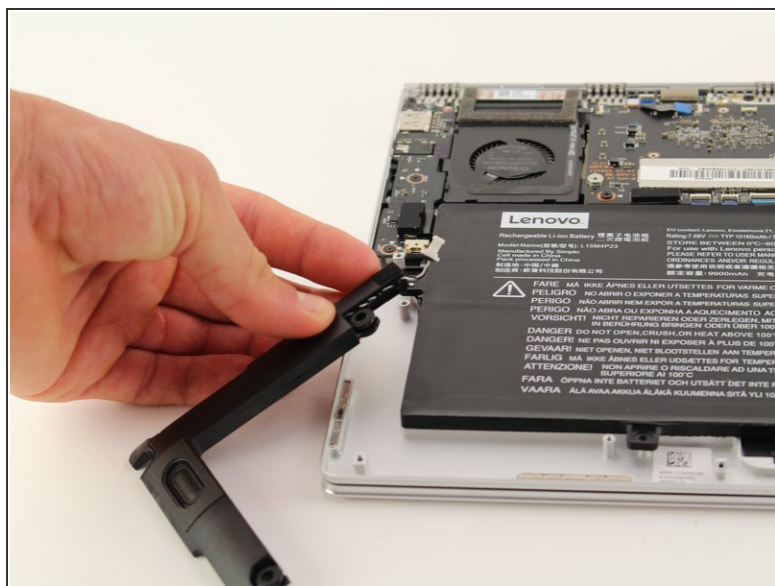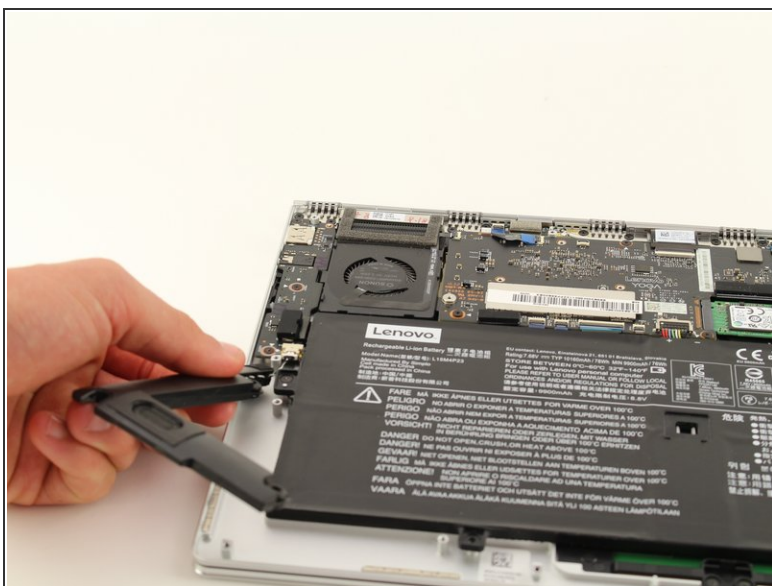

- Repeat step three for the speaker on the opposite side of the device.

To reassemble your device, follow these instructions in reverse order.