



The 2006 Chevy Silverado Key Fob Battery Replacement and Programming Guide

Instructions for key fob battery replacement and programming for a 2006 Chevy Silverado.

Written By: Tiara Bailey



INTRODUCTION

Did the key fob to your 2006 Chevy Silverado stop working? Does the battery need to be replaced? Do you have a new key fob that needs to be programmed? Either way, it is possible to successfully replace the battery to your key fob and program it all on your own. This step-by-step guide will provide a detailed description on how to complete these tasks in very little time with no hassle.



TOOLS:

- [Spudger](#) (1)



PARTS:


- [CR2032 Lithium Battery](#) (1)

Step 1 — The 2006 Chevy Silverado Key Fob Battery Replacement and Programming Guide




- Use the spudger to pry open the key fob shell by sliding it in between the front and back part of the key fob.

Step 2

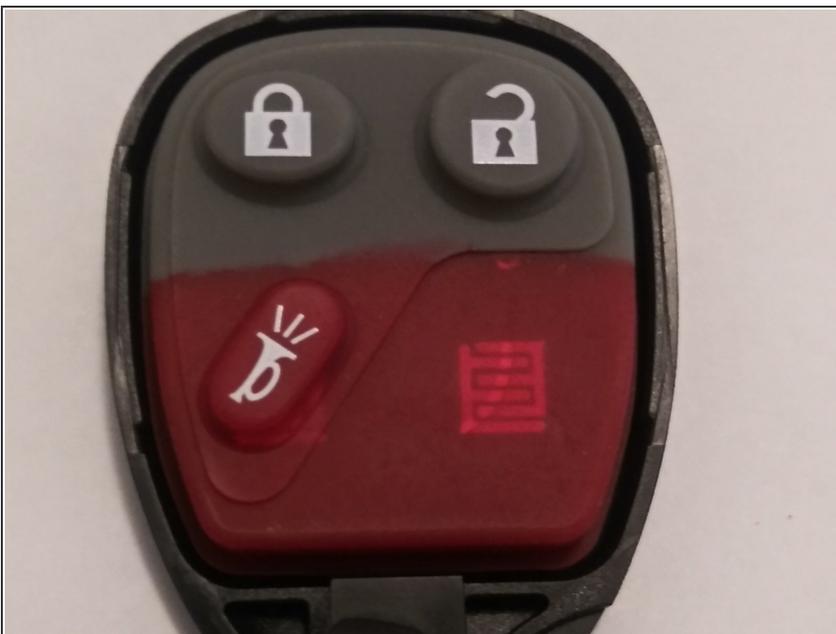


- To remove the buttons, lift the "rubber button pad" from the key fob shell.

Step 3

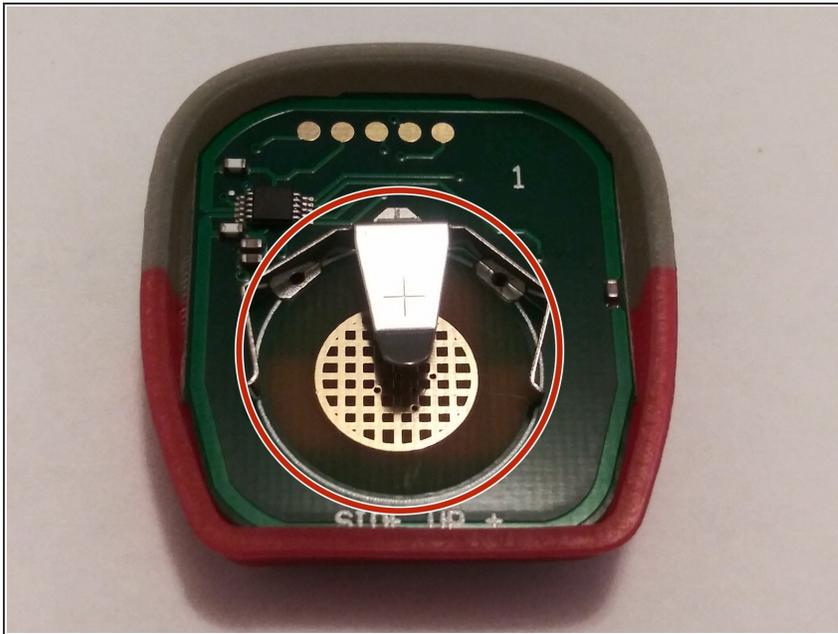

- Remove the old CR2032 battery by simply pulling it out and replace it with a new one.

Step 4

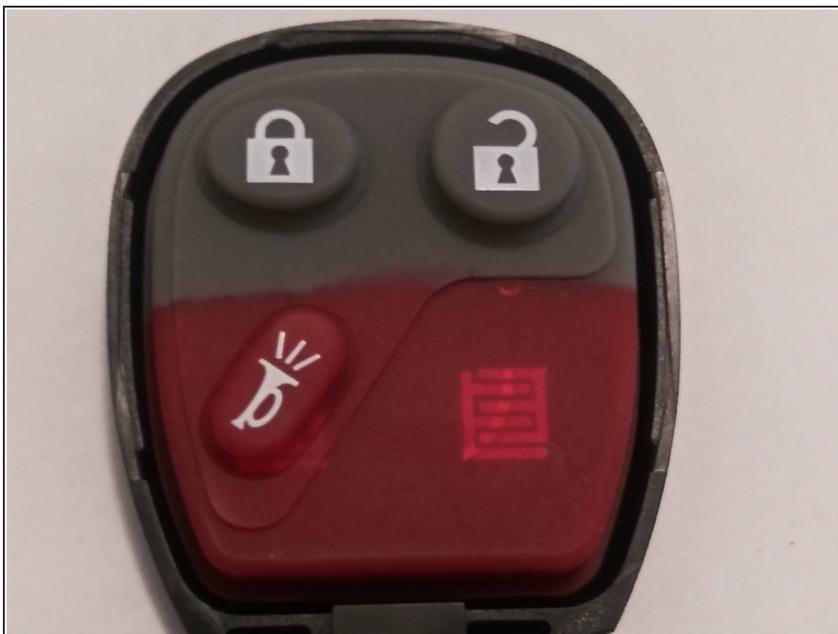

- Insert rubber button pad over the battery. Place the front end of the key fob over the buttons and press down until you hear a "click".

Step 5



- Press the vehicle lock button to ensure all doors of the vehicle are locked.

Step 6



- Insert key into the ignition.

Step 7



- Press and hold the unlock button on the driver side door. Do not release until prompted to do so in Step 10.

Step 8



- Swiftly turn the ignition **ON** and **OFF**.

Step 9



- Release the unlock button on the driver side door. You should hear the vehicle automatically lock and then unlock.

Step 10



- Press the lock and unlock buttons on the key fob simultaneously until the vehicle automatically locks and unlocks (This can take approx. 30 secs.)

Step 11



- Turn ignition on to exit programming mode.

Step 12



- Turn vehicle off and remove key.

Step 13



- Test key fob by pressing the lock/unlock buttons to ensure functionality.

To reassemble your device, follow these instructions in reverse order.