



# IBM Thinkpad T60 Battery Replacement

This guide will help you replace the battery on...

Written By: Cody Kratochvil



# INTRODUCTION

This guide will help you replace the battery on your T40 IBM ThinkPad.

## Step 1 — Battery



- Turn the computer over to see the small tab on the battery located near the top of the Thinkpad.
- Use your finger to slide the tab to the right to unlock the battery.

## Step 2



- Once the tab is in the unlocked position (far right), pull the battery outwards away from the Thinkpad.
- The battery is now disconnected.

---

To reassemble your device, follow these instructions in reverse order.