



Nikon CoolPix S5 Plastic LCD Screen Cover Replacement

This guide is to be used to install the plastic...

Written By: Josh Miller



INTRODUCTION


This guide is to be used to install the plastic LCD screen cover in the case that it becomes damaged or no longer functions properly due to overuse. A Phillips screwdriver will be needed to complete this installation.



TOOLS:


Phillips #00 Screwdriver (1)

Step 1 — Back Cover

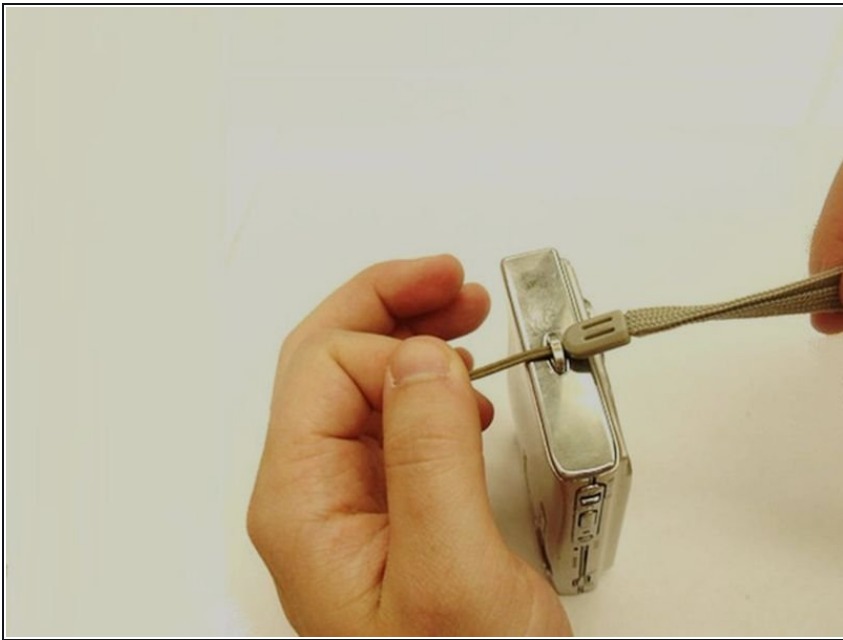


- Remove the wristlet by untying the strap.

Step 2

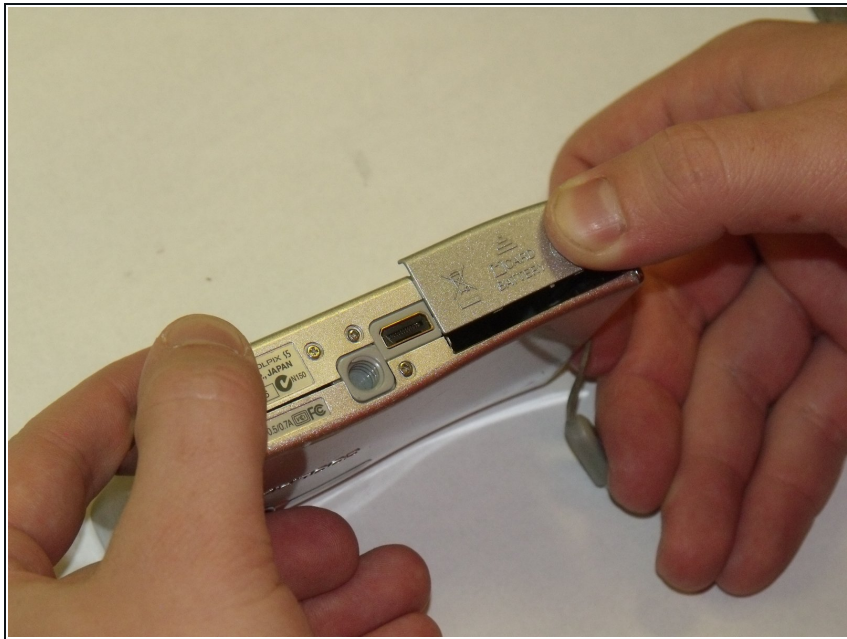


- Open the SD/Battery cover.

Step 3

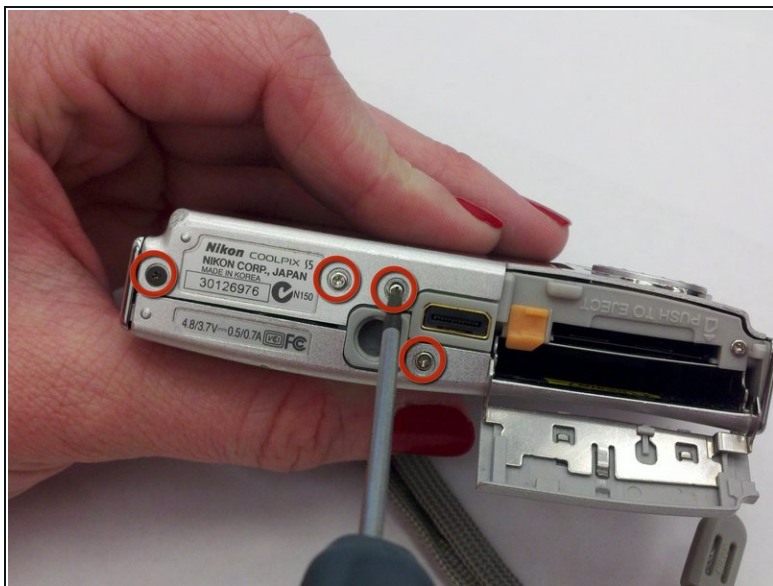

- Remove the four screws adjacent to the SD/battery opening using a Phillips #00 screwdriver.

Step 4

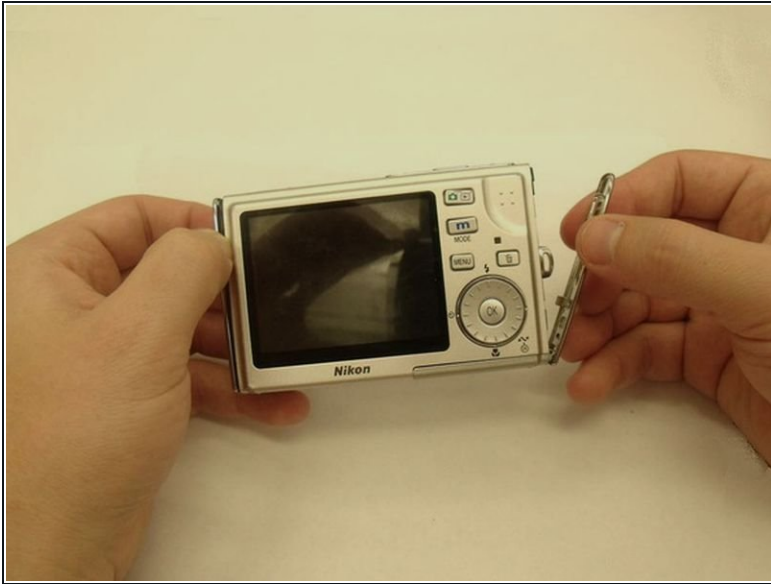



- Remove the side paneling of the camera by prying it off with your hands.

Step 5





- Start on the wristlet side of the camera and use the #00 Phillips screwdriver to remove the two screws that hold the backplate in place.
- Repeat the removal of the two screws on the other side of the camera.

Step 6

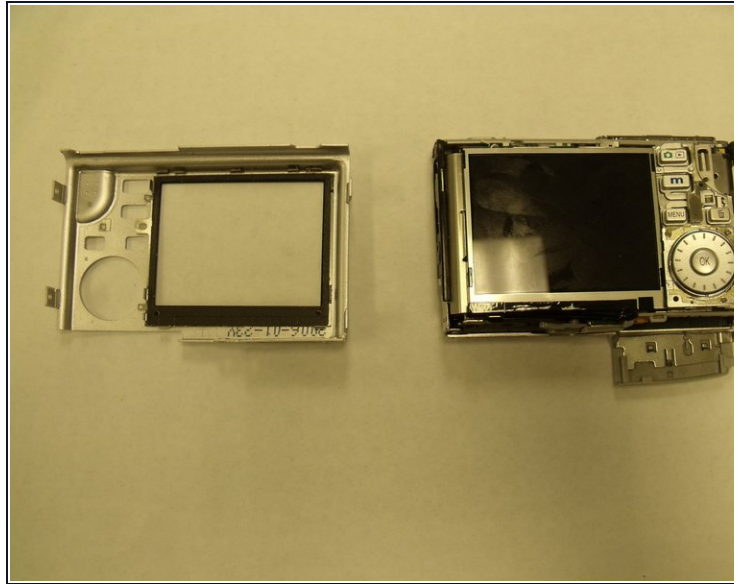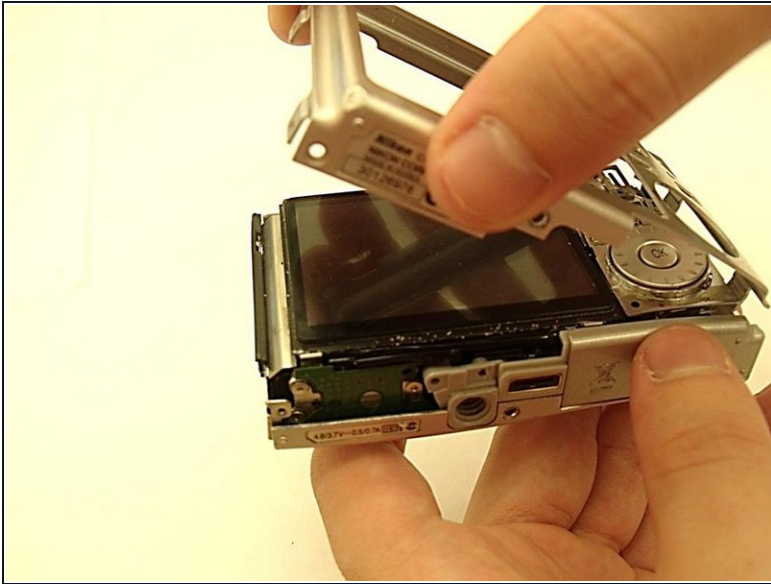

- Separate the back faceplate from the rest of the camera.

Step 7 — Plastic LCD Screen Cover

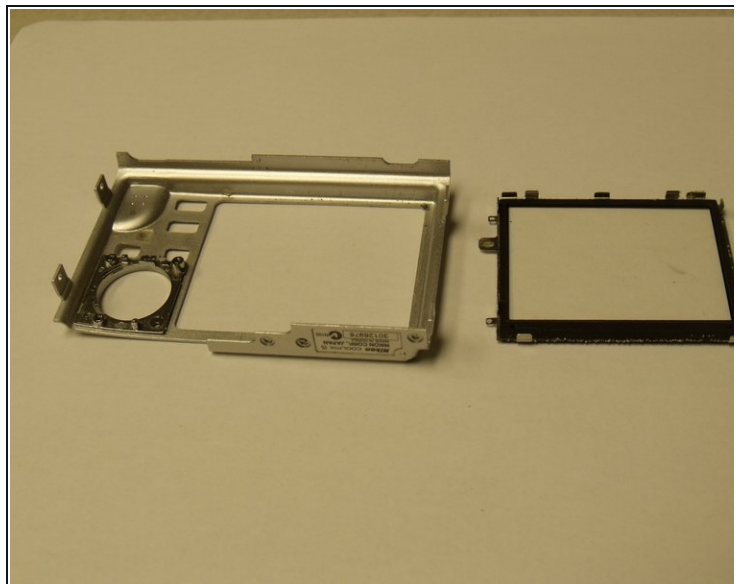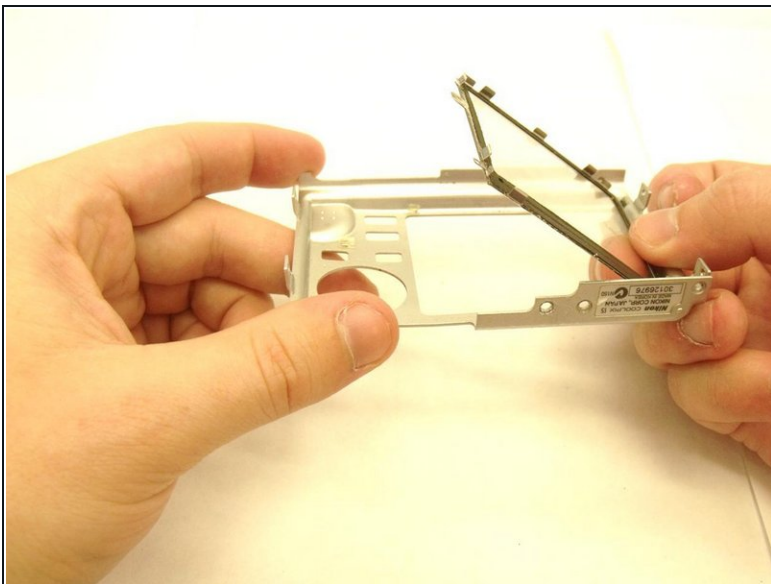

- Press lightly on the outer surface of the plastic LCD screen cover in each corner.
- The plastic LCD screen cover should pop out of the back plate.

To reassemble your device, follow these instructions in reverse order.

