

iMac 27" 2017 RAM Replacement

Use this guide to remove, replace, or upgrade...

Written By: Adam O'Camb



INTRODUCTION

Use this guide to remove, replace, or upgrade the RAM in your iMac Intel 27" Retina 5K Display.

Before beginning any work on your iMac: Unplug the computer and press and hold the power button for ten seconds to discharge the power supply's capacitors.



Spudger (1) recommended

PARTS:

iMac Intel 27" EMC 3070 (Mid 2017, 5K Display) Memory Maxxer RAM Upgrade Kit (1)

Step 1 — Open the RAM door



- While holding the display steady, use the flat end of a spudger to press in on the RAM door release button, located just above the power port.
- ② You may have to press fairly hard—keep at it until the bottom of the door pops out about 0.25" from the rear of the iMac.

Step 2 — Remove the RAM door







• Pull the RAM access door off the back of the iMac.

Step 3 — Unlock the RAM tray







- (i) The RAM tray is locked into its upright position with two grey tabs.
- Use your thumbs or index fingers to unlock the tray by pushing the tabs outward, away from the RAM.
- Pull the tabs out and down, swinging the RAM tray down to a near-horizontal position.

Step 4 — Remove the RAM







- Remove a stick of RAM by grabbing it with two hands and pulling straight out of the RAM tray.
- RAM modules are keyed so that they can only be installed in the proper orientation. Note where the shorter section of contacts is when removing, and reinstalling, your RAM.
- To install a new module, insert the module into the desired slot in the tray and press it firmly in place. Push the tray back up until it locks in place.
 - (i) The RAM access door is not symmetrical. If it is not flush on both ends, try putting it in the other way.
- Re-insert the RAM access door back into its place.

To reassemble your device, follow the above steps in reverse order.

Take your e-waste to an R2 or e-Stewards certified recycler.

Repair didn't go as planned? Check out our Answers community for troubleshooting help.