



Dell Latitude E6540 Coin Cell Battery Replacement

A guide on how to replace the coin-cell battery on this DELL computer.

Written By: Hezekiah Brown


Step 1 — Remove battery and base cover.



 Turn off the computer. Disconnect all power sources before opening the computer cover or panels.

- Remove the battery and base cover from the computer.

Step 2 — Take out the coin-cell battery

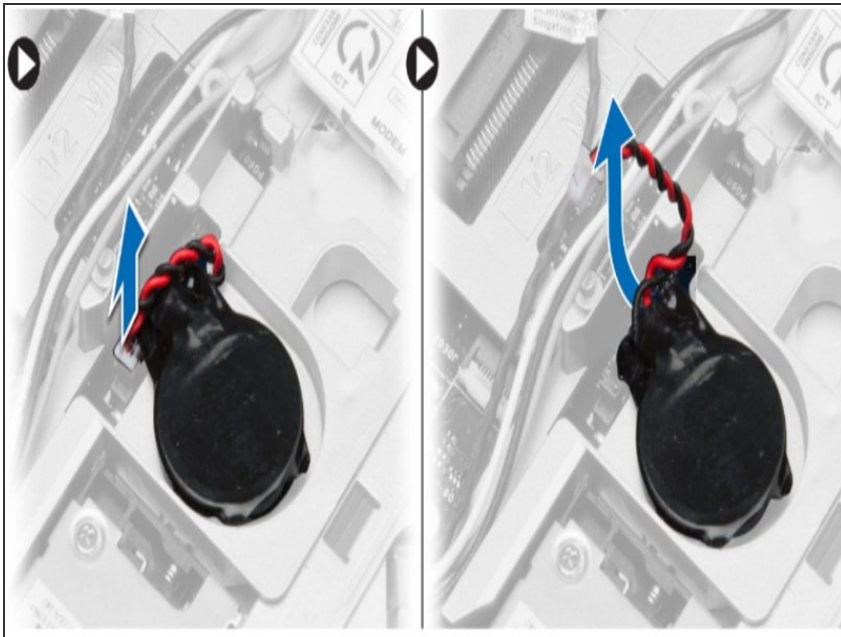

- Disconnect the coin-cell battery cable, and take out the coin-cell battery pointing up.

Step 3 — Put in the coin-cell battery



- Put the coin-cell battery inside its slot.

Step 4 — Plug in cable



- Plug in the coin-cell battery cable to the system board.

Step 5 — Put back base cover and battery



- Put the battery & base cover back on the computer.

To reassemble your device, follow these instructions in reverse order.