




Dell Latitude E6540 Base Cover and Base Cover Caps Replacement

This guide will explain how to replace the base cover and base cover caps on this DELL computer.

Written By: Hezekiah Brown

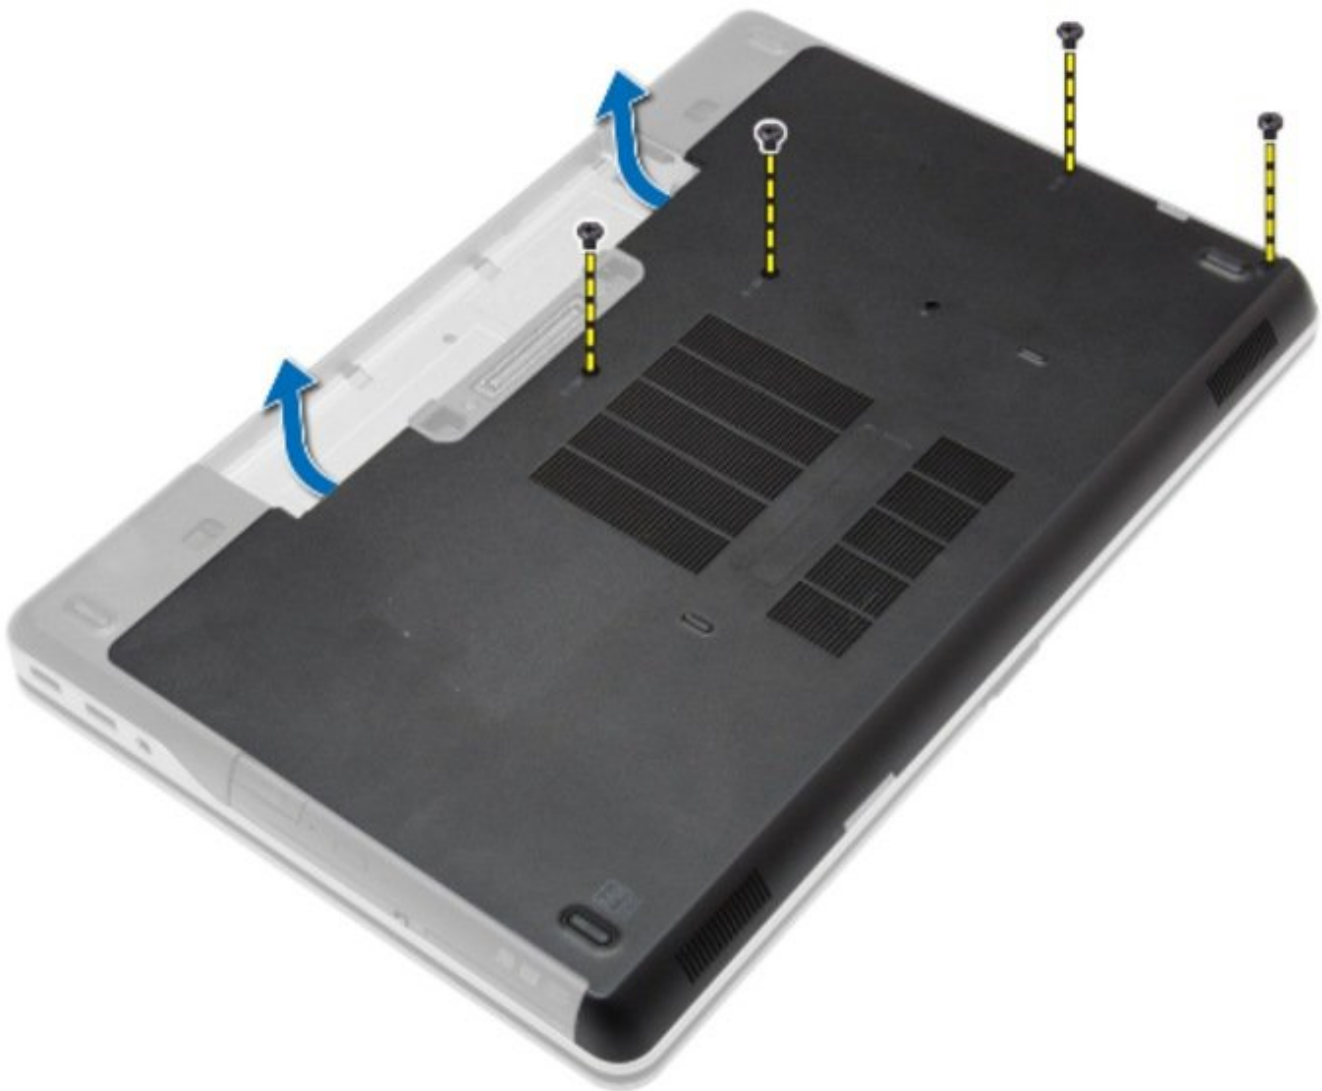




TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Remove screws

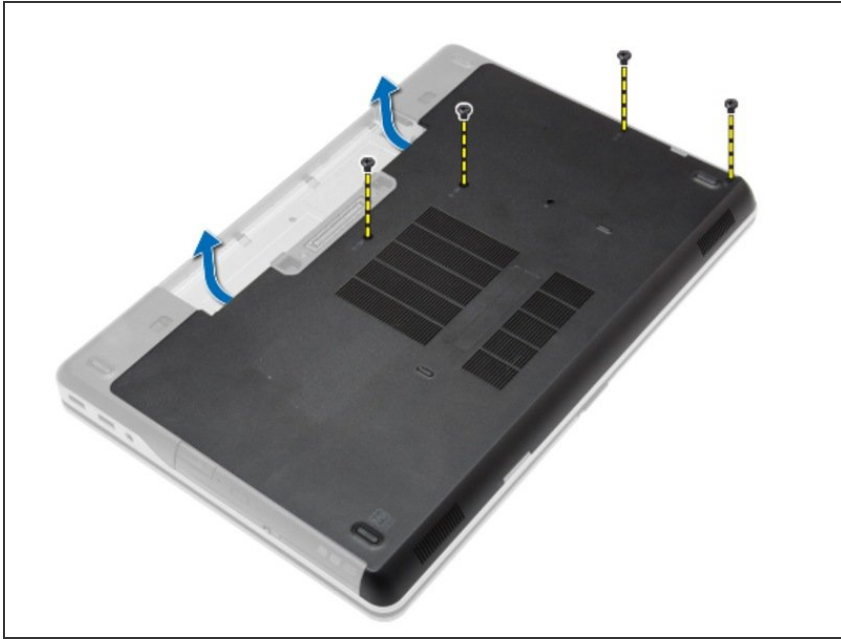

⚠ Before performing this task, make sure you turn off the computer and disconnect every external drive from it, whether it's a USB drive, power charger, or wireless adapter.

- Remove the screws that secure the base cover to the computer.

Step 2 — Remove base cover

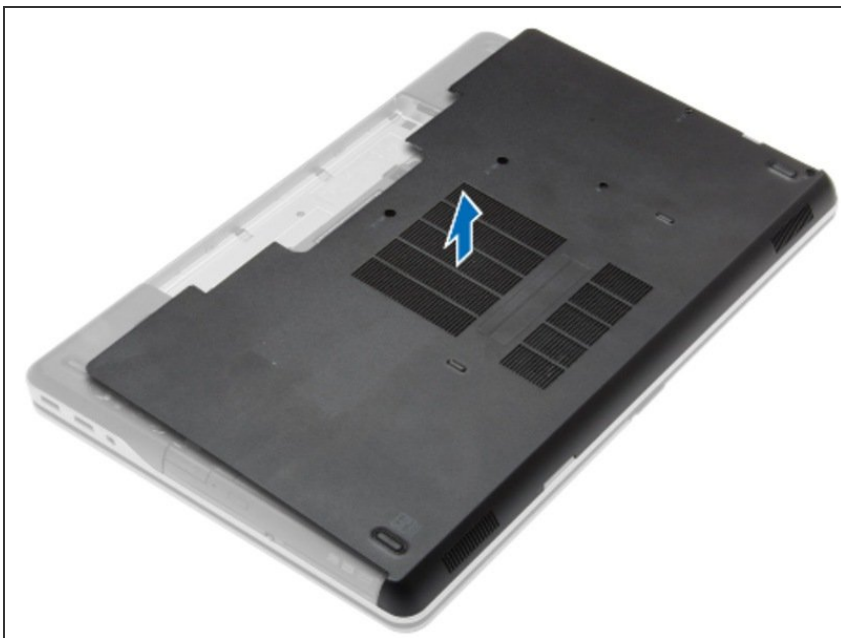

- Lift the base cover and remove it from the computer.

Step 3 — Align base cover with screws




- Place the base cover to align with the screw holes on the computer.


Step 4 — Tighten screws



- Tighten the screws to secure the base cover to the computer.


Step 5 — Base Cover Caps - Step 1

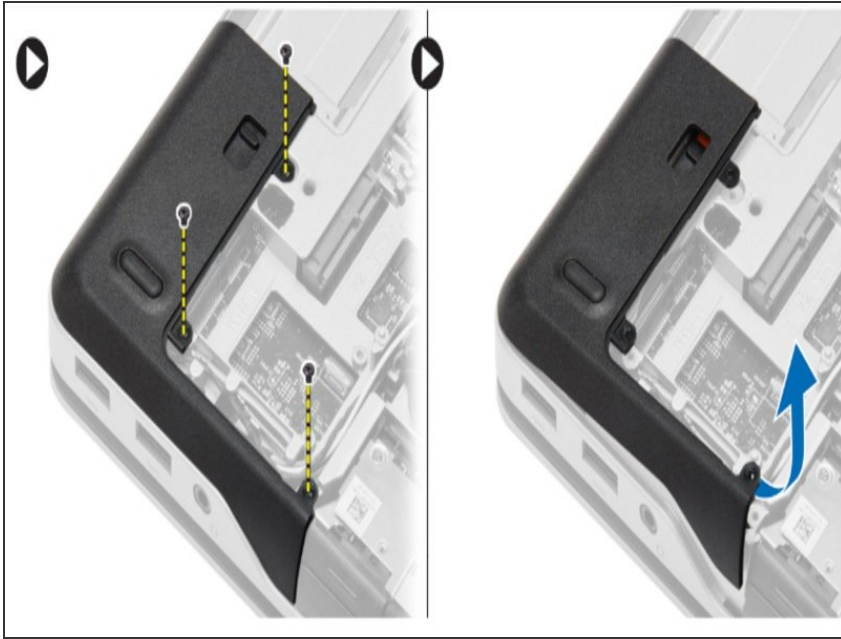

 You don't necessarily have to replace the base cover caps if you are just replacing the base cover itself.

- Remove the screws that secure the left base corner cap, lift and remove it from the computer.

Step 6 — Base Cover Caps - Step 2

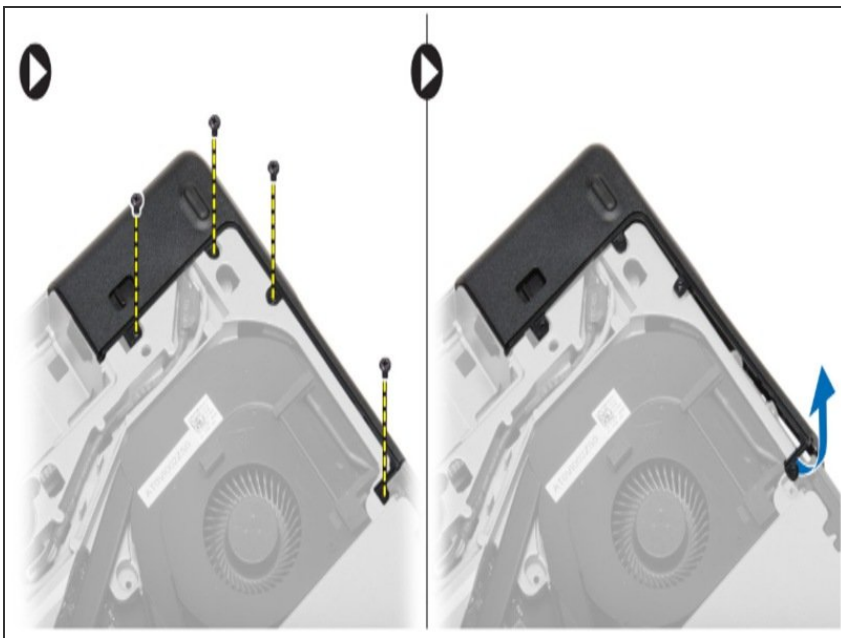

- Remove the screws that secure the right base corner cap, lift and remove it from the computer.

Step 7 — Base Cover Caps (Steps 3 & 4)



- Place the left and right base corner caps to align with the screw holes on the computer.
- Tighten the screws to secure the base corner caps to the computer.

To reassemble your device, follow these instructions in reverse order.