


Samsung Mythic SGH-a897 Ear Speaker Replacement

Use this guide to replace the ear speaker of...

Written By: Collin Gordon

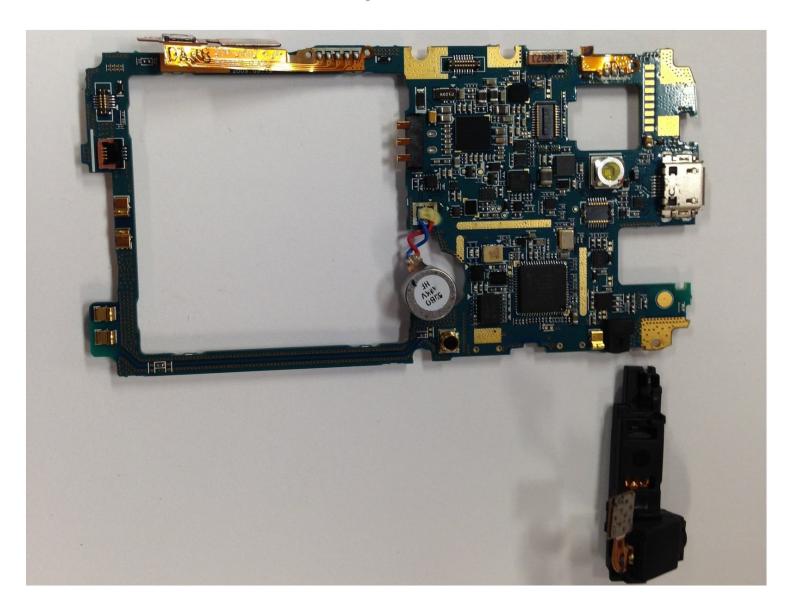

INTRODUCTION

Use this guide to replace the ear speaker of the Samsung Mythic SGH-a897.

TOOLS:

Phillips #00 Screwdriver (1) iFixit Opening Tool (1) Tweezers (1)

Step 1 — Battery



 To remove the phone's back cover, slide your fingernail into the slit at the bottom of your phone.



 Place your finger on either bottom corner of the battery slot and lift to remove the battery.

Step 3 — Rear Case



Using a Phillips #00
Screwdriver, remove the six 5
mm screws from the back
casing of the phone.



- Using the iFixit Opening Tool, insert the tool into the seam between the back case and the rest of the phone.
- Working along the seam, pry the back casing from the phone.

Step 5 — Camera





- Carefully remove the camera by using the iFixit Tool to pry the camera cable from the motherboard.
- Carefully remove the camera from the phone's motherboard.

Step 6 — Motherboard



Using a Phillips #00 screwdriver, remove the two 3.8mm screws.

Step 7



- Using <u>tweezers</u>, firmly grip the black lever at the bottom of the motherboard.
- Use the tweezers to flip the black lever up so that it is upright from the motherboard.



 Remove the ZIF cable by carefully using the tweezers to pull the cable straight out.

Step 9





• On the right from the lever, use the tweezers to unclip the black connector.





• Use the tweezers to unclip the orange ribbon cable from the left side of the phone.

Step 11




- Use the tweezers to unclip the other orange ribbon cable along the left side of the phone.
- ⚠ Work carefully, as this is a very delicate part of the phone's motherboard that can easily be broken.






- Using either side of the tweezers, slide a side of the tweezer underneath the red and blue wires and the capacitor.
- Carefully lift the capacitor away from the phone.

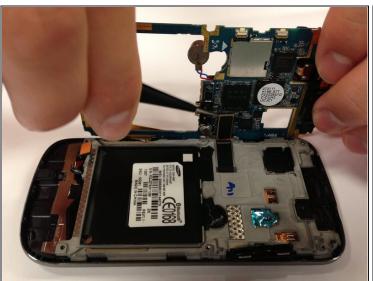




- △ DO NOT remove the motherboard completely. One more clip on the motherboard's backside needs to be removed.
- Carefully tilt the motherboard up from the back of the phone.
- Use tweezers to unclip the black connector.


Step 14 — Daughterboard

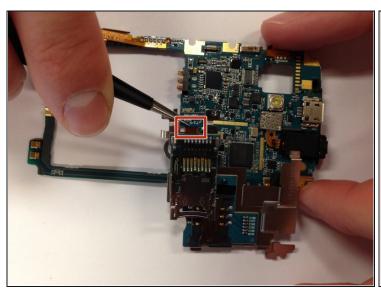

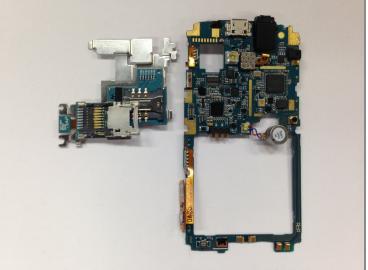

- Use the <u>tweezers</u> to unclip the connector.
- Remove the daughterboard.

Step 15 — Ear Speaker

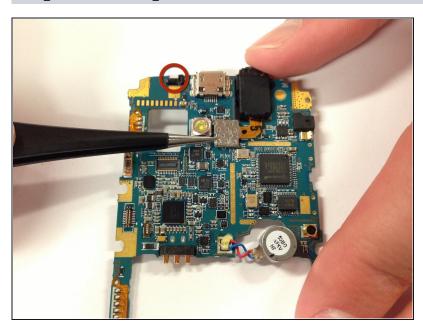

- Use <u>tweezers</u> to unclip the silver connector.
- Then put pressure on the black latch which is circled to release the speaker.

To reassemble your device, follow these instructions in reverse order.