



# Apple TV 1st Generation Lower Case Replacement

Remove the lower case in your Apple TV 1st Generation.

Written By: CCarvalho



---

## INTRODUCTION

Remove the lower case in your Apple TV 1st Generation.



### TOOLS:


- [TR10 Torx Security Screwdriver](#) (1)
-

## Step 1 — Lower Case



- ✦ Flip the Apple TV over so that the bottom of the unit is facing up.
- ⓘ You need to remove the rubber base to get access to the screws.
  - Starting at one side of the device, use a hairdryer or a heat gun to soften the adhesive holding the rubber base in place.
- ⚠ The rubber base will be hot after heating, take extreme caution while proceeding to avoid personal injury.
- While the adhesive is still warm, peel the bottom of the rubber base upwards to detach it from the metal plate.
- ⚠ The rubber base can tear if the adhesive hasn't been softened enough.
- Repeat the procedure described above until the rubber base has been completely removed.

## Step 2

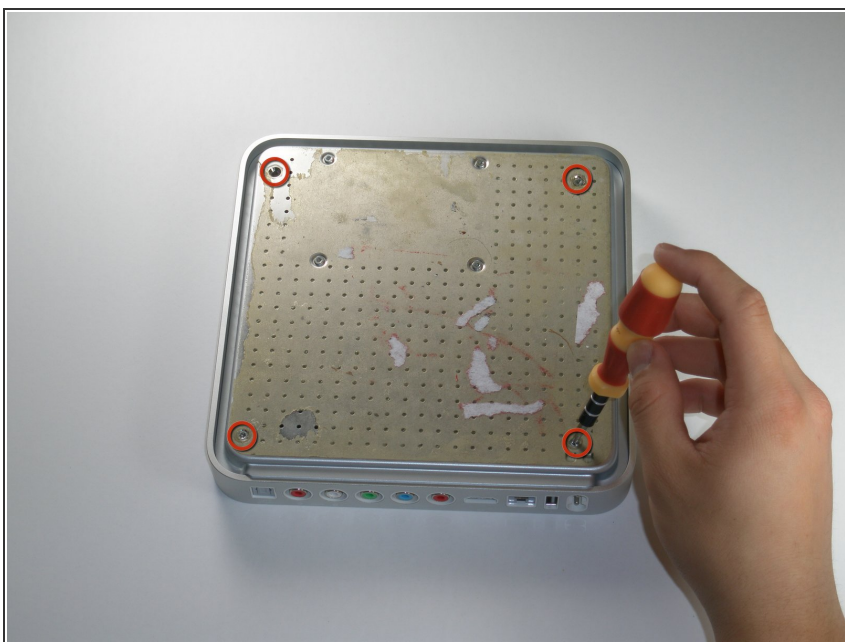

- Remove the four T10 Torx screws that secure the lower case to the upper case.


## Step 3



- Carefully lift the lower case from the upper case enough to allow access to the internals of the Apple TV.

**⚠ Be aware that the hard drive is physically attached to the lower case and that a ribbon cable runs from the drive to the logic board in the upper case.**

## Step 4

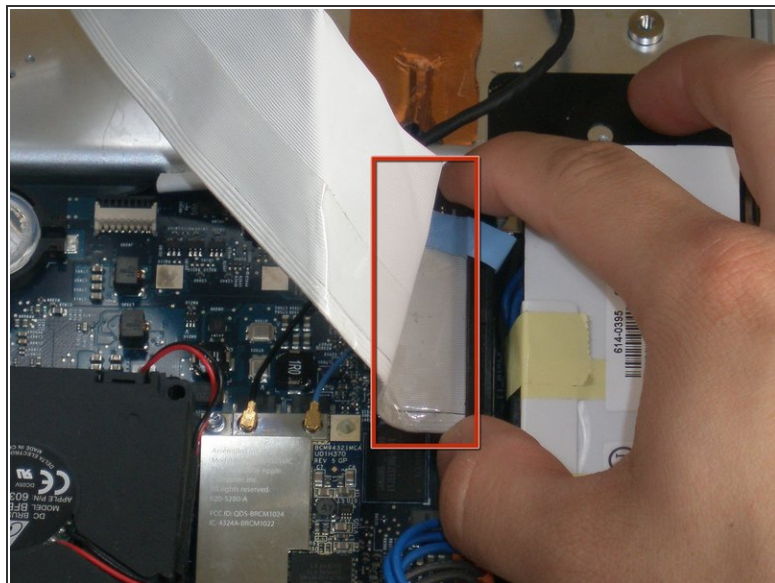

- Carefully pull the hard drive data cable straight up from its socket on the logic board.
- ☑ During reassembly, make sure the hard drive data cable is firmly seated in its socket on the logic board; otherwise, during boot-up you will see a flashing question mark "?".

To reassemble your device, follow these instructions in reverse order.