



# Sony DualSense Controller L1 and R1 Button Replacement

Follow this guide to replace the L1 and R1...

Written By: Sam Omiotek



# INTRODUCTION

Follow this guide to replace the L1 and R1 trigger buttons on a Sony PlayStation 5 DualSense controller.

**Disconnect and power down your controller before starting your repair.**

---

## TOOLS:

[Spudger](#) (1)

## PARTS:

[PlayStation DualSense Controller](#)  
[Trigger Button Cover Set](#) (1)

---

### Step 1 — Remove the L1 button



- Insert the flat end of a spudger into the gap above the **L1** button.
  - ① Cover the button with your [thumb](#) to prevent it from ejecting across the room.
- Pry upward to remove the **L1** button.

## Step 2 — Remove the R1 button



- Insert the flat end of a spudger into the gap above the **R1** button.
    - ① Cover the button with your [thumb](#) to prevent it from ejecting across the room.
  - Pry upward to remove the **R1** button.
- 

**To reassemble your device, follow the above steps in reverse order.**

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.