



# Shark Rocket Zero-M Belt Replacement

This guide will show a user how to replace the belt on a Shark Rocket Zero-M Self Cleaning Brush roll Corded Stick Vacuum.

Written By: Nadia Martinez



---

## INTRODUCTION

This guide is intended to show how to access, remove, and replace the belt on a Shark Rocket Stick Vacuum with Self-Cleaning Brushroll. This replacement may be necessary if the brush roller is turning slowly or not at all.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Tamper Resistant TORX Plus TR Bit](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Belt




- Flip the vacuum on its right side.

## Step 2



- Turn the T10 Security Bit screwdriver counterclockwise to remove the 15mm screw.

### Step 3

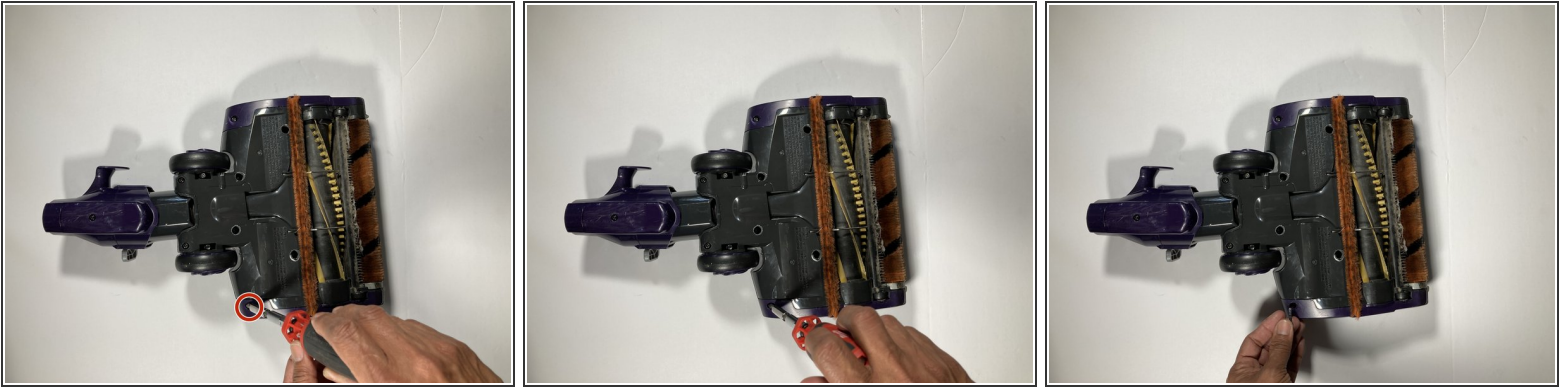

- Turn the vacuum face down.
- Turn the T10 Security Bit screwdriver counterclockwise to remove the 15mm screw.

### Step 4



- Use a spudger to pry the side of the vacuum open.



## Step 5



- Use a spudger to pry the old belt away from the two gears.
- ☑ The new belt will be tight and difficult to put back on. In order to reinstall, place the belt on the brushroll, then rotate the brushroll a couple rotations to make sure the belt is aligned correctly.

## Step 6



- Repeat on the other side of the vacuum.

To reassemble your device, follow these instructions in reverse order.