

Logitech Mouse G302 Disassembly

Written By: Carsten Dahl Hjarup




TOOLS:

Phillips #0 Screwdriver (1) iFixit Opening Tool (1) iFixit Opening Picks (Set of 6) (1) Spudger (1)


Step 1 — Open the case



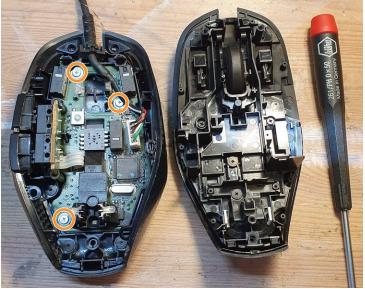

- Flip the mouse over to gain access to the bottom.
- Using a scalpel, pick, or similar tool, peel away the slide pads on the bottom of the mouse in order to expose the three screws.
- Using a PH0 / Phillips #0 driver, remove the 3 screws shown in red.
 - i Peel away as little of the pads as possible, in order to preserve the adhesive on their undersides.
- Gently separate the two halves of the case. Light prying may be required.
- For PCB removal: remove 3 PH0 screws from PCB surface. The whole PCB can be taken out for inspection and repair after the screws are removed.


Step 2 — Switch replacement

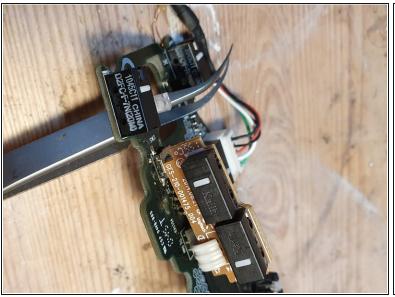



- (two utilized) The switch's brand is Omron. Part number: D2FC-F-7N. Components have 3 pins leaded type
- I experienced one switch working intermittently. In such case, I recommend replacing both L & B switches.

Step 3 — Switch information

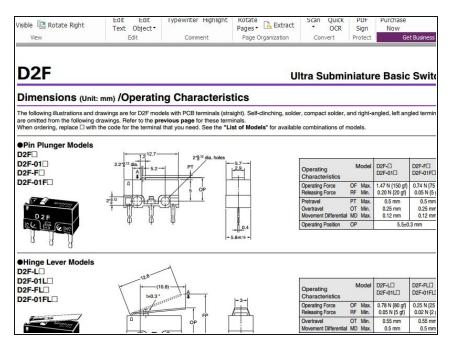

- This is helpful for finding the correct replacement or compatible replacement e.g. vendors from online store AliExpress.
- I used this as a successful replacement: RS Components Stock No. 682-1519 microswitch.
 Manufacturer is Omron, manufacturer part number is D2F-F.

To reassemble your device, follow these instructions in reverse order.