



iRobot Braava Jet M6 Battery Replacement

If your iRobot Braava Jet 240 doesn't charge in...

Written By: ShellingRook27



INTRODUCTION

If your iRobot Braava Jet 240 doesn't charge in the charging cradle, you may need a new battery. Repeated charging can wear out the battery, reducing its charge capacity and making replacement necessary.

If your device is still under warranty, contact iRobot Support for assistance. They should be able to provide a new battery.


TOOLS:

Phillips Head Screwdriver: Size PH1 (1)

PARTS:

iRobot Braava M6 Battery (1)

Step 1 — Battery

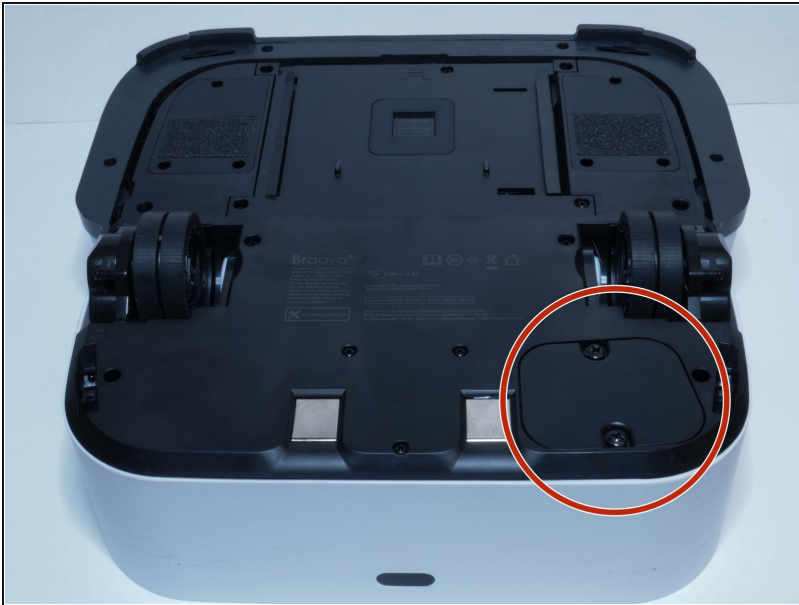

- Locate the battery on the bottom of the device

Step 2



- Loosen both Phillips head screws,
 - ❗ Keep in mind that they are captive and cannot be completely removed.

Step 3



- Pinch one screw and gently lift it.
- Alternatively, you can turn the robot upside down to let the battery slide out.

To reassemble your device, follow these instructions in reverse order.