



HP EliteBook 1050 G1 Camera Replacement

This manual outlines the process of replacing...

Written By: Ming-chin Wu



INTRODUCTION

This manual outlines the process of replacing the camera positioned above the screen on the HP EliteBook 1050 G1. Ensure you have a heat gun and an iFixit Opening Tool, both listed in the guide description. Exercise caution when using the heat gun to prevent any damage to the computer or screen, don't forget to be sure to always operate safely and use the materials suggested. Let's proceed with care through the steps outlined in this guide to safely replace the screen on the HP EliteBook 1050 G1.

TOOLS:

[Heat Gun](#) (1)
[Jimmy](#) (1)

PARTS:

[HP EliteBook 1050 G1 Camera](#) (1)

Step 1 — Camera




- Use a Jimmy to pry the plastic bezel away from the screen.

Step 2



- Using the heat gun, remove the adhesive from the back of the camera.

Step 3

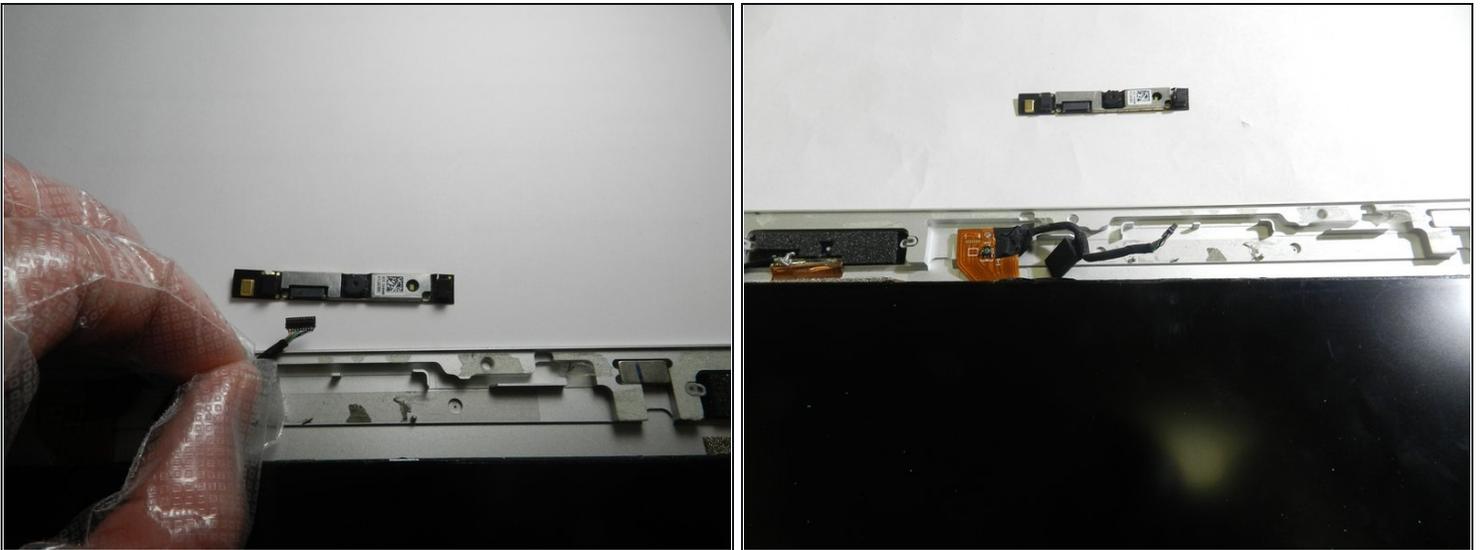

- Disconnect the camera plug.
- Remove the camera from the laptop.

To reassemble your device, follow these instructions in reverse order.