



Dell Latitude 3190 Base Cover Replacement

If you need to replace the base cover or access...

Written By: Sean Gherkins



INTRODUCTION

If you need to replace the base cover or access the internals of your Dell Latitude 3190 laptop, follow this guide.

Prior to beginning this repair, power off your laptop and unplug it from the charging cable.

TOOLS:

[Phillips #0 Screwdriver](#) (1)



[iFixit Opening Tool](#) (1)

Step 1 — Base Cover



- Use a Phillips #0 screwdriver to remove the seven 7 mm screws securing the back case.

Step 2

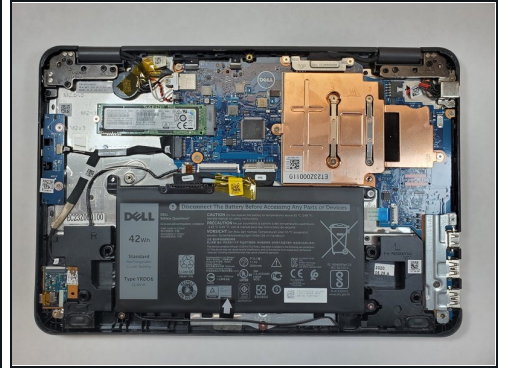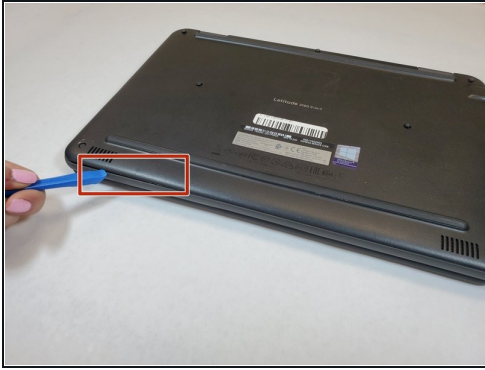

- Using a plastic opening tool carefully separate the plastic base cover from the rest of the laptop.
- Lift the bottom cover from the laptop.

To reassemble your device, follow these instructions in reverse order.