

Logitech Performance MX Left Click Repair

After some time left mouse click fails. This...

Written By: Samuel Colin



INTRODUCTION

After some time left mouse click fails. This results in unintended double clicks or drag and drop. This can be solved by disassembling the mouse and folding a metal part.

Thanks to **Kyler's Studio** for the tutorial I initially followed.



Tournevis en croix type Cruciforme Taille #00 de 4 mm (1) Pry Bar/Sprudger (1) Jimmy (1)

Step 1 — Turn off the mouse and remove the battery



 On the back of the mouse, slide the power switch so that the red area is showing to turn off the mouse. Pry open the panel on the bottom to remove the battery.

Step 2 — Remove the 3 pads



• To access the screws necessary to open the mouse, you must remove the pads on the bottom of the mouse. Use a sharp tool such as an iFixit Jimmy tool or an X-acto knife to separate the pad from the case. Each pad has two layers. Ideally, both should remain attached, but this is hard to achieve.

Step 3 — Remove the 4 screws



 Use a 00 Phillips-Head screwdriver to remove the screws at the bottom of the mouse.

Step 4 — Remove the upper part of the mouse








• Slide the bottom to the side while removing the top

Step 5 — (optional) remove the connector

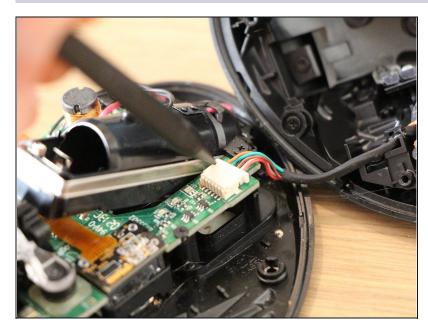


 This step isn't necessary, but it makes it easier to work on the mouse.


Step 6 — (optional) put a bit of tape on top of the microswitch



• This helps to avoid losing the white piece.


Step 7 — Remove the multiswitch top

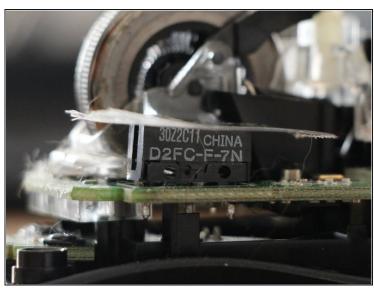

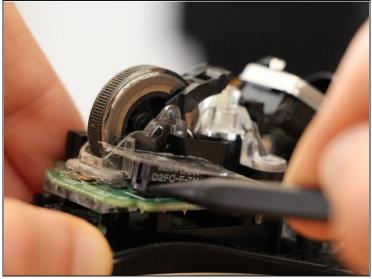

• Use your spudger to push the vertical front part of the multiswitch outwards to unhook the top part of the switch casing.

Step 8 — Flatten the metallic piece

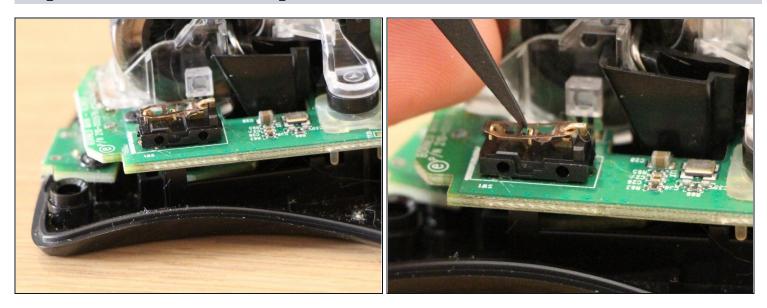

• Flatten the metallic piece of the multiswitch (it will probably be curved upward) until you get a neat "click" sound.

To reassemble the mouse, follow the instructions in the reverse order.