



# Dell Inspiron 3537 RAM Replacement

This guide will assist you in replacing Dell Inspiron 3537 Laptop's RAM.

Written By: Shazil Mutahir



## INTRODUCTION

This guide demonstrates how to replace the RAM on a Dell Inspiron 3537 Laptop with ease. The laptop comes stock with two RAM slots, which are already occupied. The RAM sticks are identified as: PC3L-12800 4 GB DDR3 RAM. Also, for the two RAM sticks to be compatible with each other, you have to use the same type of RAM stick as those that are already installed.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)



### PARTS:

- [PC3L-12800 4 GB RAM Chip](#) (1)



## Step 1 — RAM



- Use a Phillips #0 screwdriver to loosen the two 3 mm captive screws holding the tray in place.  
**⚠ The screws cannot be fully removed and only need to be loosened. Do not attempt to remove the screws from the tray.**
- Lift the RAM tray up and off.

## Step 2



- Gently pull the two silver arms away from the RAM until the RAM slightly lifts from the motherboard.



## Step 3



- Slide the RAM directly out of its slot.


## Step 4



- Insert your new/replacement RAM stick(s) into the slot(s).
- Gently push down on the RAM until it clicks into place.



## Step 5

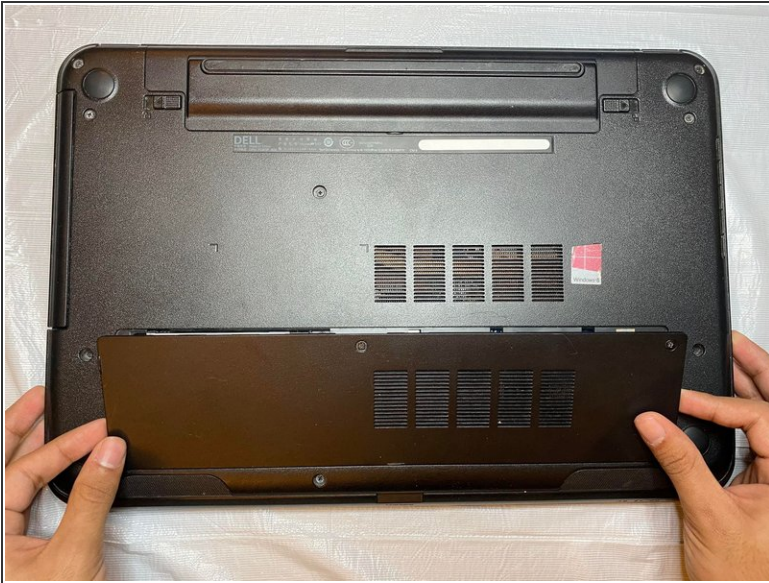

- Replace the RAM tray.
- Screw in the two 3 mm screws with a Phillips #0 screwdriver.

Enjoy your new RAM!