




# Lenovo Y50-70 Battery Replacement

How to replace the battery of a Lenovo Y50-70 laptop. The images and information in this guide were taken from this computer's service manual.

Written By: Max Kletskov

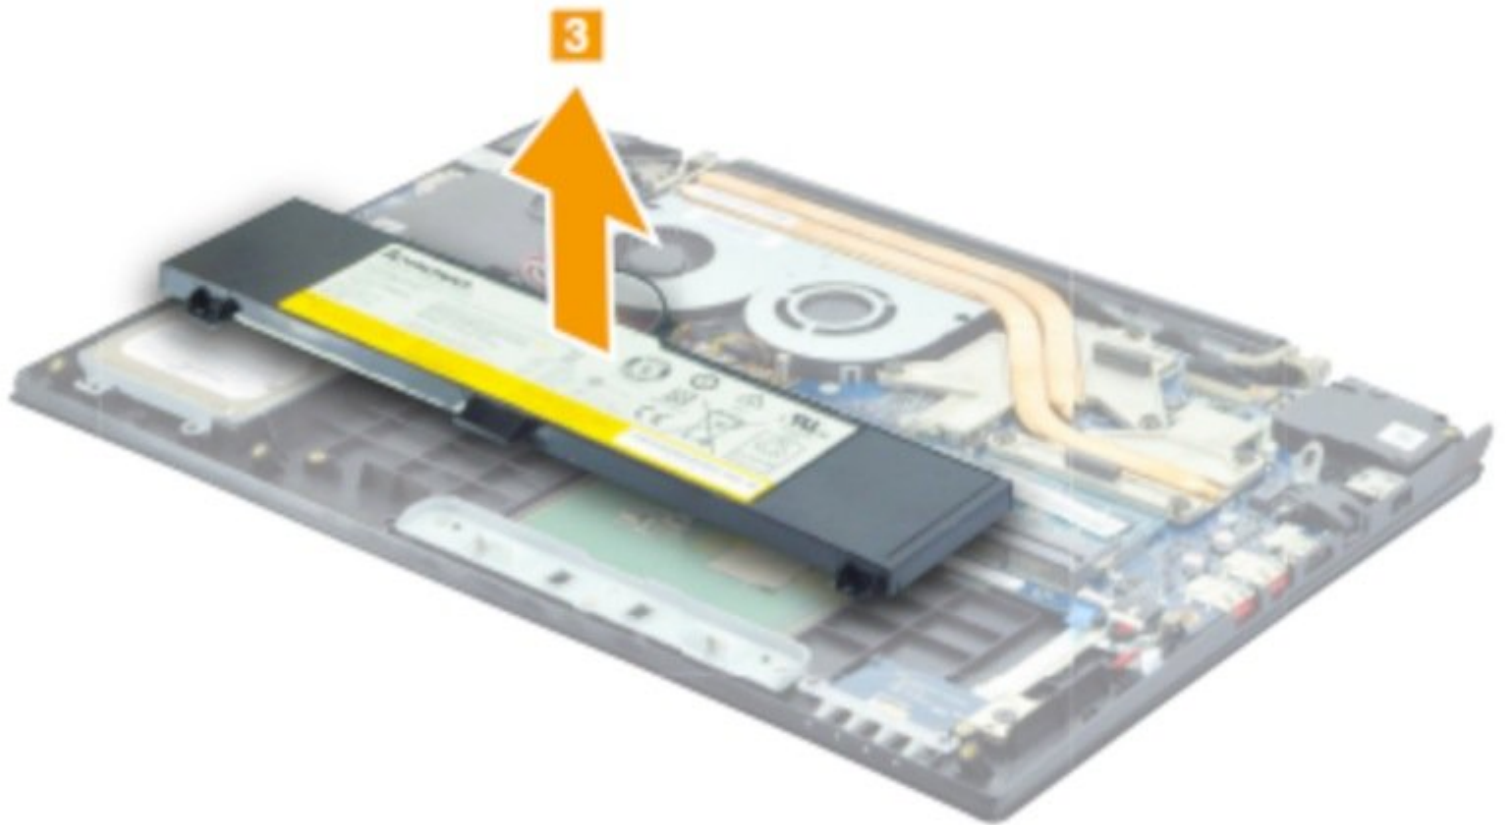

## INTRODUCTION

How to replace the battery of a Lenovo Y50-70 laptop. The images and information in this guide were taken from this computer's service manual.



### TOOLS:


- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)



### PARTS:


- [Lenovo L13M4P02%2FL13M4P01 Replacement Battery](#) (1)

## Step 1 — Remove the base cover screws

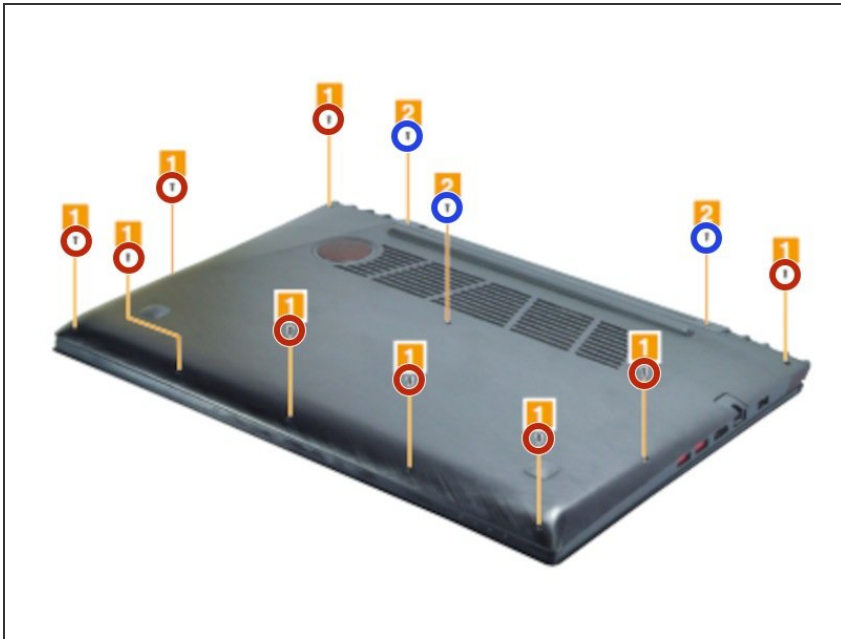


- Remove the short (M2.0 × 5.0 mm) screws.
- Remove the long (M2.0 × 5.0 mm) screws.
- When re-installing: Install the 3 longer screws and then install the 9 shorter screws.

## Step 2 — Remove the base cover

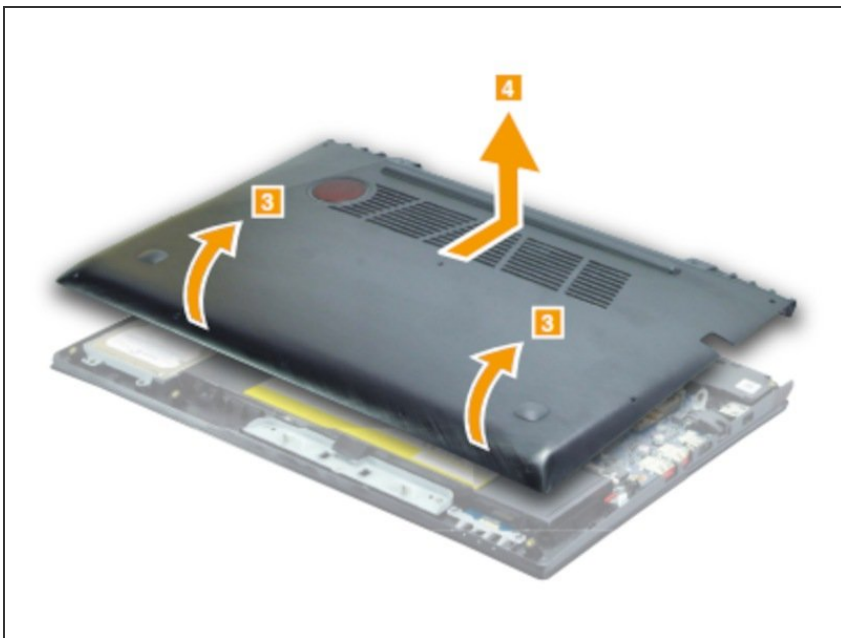


- Remove the base cover in the directions shown by arrows.

### Step 3 — Disconnect the battery

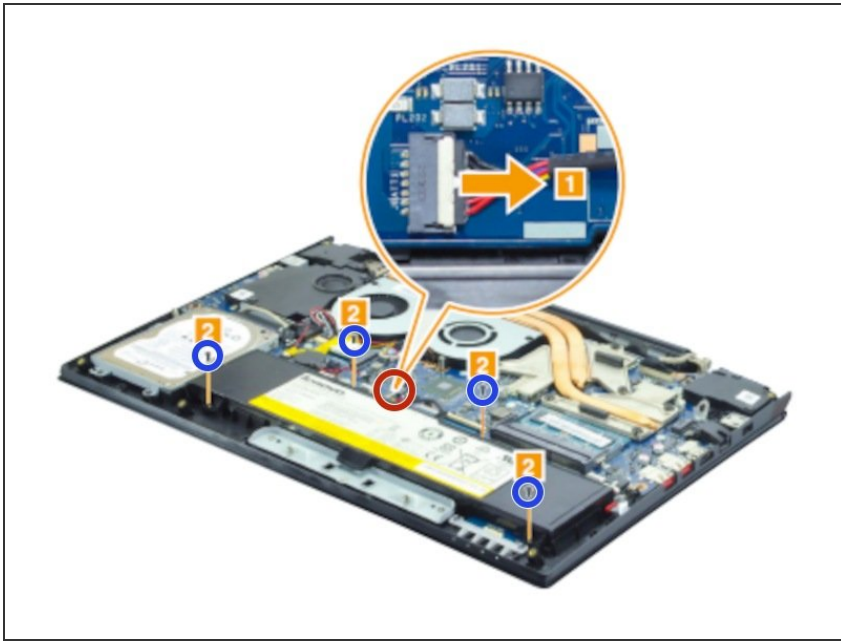

- Unplug the battery connector in the direction shown by arrow.
- Remove the M2.5 × 5.0 mm screws.

### Step 4 — Remove the battery

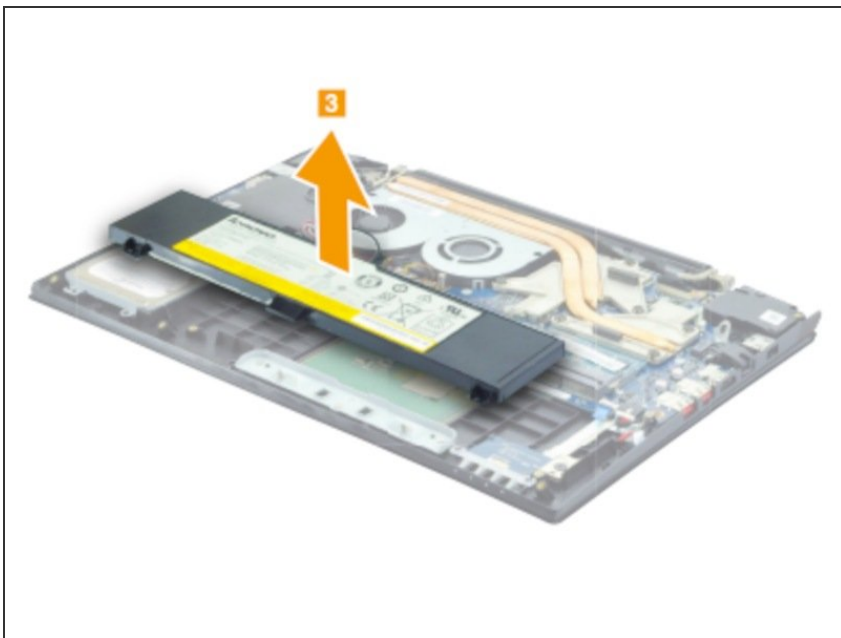

- Remove the battery pack.

To replace the battery & reassemble your device, follow these instructions in reverse order.