 




# HP EliteBook 850 G5 Battery Replacement

How to replace the battery of a HP EliteBook...

Written By: Max Kletskov

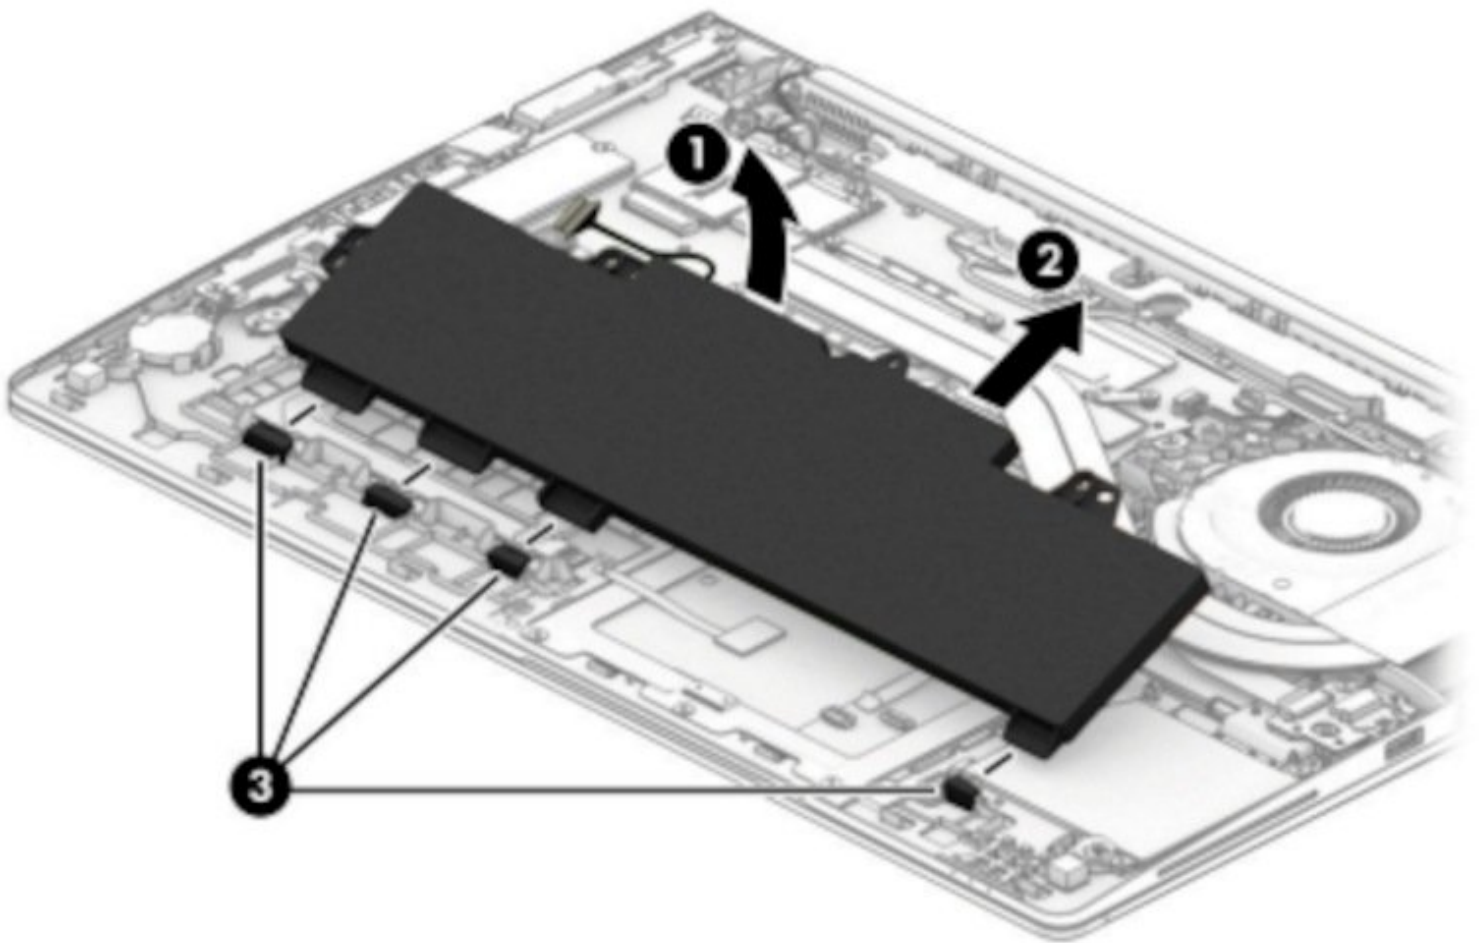

# INTRODUCTION

How to replace the battery of a HP EliteBook 850 G5 laptop. The images and information in this guide were taken from this computer's service manual.



## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [TR8 Torx Security Screwdriver](#) (1)
- [Spudger](#) (1)



## PARTS:


- [HP TT03XL Replacement Battery](#) (1)

## Step 1 — Prepare your device




- Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
- Disconnect the power from the computer by unplugging the power cord from the computer.
- Disconnect all external devices from the computer.
- Turn the computer upside down on a flat surface.

## Step 2 — Remove the bottom cover screws

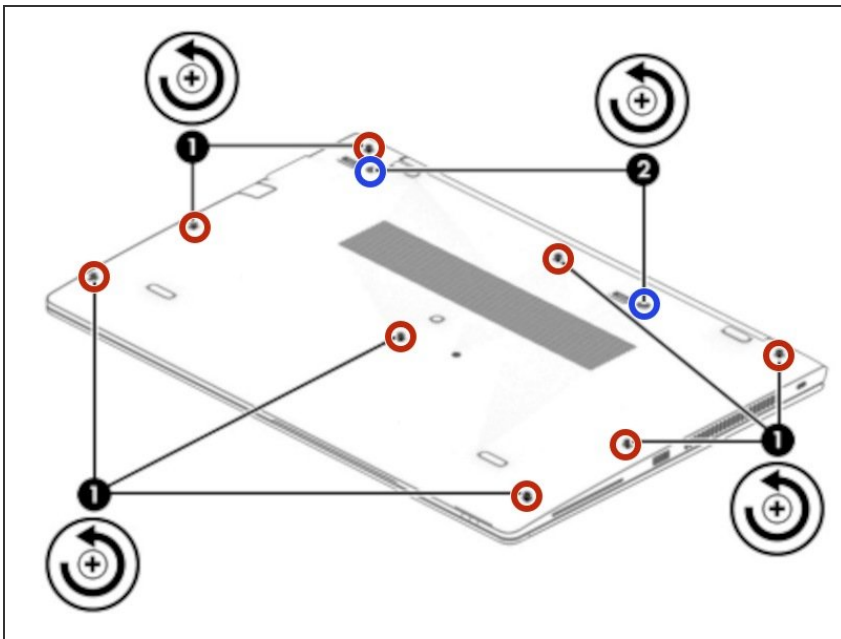


- Loosen the eight captive screws that secure the bottom cover.
- Loosen the two inset captive screws that secure the bottom cover.

### Step 3 — Remove the bottom cover

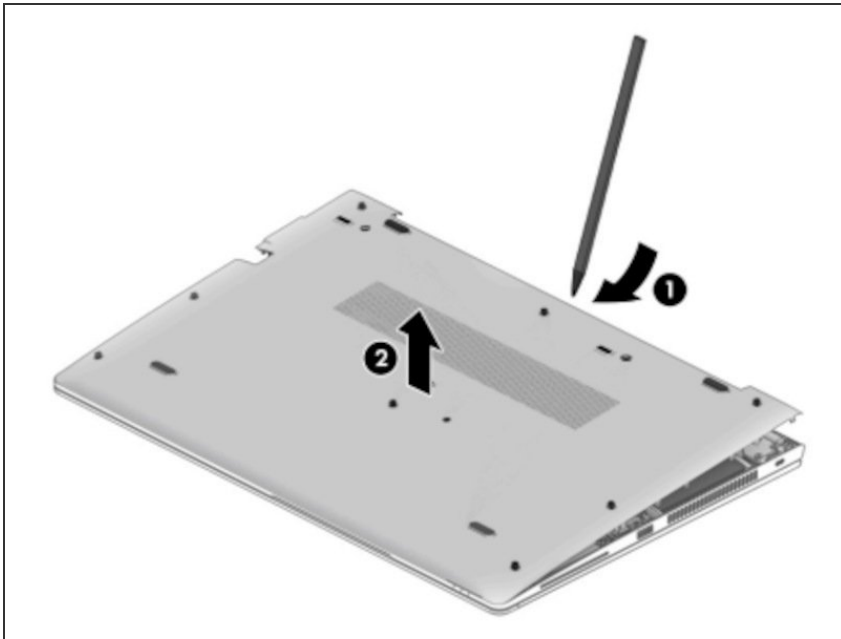


- Starting under the middle of the display, pry and lift the bottom cover off the computer. Consider using a spudger.

### Step 4 — Disconnect the battery

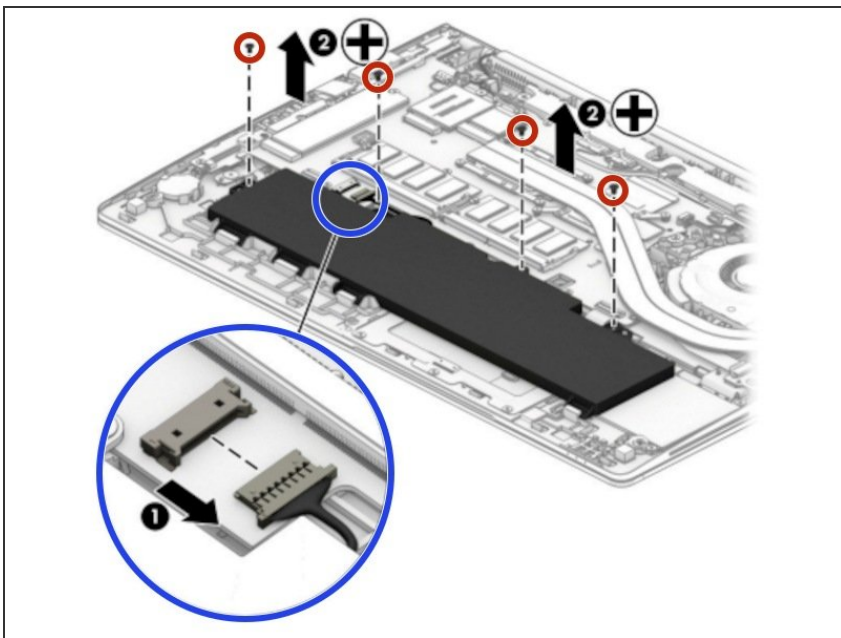

- Disconnect the battery cable from the system board.
- Remove the four Torx T8 2.0×4.0 screws.

## Step 5 — Remove the battery

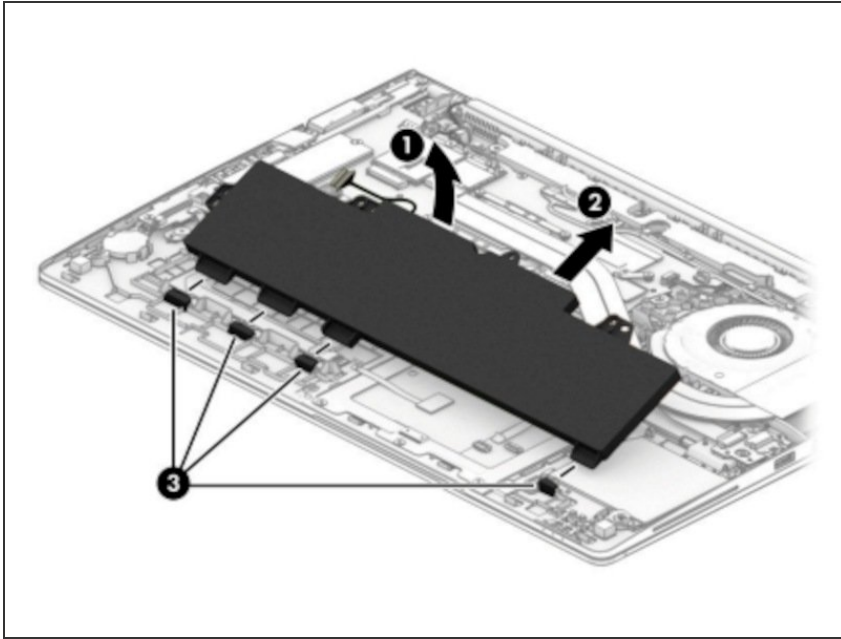

- Rotate the top of the battery upward, and then lift the battery out of the computer.

To replace the battery & reassemble your device, follow these instructions in reverse order.