


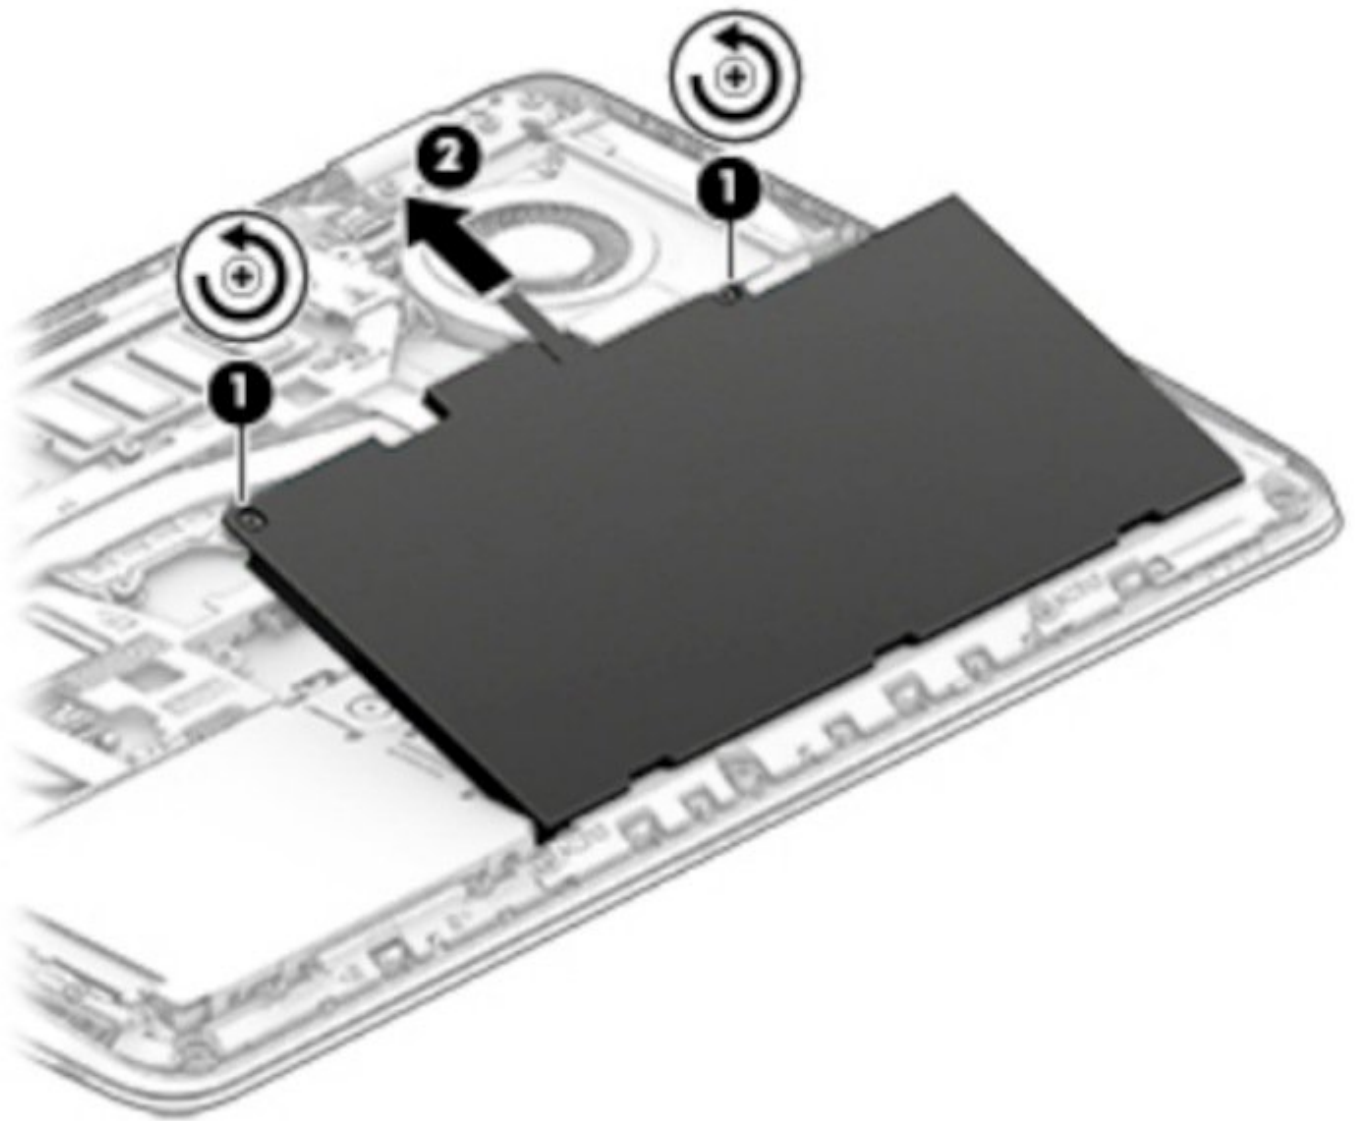

HP EliteBook 745 G4 Battery Replacement

How to replace the battery of a HP EliteBook...

Written By: Max Kletskov



INTRODUCTION

How to replace the battery of a HP EliteBook 745 G4 laptop. The images and information in this guide were taken from this computer's service manual.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:


- [HP EliteBook 745 755 and 850 G4 Replacement Battery](#) (1)

Step 1 — Prepare your device





- Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
- Disconnect the power from the computer by unplugging the power cord from the computer.
- Disconnect all external devices from the computer.
- Turn the computer upside down on a flat surface.

Step 2 — Remove the rubber plugs

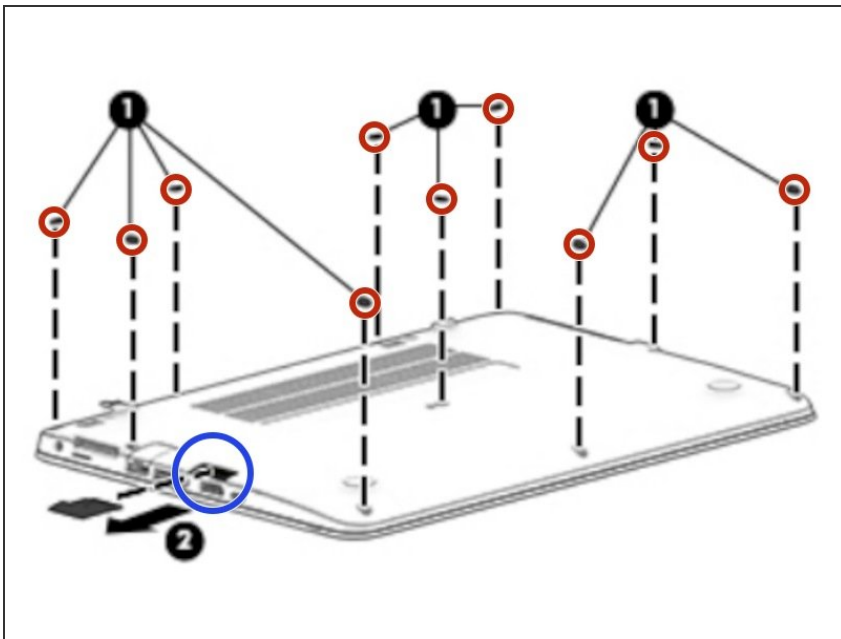


- Remove the 10 rubber plugs from the bottom cover.
- Remove the SD card blank from the bottom cover.

Step 3 — Remove the bottom cover screws

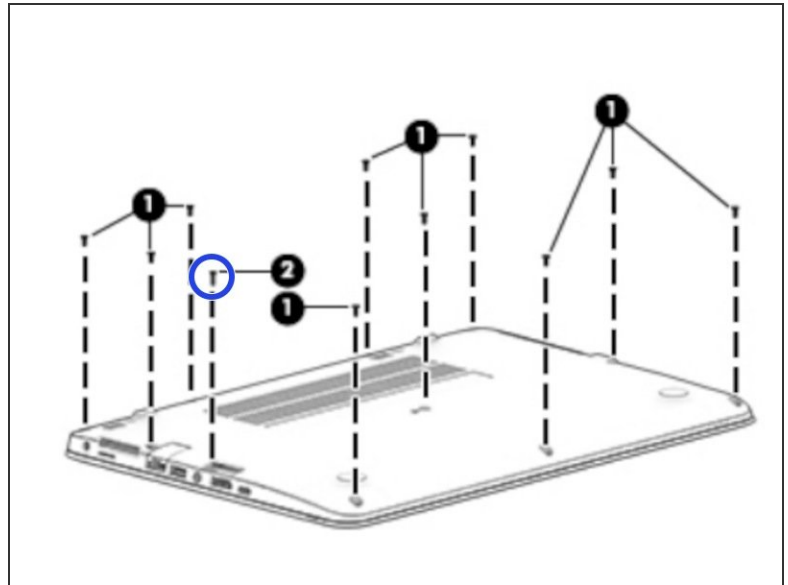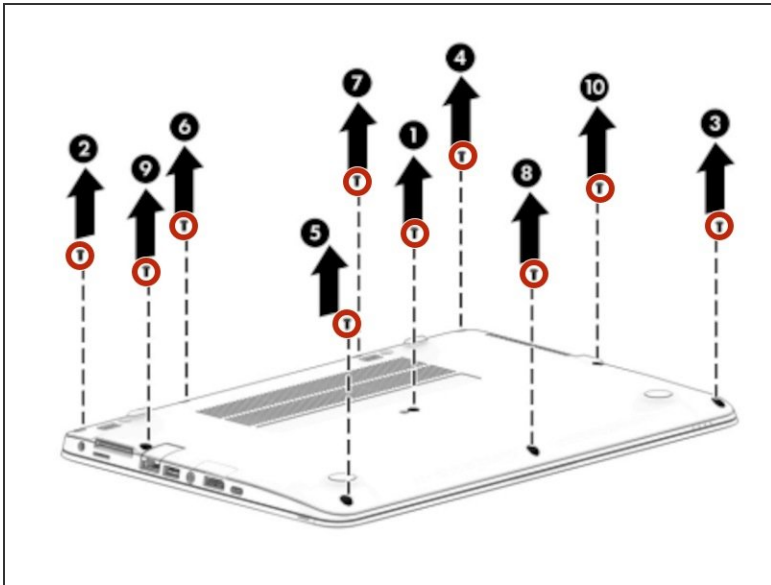


- Remove the 10 Phillips PM2.5x5.0 screws in the following order.
- After you remove the PM2.5x5.0 screws, remove the PM2.0x7.0 screw.

Step 4 — Remove the bottom cover

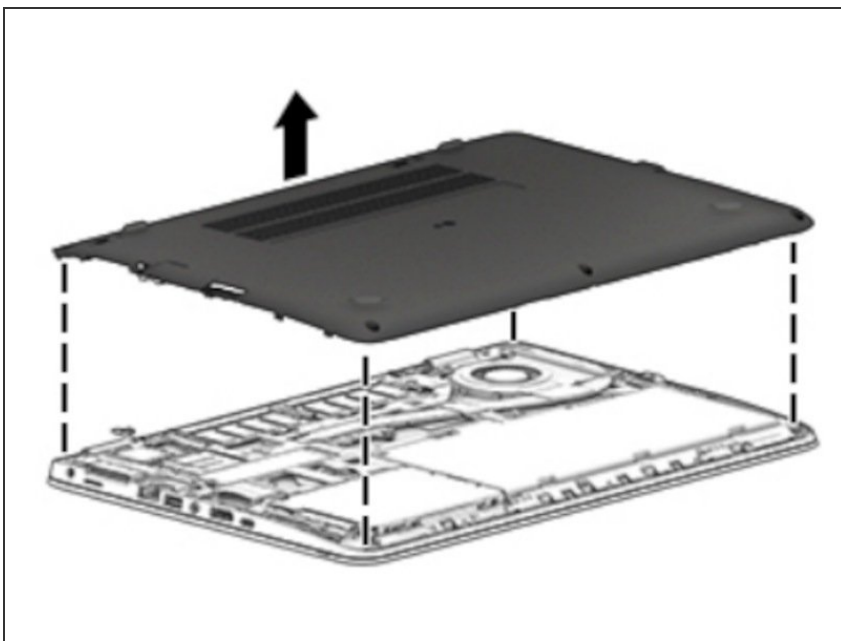

- Pry up on the top (near the display hinge) of the bottom cover to disengage it from the computer. Consider using a spudger.

Step 5 — Remove the battery

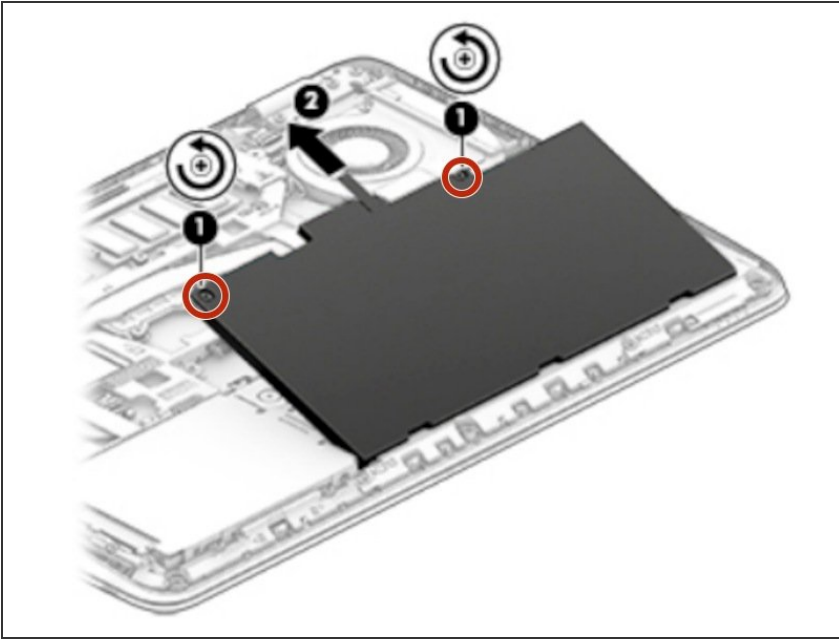

- Loosen the two captive screws and remove the battery from the computer

To replace the battery & reassemble your device, follow these instructions in reverse order.