




HP EliteBook x360 830 G7 Battery Replacement

This guide will help you remove the battery...

Written By: Emily Kaplan

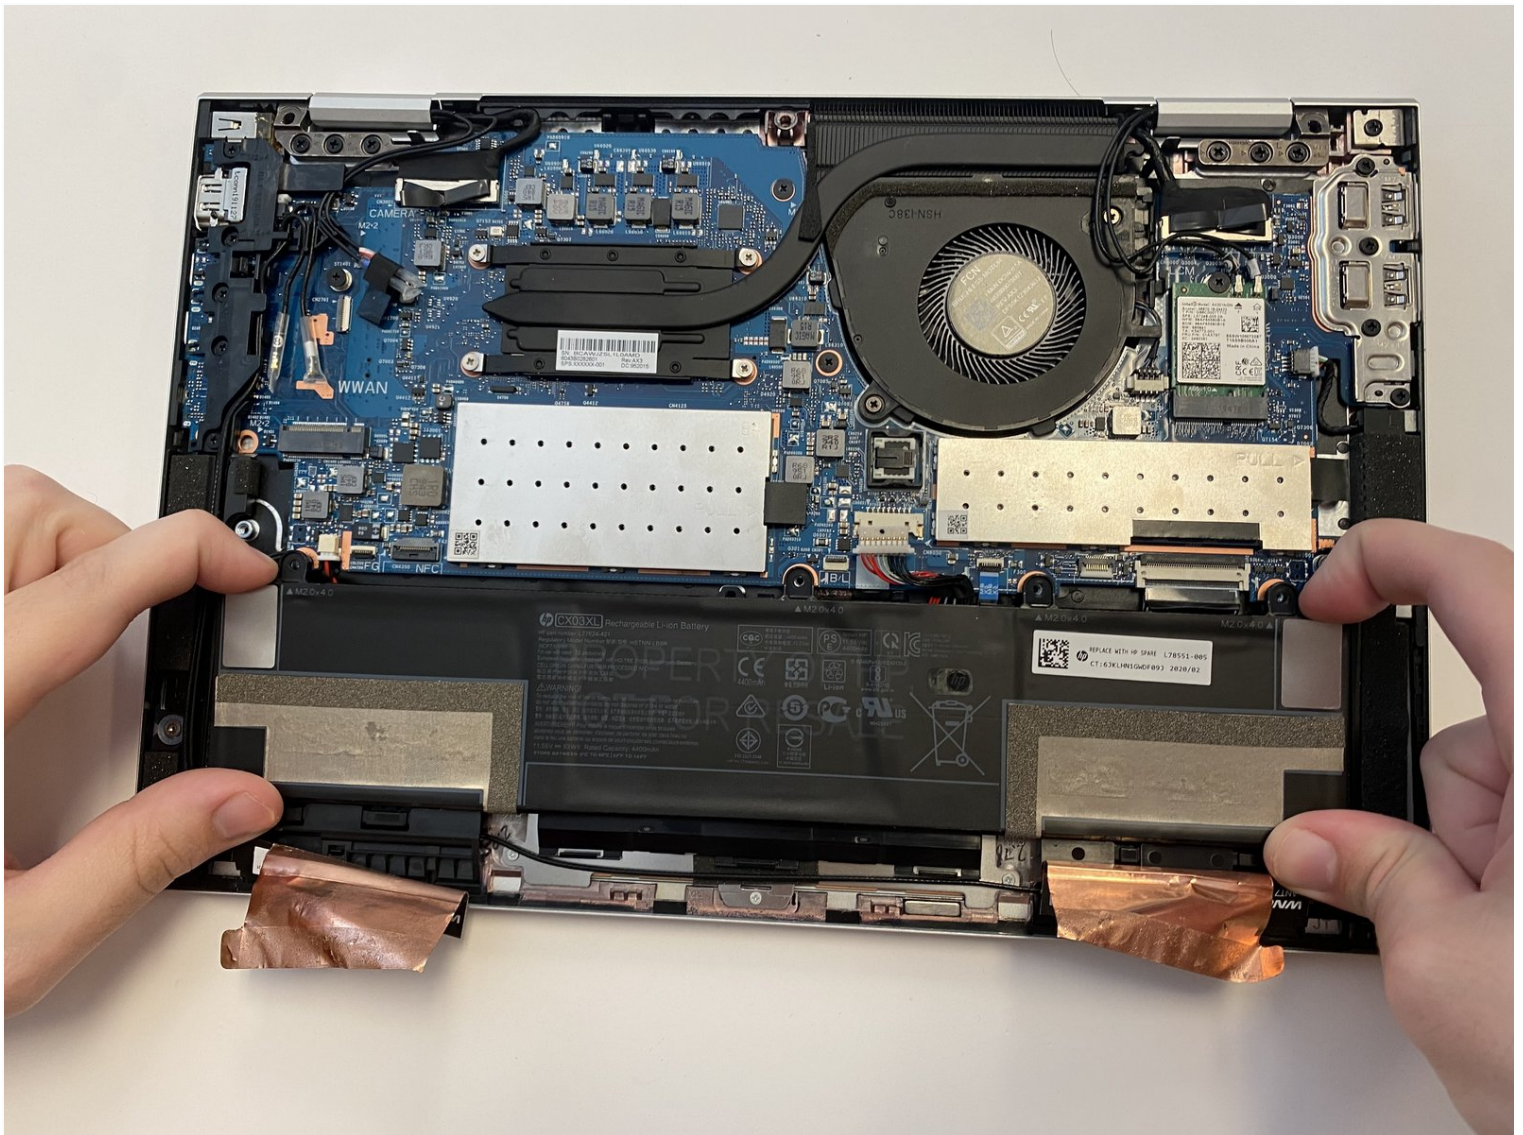

INTRODUCTION

This guide will help you remove the battery from your HP EliteBook x360 830 G7 laptop. If the battery of your HP EliteBook x360 830 G7 is draining fast recently, it is probably dying and needs to be replaced.

Batteries are important components of laptops, and without a functional battery your laptop might not perform in the desired manner. Batteries have a limited lifecycle, and after several charge cycles, they might start to drain quicker than usual. If this is happening with you, you might want to start by calibrating the battery. If the problem persists, you most likely need to replace the battery.

This guide will teach you how to replace your HP EliteBook x360 830 G7 battery safely and effectively. Make sure to power down your device before you start.

TOOLS:

[T5 Torx Screwdriver](#) (1)
[JIS Driver Set](#) (1)
[Spudger](#) (1)

PARTS:

[HP L78551-005 Replacement Battery](#) (1)

Step 1 — Remove the backplate





- Turn the computer over so that the back is facing up.
- Use a Torx T5 screwdriver to remove the three 9 mm screws from the hinge of the device.
- Use a Torx T5 screwdriver to remove the two 7 mm screws from the left and right mid-section of the case.
- Lift the backplate from the computer.

Step 2 — Disconnect the bundled cable connector




- Use a nylon spudger to gently disconnect the battery's bundled cable connector from the motherboard.
- ① This bundled cable connector has a tab on each side. Insert the spudger between these tabs and the motherboard's battery connector port and gently push the battery connector out and away from the connector.

Step 3 — Peel the copper foil tape

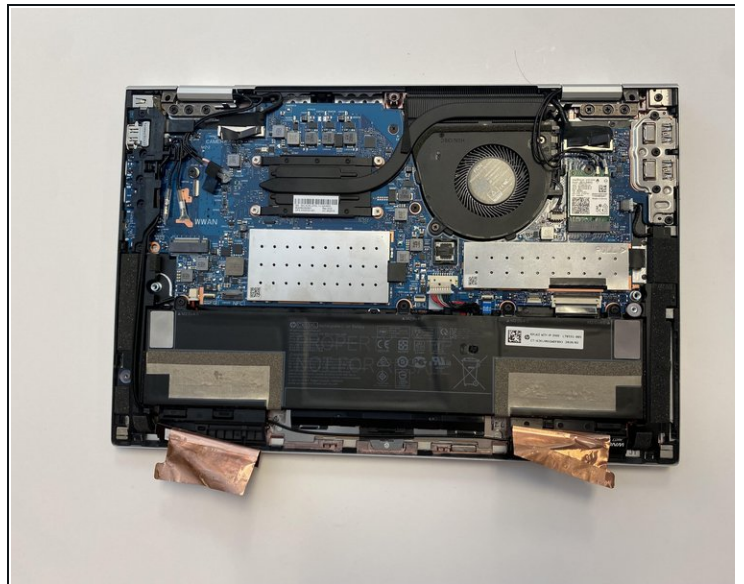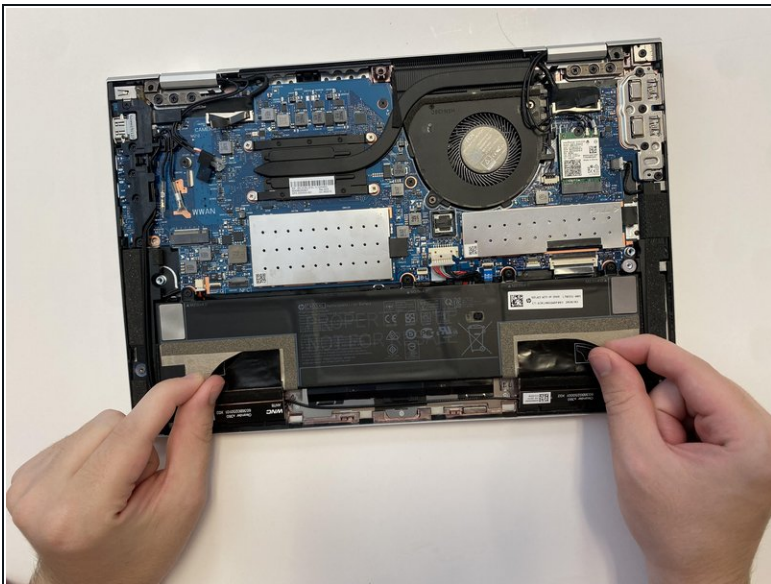



- Peel back both sides of the copper foil tape connected to the battery.

Step 4 — Remove the screws

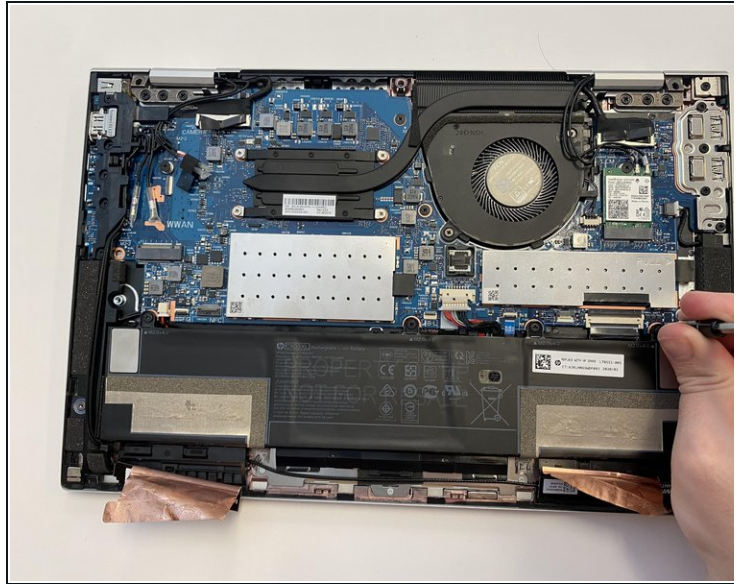

- Use a JIS #1 screwdriver to remove the four 4 mm screws that secure the battery.

Step 5 — Remove the battery

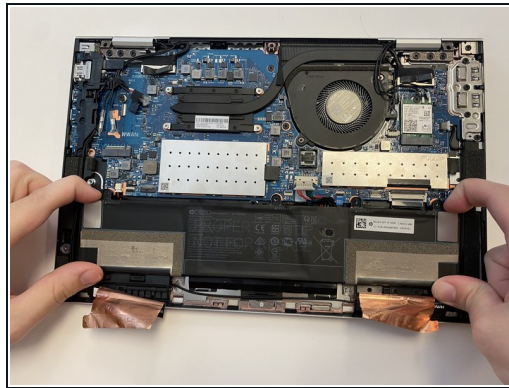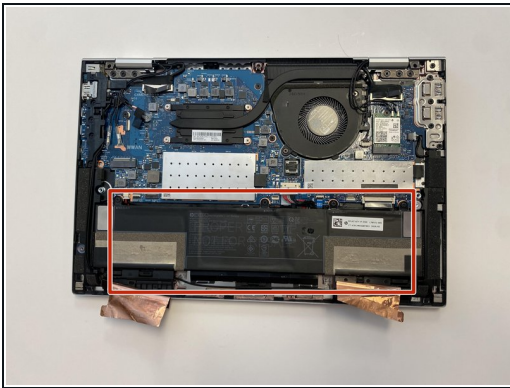

- You can now safely remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.