



Samsung Gear 360 Memory Card Replacement.

This guide will show how to swap/upgrade a memory card for more storage!!

Written By: Artem Ivat



INTRODUCTION

The Samsung Gear 360 does not come included with a memory card, so an additional MicroSD card is required to use the device. It is recommended to use a class 10 MicroSD card with a maximum of 256GB of storage.



PARTS:

- [New Item](#) (1)
-

Step 1 — Locating the memory card



- Begin by turning the Gear 360 to the side where **Samsung** is printed.

Step 2 — Removing the Samsung Cover



- Pull on the small gap to open the cover. If your fingernails are too short, use a flathead screwdriver instead.

Step 3 — Removing the MicroSD Card



- Eject the SD by pushing with your fingernail or flathead screwdriver.

Step 4 — Finish!



- After removing the SD Card, insert a new one and finish the guide!!

To insert a new card, follow the guide in reverse.