




Canon ImageCLASS MF4350d Remove Front Paneling

This is a prerequisite to other guides that...

Written By: Helena Yanez

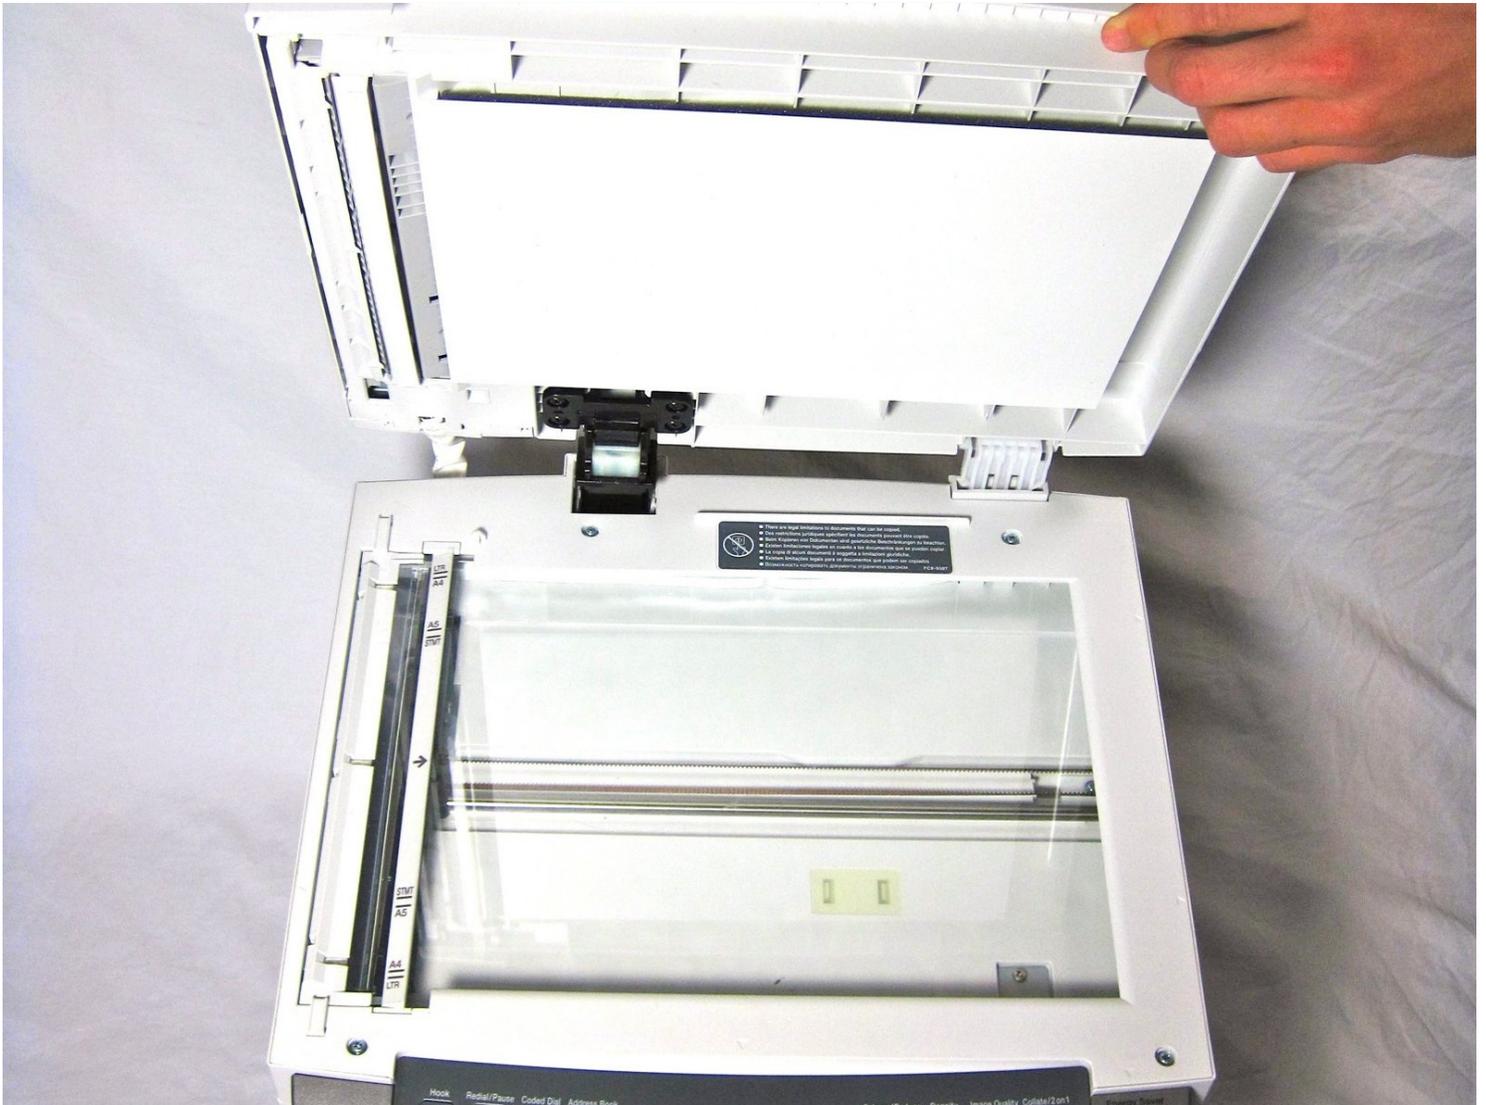

INTRODUCTION

This is a prerequisite to other guides that deal with the innards of the printer.

TOOLS:


Phillips #2 Screwdriver (1)

Step 1 — Canon ImageCLASS MF4350d Remove Front Paneling




- Lift the printer lid up as shown in the photo.

Step 2

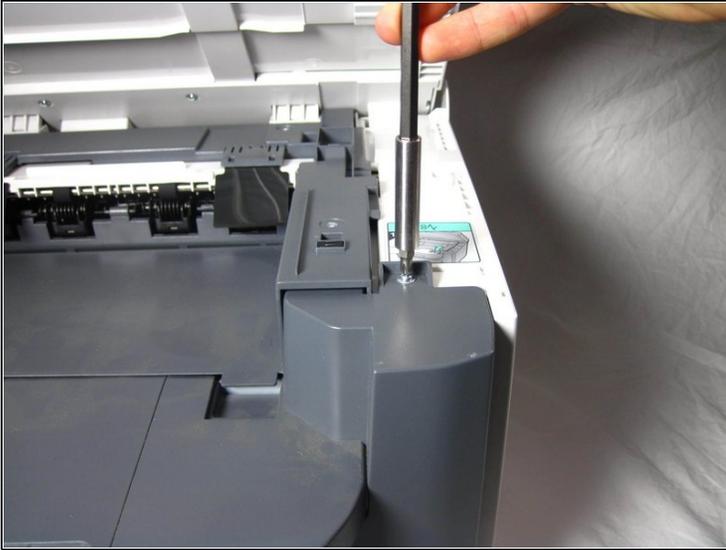

- Locate and remove the two 10mm side screws. There is one on each side.

Step 3

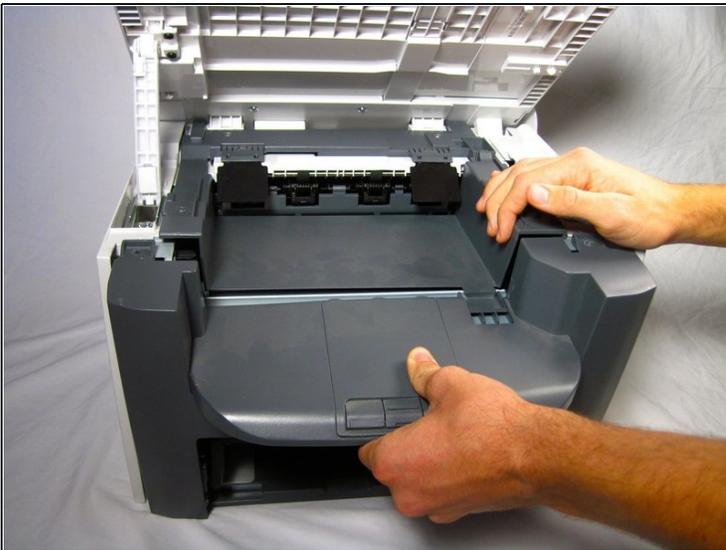

- Unhook the plastic panel from the printer starting from the top.
 - ⓘ You may need to wiggle the panel a bit to loosen it.
- To remove the bottom part of the paneling gently lay the printer on its back.
 - ⓘ The scanner lid needs to be supported when moving the printer

To reassemble your device, follow these instructions in reverse order.