




Canon ImageCLASS MF4350d Remove Right Side Paneling

The side paneling is the plastic that protects...

Written By: Helena Yanez

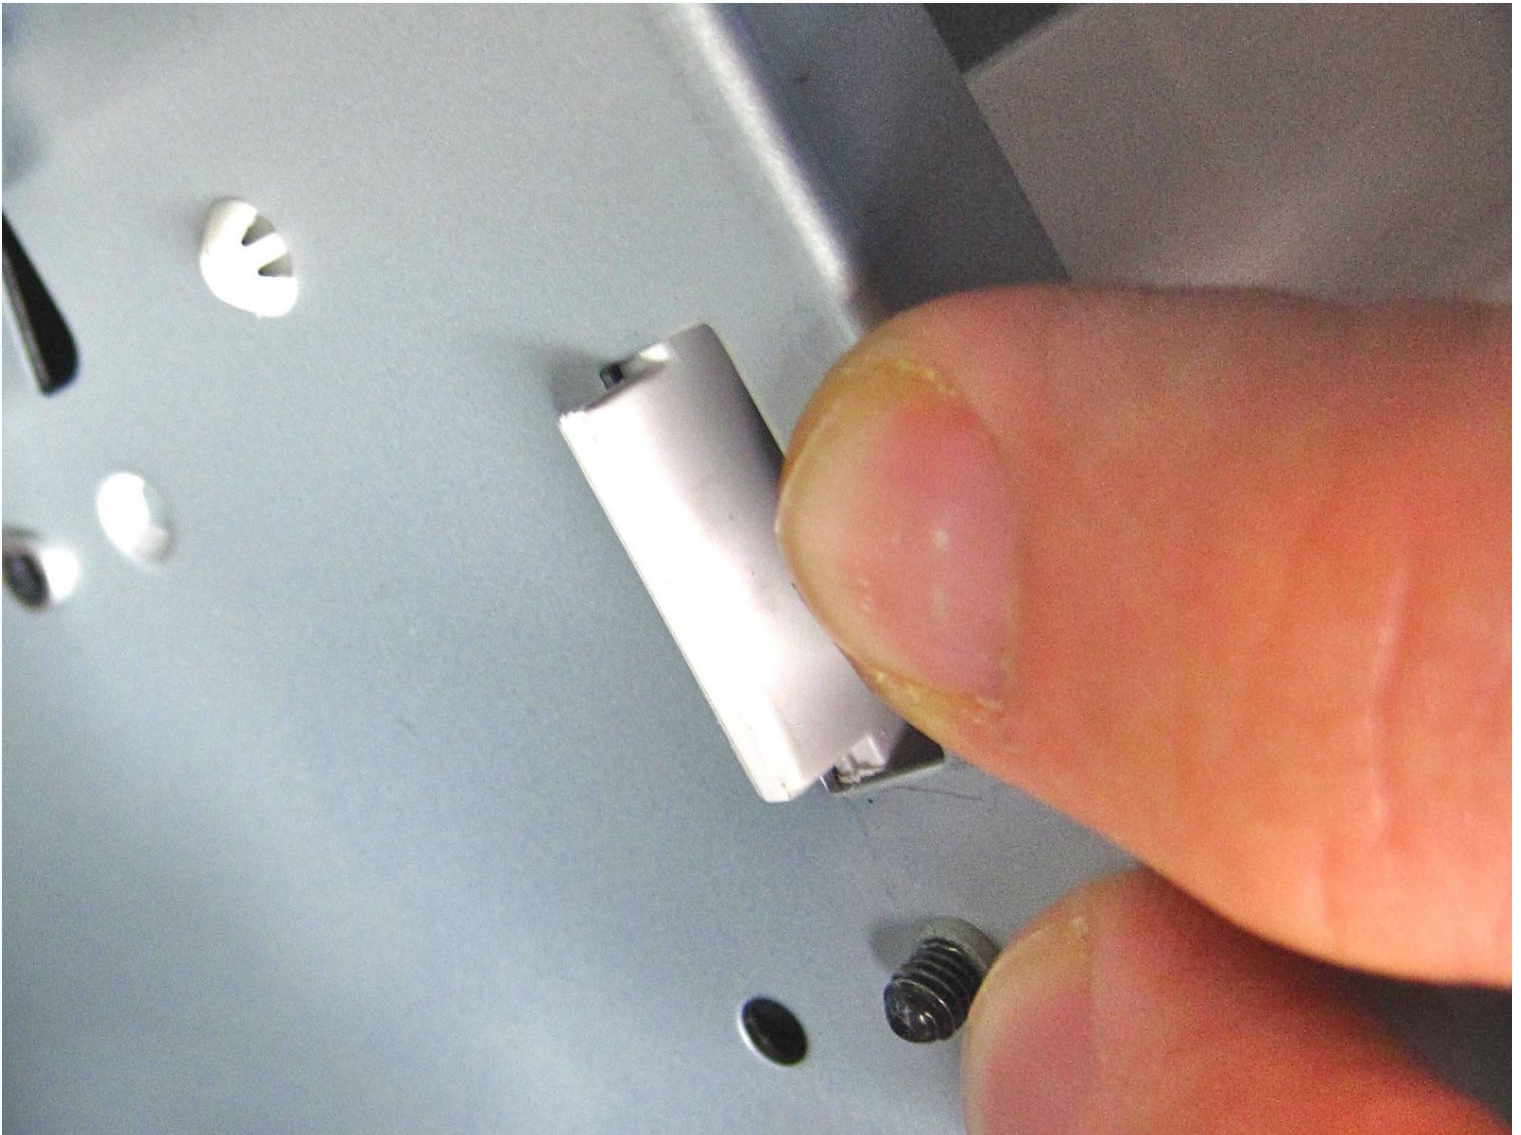

INTRODUCTION

The side paneling is the plastic that protects the inside of the printer. This guide will teach you how to effectively remove the paneling without cracking it.



TOOLS:



Phillips #2 Screwdriver (1)

Step 1 — Canon ImageCLASS MF4350d Remove Front Paneling




- Lift the printer lid up as shown in the photo.

Step 2

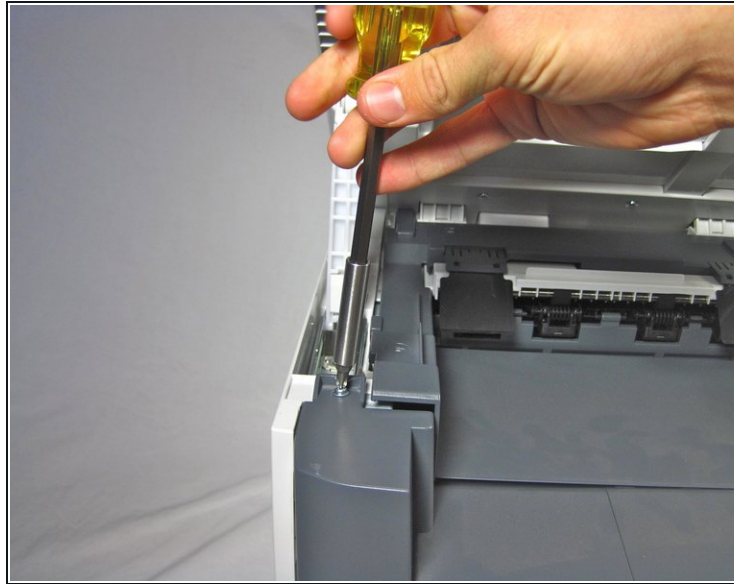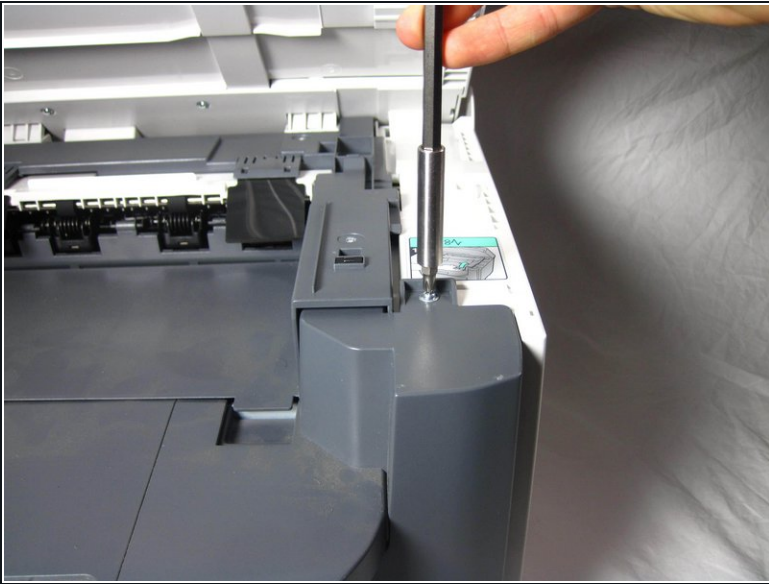



- Locate and remove the two 10mm side screws. There is one on each side.

Step 3

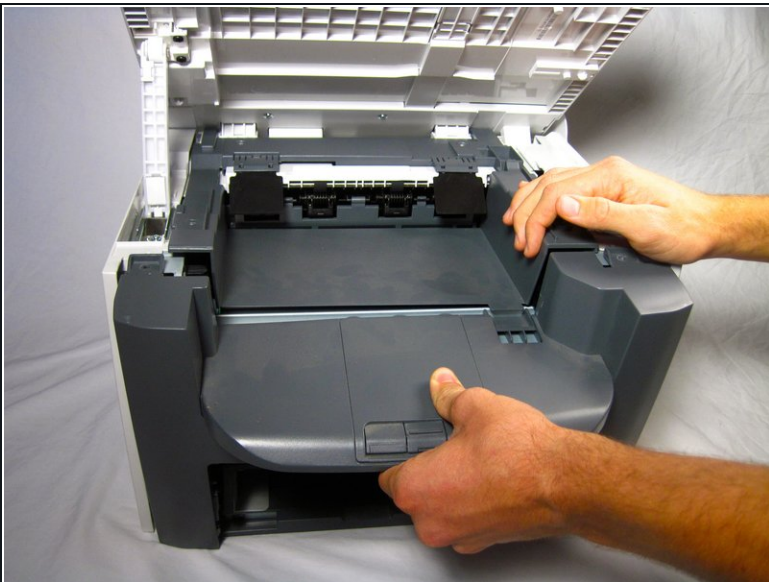

- Unhook the plastic panel from the printer starting from the top.
 - ❗ You may need to wiggle the panel a bit to loosen it.
- To remove the bottom part of the paneling gently lay the printer on its back.
 - ❗ The scanner lid needs to be supported when moving the printer

Step 4 — Canon ImageCLASS MF4350d Remove Right Side Paneling

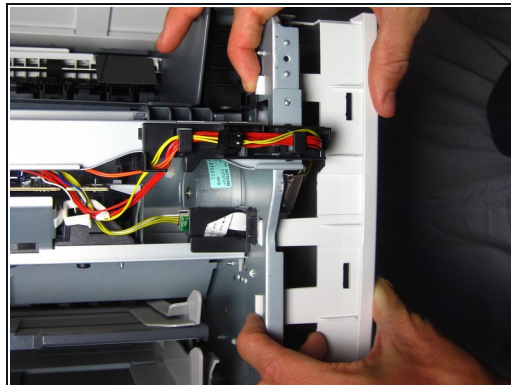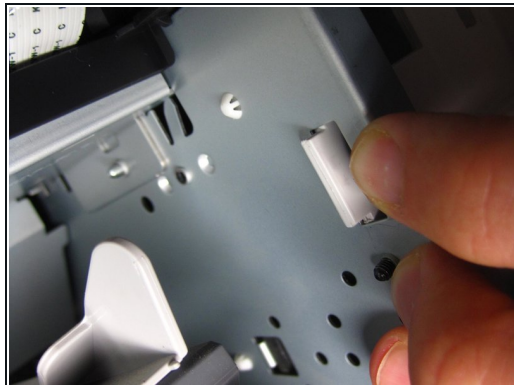

- Gently unhook the right side paneling (as looking at the printer's front face) from the printer.
 - ① Use a gentle back and forth motion to wiggle the hooks out.

To reassemble your device, follow these instructions in reverse order.