



# Replacing Crosley CR704 Needle

Use this guide to replace the needle on your Crosley CR704.

Written By: MarkAnthony



## INTRODUCTION

A worn or damaged needle produces poor sound and destroys records. An average phonograph with a new needle spinning a clean record will produce concert quality sound with little distortion, producing a result very similar to the original.

The NP1 is a diamond stylus needle. The diamond needle is good for about 1,000 hours of playtime. The cartridge is made of durable ABS plastic. The NP1 Stylus needle plays 33 1/3, 45, and 78 RPM records.



### PARTS:

- [NP1 Needle](#) (1)

## Step 1 — Needle



- With steady hands, gently tug the needle from its cartridge pulling downwards.
- ⓘ There will be a slight resistance.

## Step 2



- Secure the new needle by gently snapping it upwards and inwards until it clicks into place.
- ⚠ Be careful not to touch the stylus tip when handling the tone arm. This is what plays your records.

Test by playing a record. We suggest "Revolver" by the Beatles.