



# Crosley CR704 Speaker Replacement

Use this guide to replace a speaker on your Crosley CR704.

Written By: MarkAnthony



---

## INTRODUCTION

When everything is working as it should, the speaker produces nearly the same vibrations that the microphone originally recorded and encoded on a tape, CD or LP record.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Speaker




- Using your Philips head screwdriver, remove the 10 outer black screws from the back of the device.

## Step 2




- Gently remove the back panel of the device being careful not to unplug any internal wires.

### Step 3

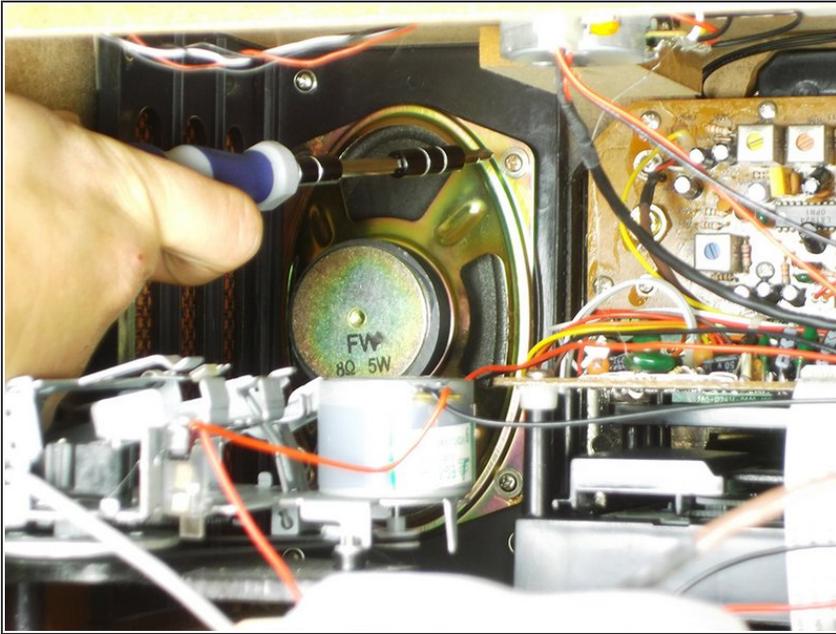

- Using your Phillips head screwdriver, remove the 4 brass speaker screws.
- ⓘ Be careful to not remove the speaker housing screws, which surround the speaker screws.

### Step 4

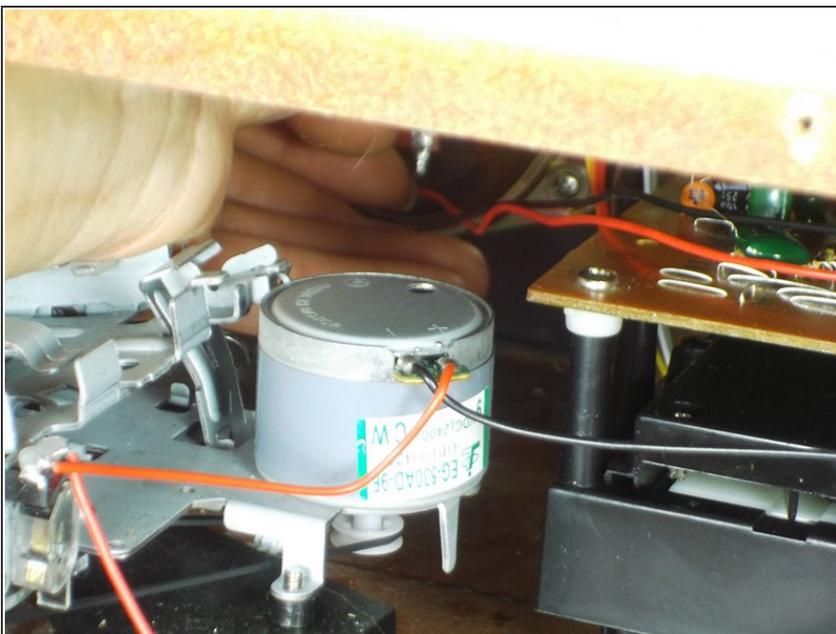

- Carefully pull the wires out of their connections from the back of the speaker.
- ★ Don't forget which wire goes with which connection!

To reassemble, follow these instructions in reverse order. Then test by playing a tune. We suggest "Live at the Apollo" by James Brown.

