



Disassembling Philips Portable Speaker SBA1610 37 Battery Casing

Written By: Christopher Neal



TOOLS:

Phillips #0 Screwdriver (1)


iFixit Opening Tool (1)

Step 1 — Battery Casing





- Remove the back cover by sliding it off.
- Remove the 3 AAA batteries.

Step 2

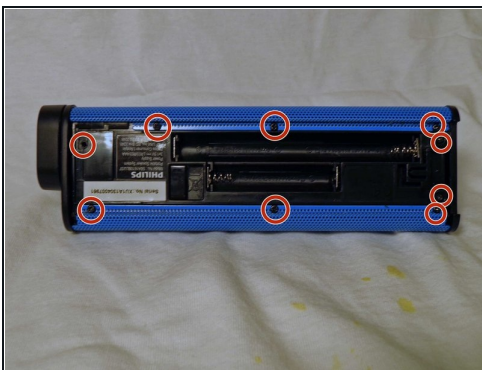

- Unscrew the nine exterior screws on the back panel using a PH0-size Philips-head screwdriver.
 - ⓘ A larger screwdriver head and more force may be required for damaged screws.
- Remove the triangular end piece by pulling it straight off.

Step 3

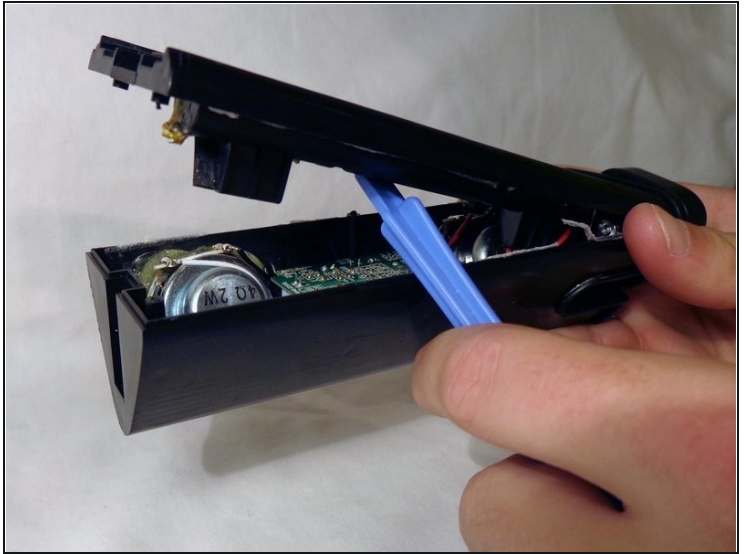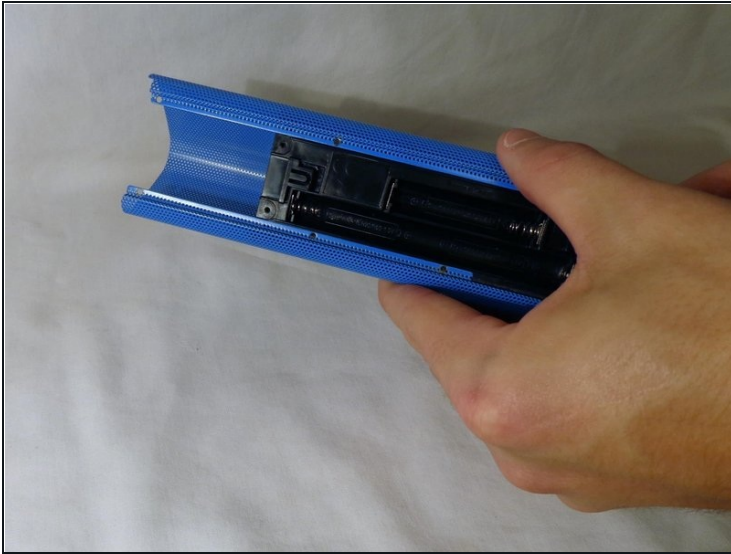

- Remove the colored grill by sliding it off in the direction of the removed end piece.
- Pry off the back battery panel with the plastic opening tool.
⚠ Be careful to avoid tearing any wires.

To reassemble your device, follow these instructions in reverse order.