




# Remove PowerMac G4 M5183 Main Fan

Written By: Justin Petrilli

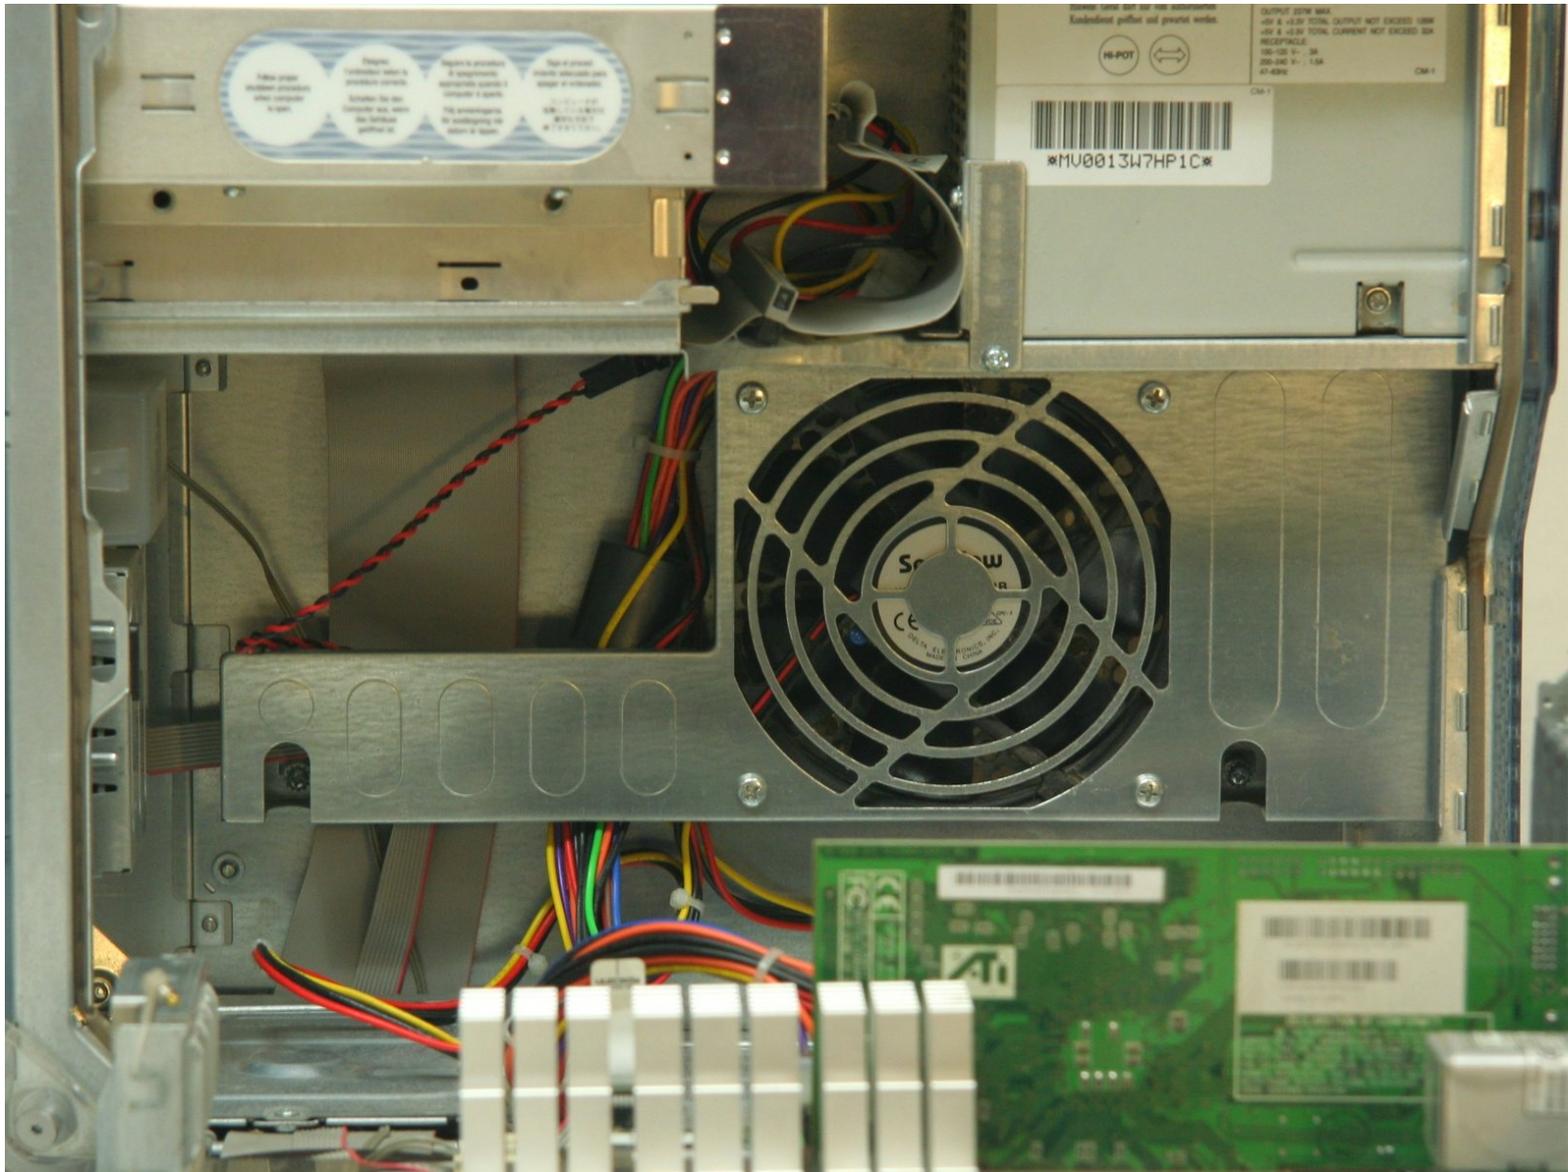

---

## INTRODUCTION


Remove the main fan from the case.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
  - [Spudger](#) (1)
-


## Step 1 — Opening PowerMac G4 M5183 Case

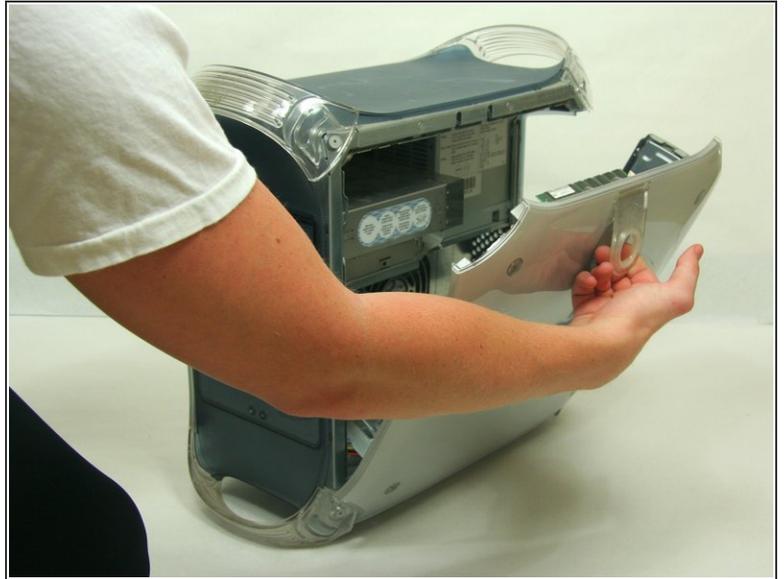

- Pull on outer latch.
- Lower door until it is level with your work surface.


**⚠** Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.

## Step 2 — Main Fan

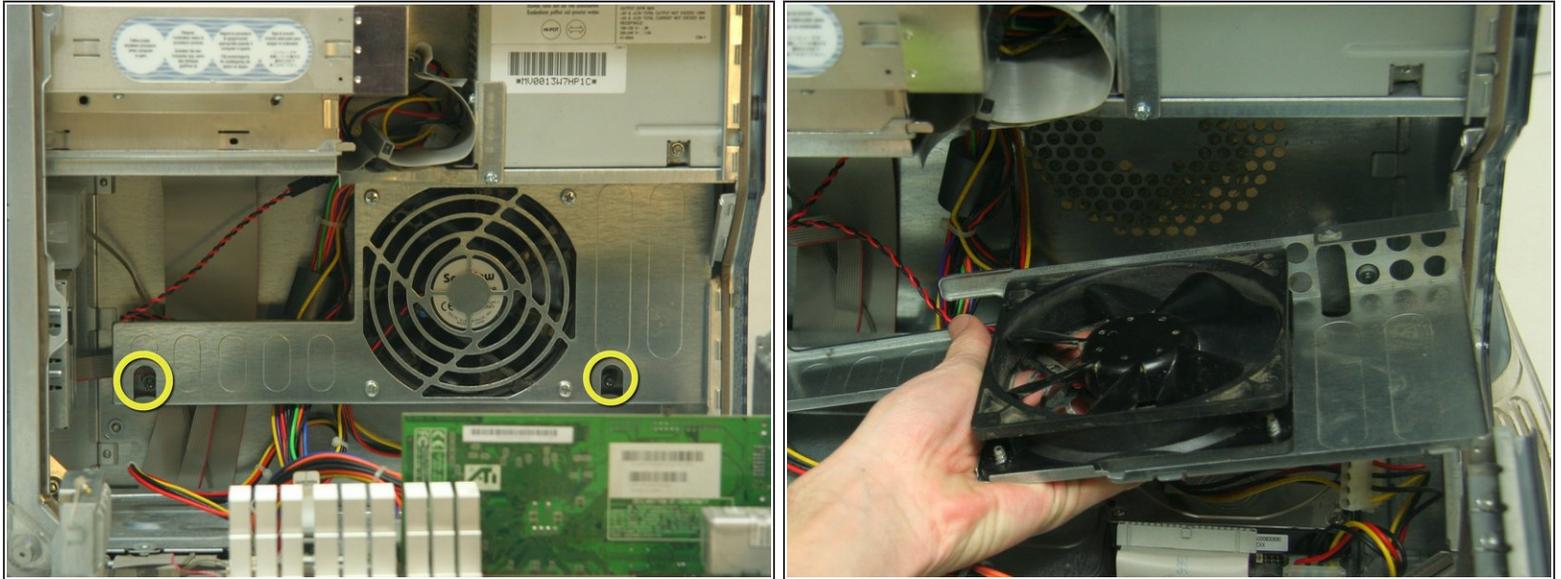

- Remove the screw from each of the two niches on lower part of fan using the Phillips #1 screwdriver.
- ⓘ The fan housing will still be connected to the computer by a power cable which will be removed in the next step.

## Step 3

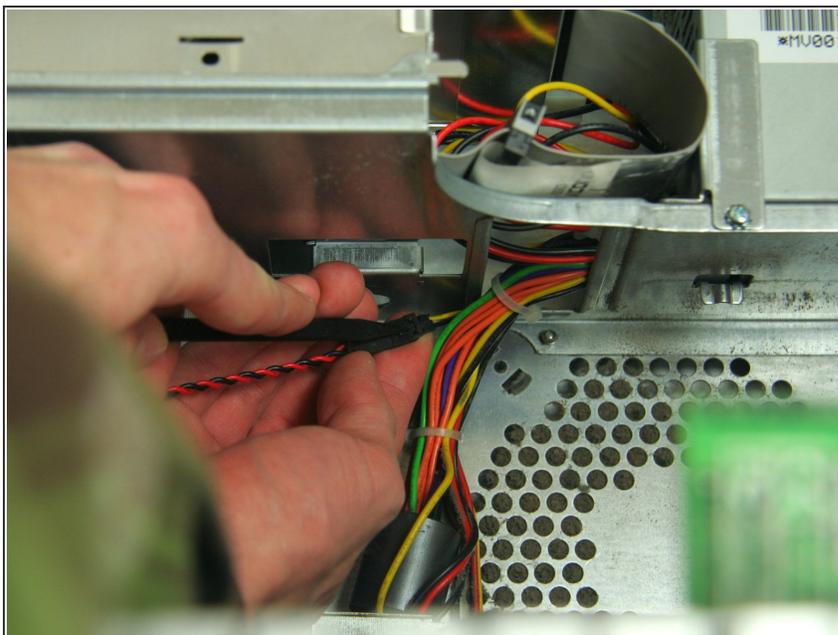

- Remove the power cable from the fan and detach bracing.

