



Game Boy Advance Screen Replacement

Use this repair guide to replace the screen if...

Written By: Adam



INTRODUCTION

Use this repair guide to replace the screen if it has been damaged.

TOOLS:

Phillips #00 Screwdriver (1)

Tweezers (1)

Tri-point Y0 Screwdriver (1)

Step 1 — Game Boy Advance Teardown



- Remove the back battery cover by pinching down on the tab and pulling outward.

Step 2




- Remove the six back panel screws using a Y1 screw driver.

Step 3




- Remove bottom back panel screw with a Phillips #1 screw driver.

Step 4

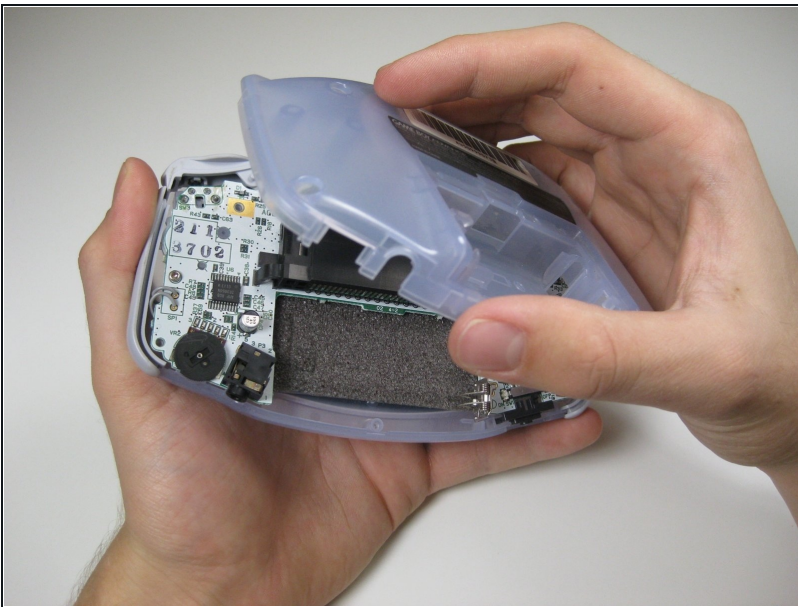



- Remove the back panel by pulling away with one hand and the front secured in the other hand.
- ⚠ Beware of right and left triggers, the right and left panels, and the power switch falling off as the back panel is removed.

Step 5

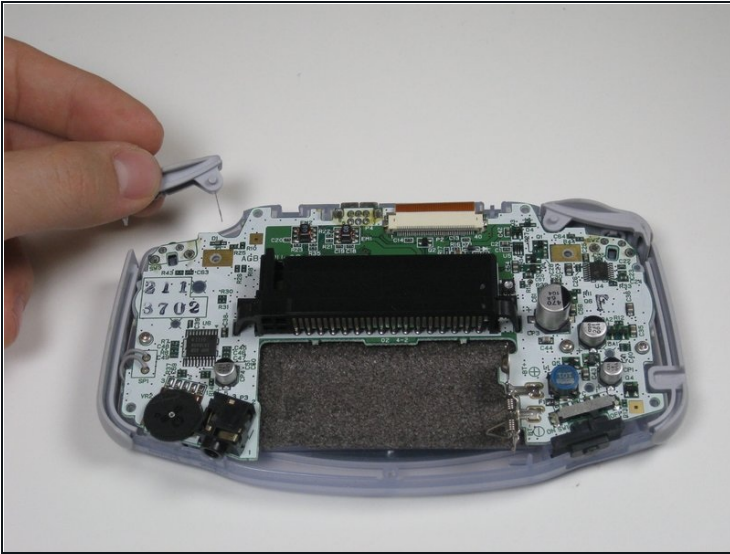


- Remove left and right triggers by lifting and pulling them away from the system.
- Do the same for side panels.
- ① For finicky or jammed triggers only. Adjust and correct triggers and reassemble. Most jammed triggers are caused by buttons misplaced or jammed in its enclosure.

Step 6

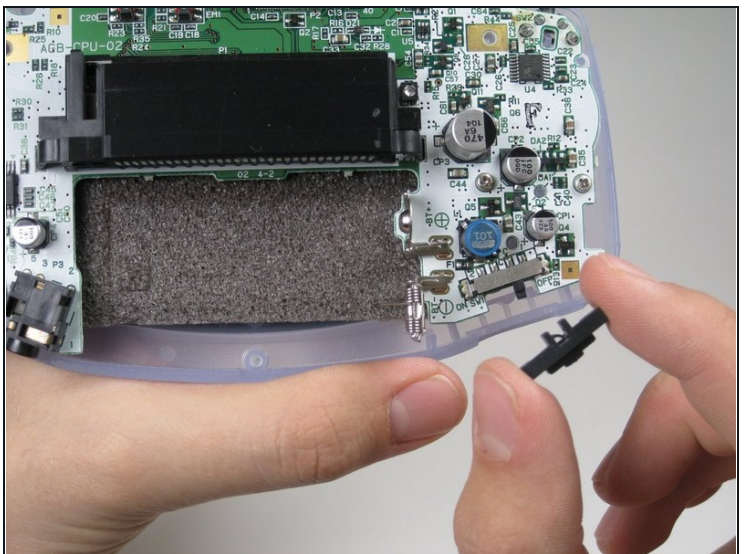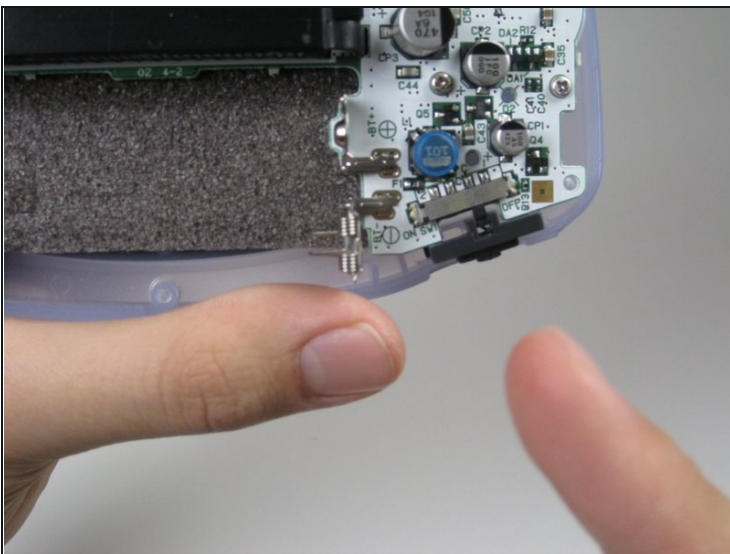


- Remove the gray On/Off Switch by pulling up and away from the unit. Replace with another switch if necessary.

Step 7

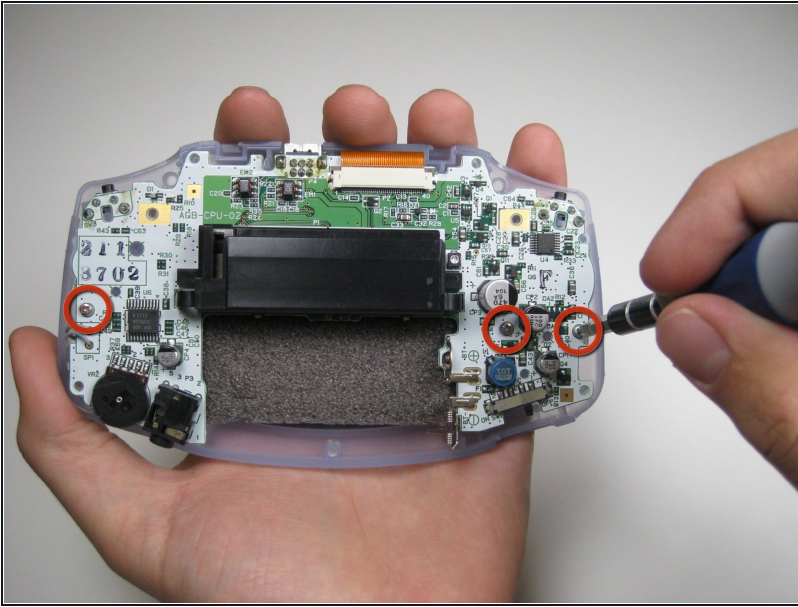

- Remove the three screws on the circuit board with a Phillips #1 screw driver.
- ⓘ The last screw on the right is not included on some Game Boy Advance systems.


Step 8

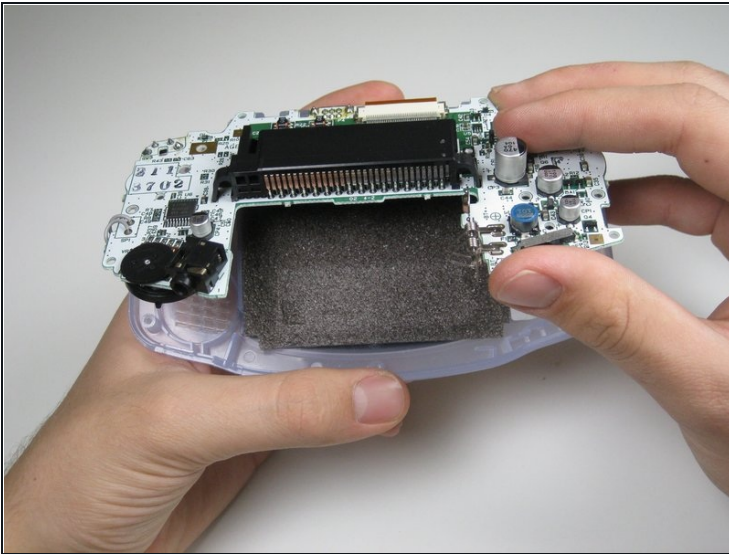

- Pull circuit board away from the front panel by pulling up at the bottom of the circuit board, keeping the top ribbon still connected.


⚠ Beware not to damage the top ribbon by pulling up gently.

Step 9

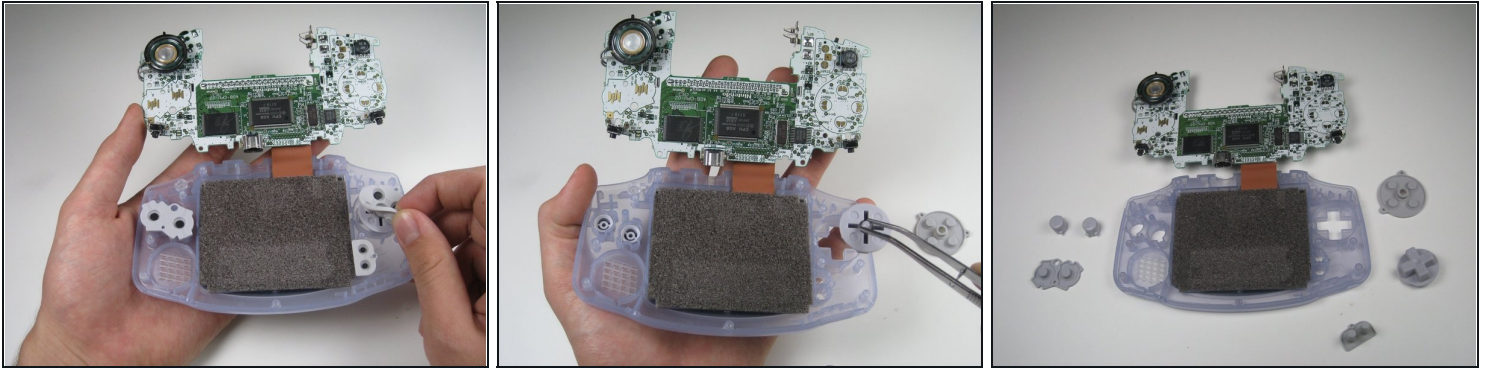

- Remove the rubber button pads from their pockets.
- Remove the plastic buttons and the D-pad from beneath the rubber pads with [tweezers](#) or by hand.

Step 10

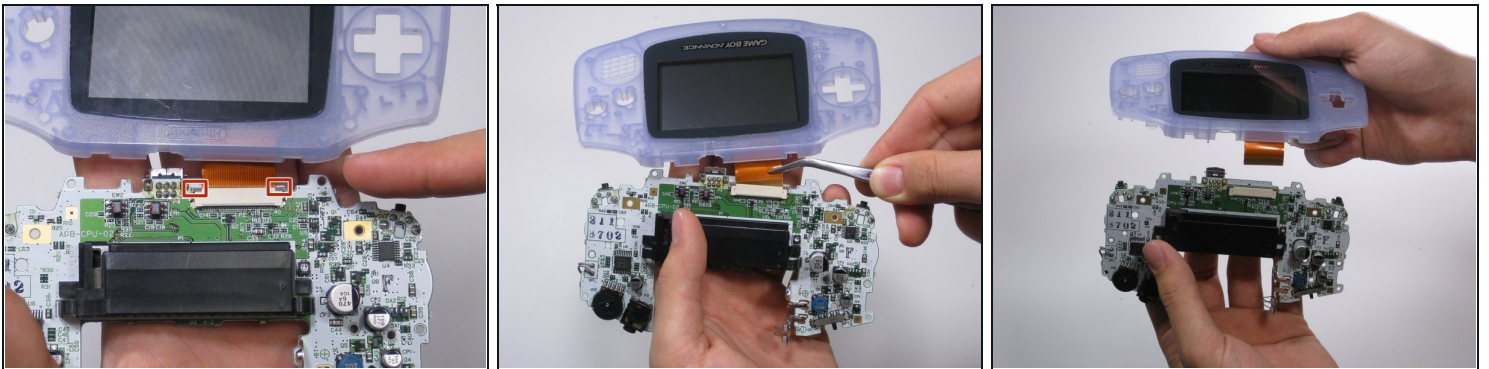

- Use a spudger/tweezers/fingernail to unlatch the LCD ribbon port by pulling the grey tabs on the sides upwards (towards the top edge of the PCB).
- Once the LCD ribbon port has been unlatched, the LCD ribbon should very easily slide out and can be removed with zero force using fingers or tweezers.

Step 11




- Use the spudger to lift the screen from the front panel. Place the spudger in the space directly left of the D-pad.

⚠ The screen and the front panel is connected by a black tape that could rip if not removed carefully.

- ① You can use an iOpener or a hair dryer on the other side of the front panel in order to soften the black tape.

Step 12

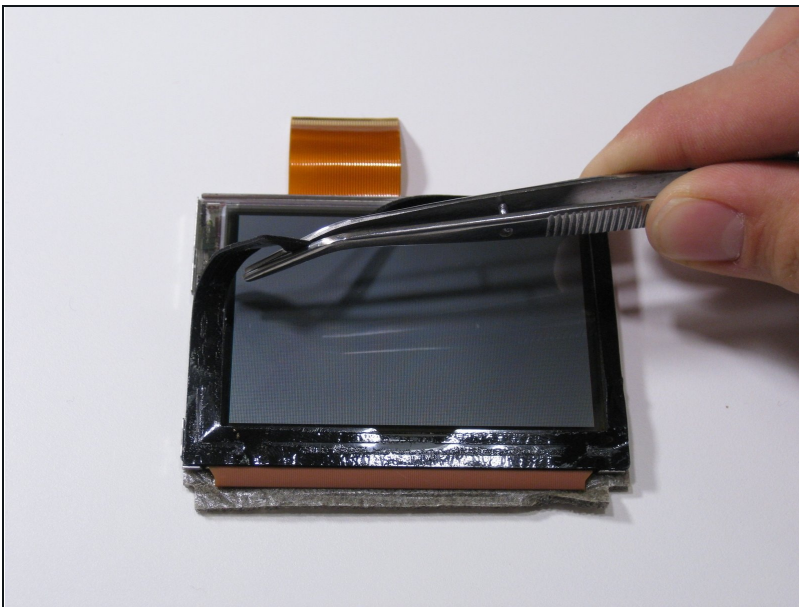

- Use the tweezers to remove the black tape if needed.