



---

## INTRODUCTION

Removing the CPU of the Power Mac G4 Quicksilver for replacement.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Opening the case



- The handle to open your computer is located on top of the right side panel.

## Step 2




- Grab the circular handle and pull outward.

### Step 3




- Your computer is now open and ready for repair.

### Step 4 — Video Adapter

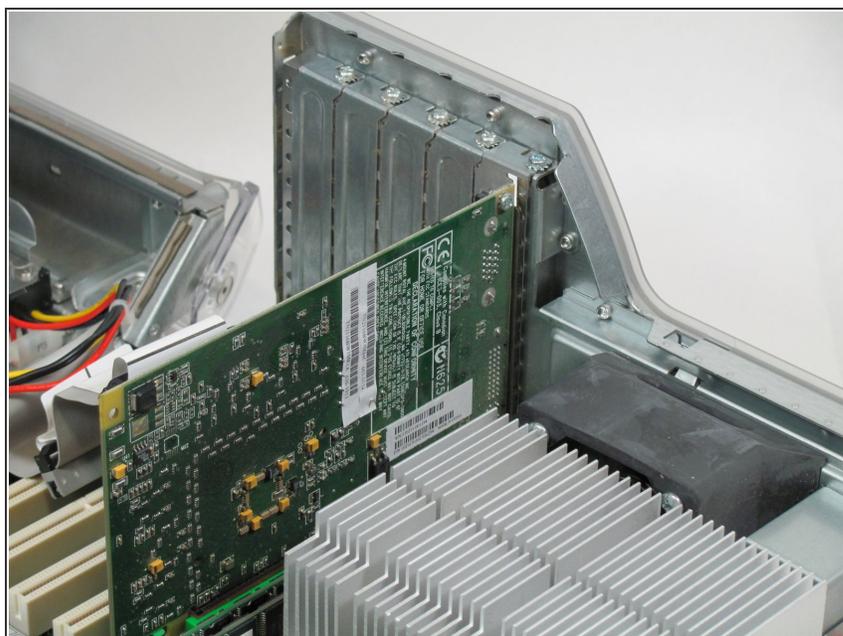


- This is your Power Mac G4's video adapter.

## Step 5

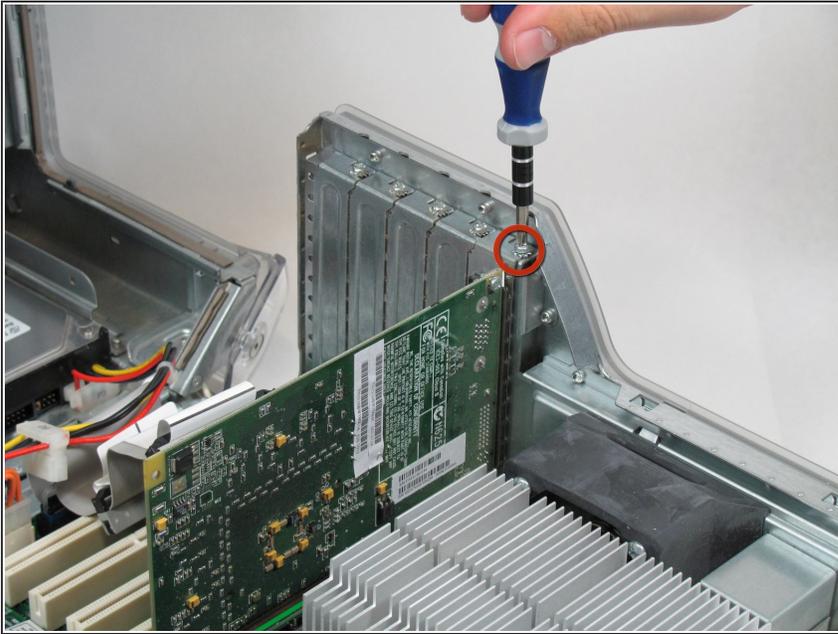


- Start by removing the screw holding the card to the chassis as shown.

## Step 6

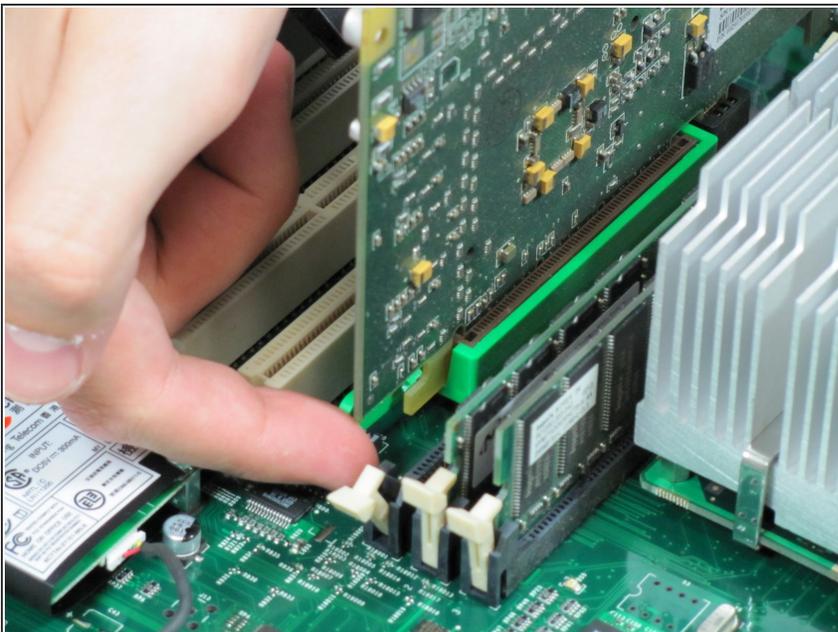

- Before lifting the card out, this small plastic tab needs to be pulled back there by releasing it entirely.

## Step 7

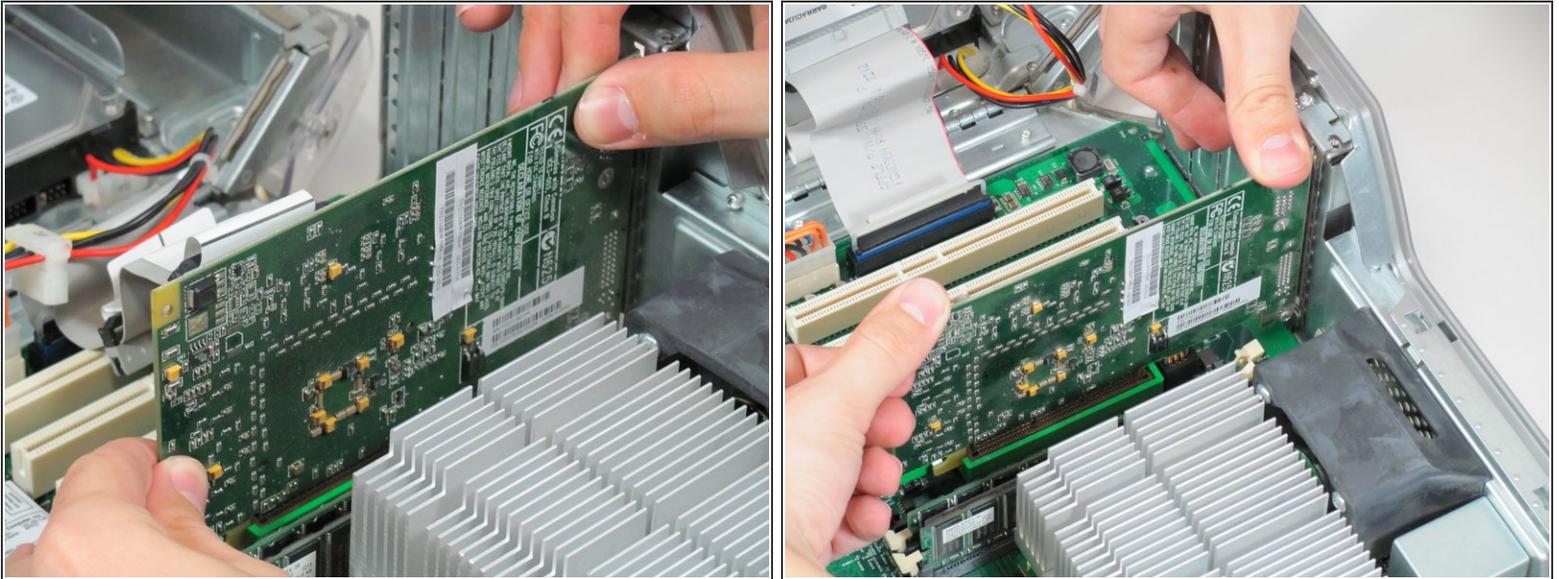


- With the tab and screw removed, lift the card straight out.
- ⓘ When putting the card back in, take care to apply even pressure across the top with your thumbs. This will avoid damaging the card.

## Step 8 — Central Processing Unit




- First you want to remove the fan. Remove the two screws on the back of the computer in the upper left hand corner.

## Step 9

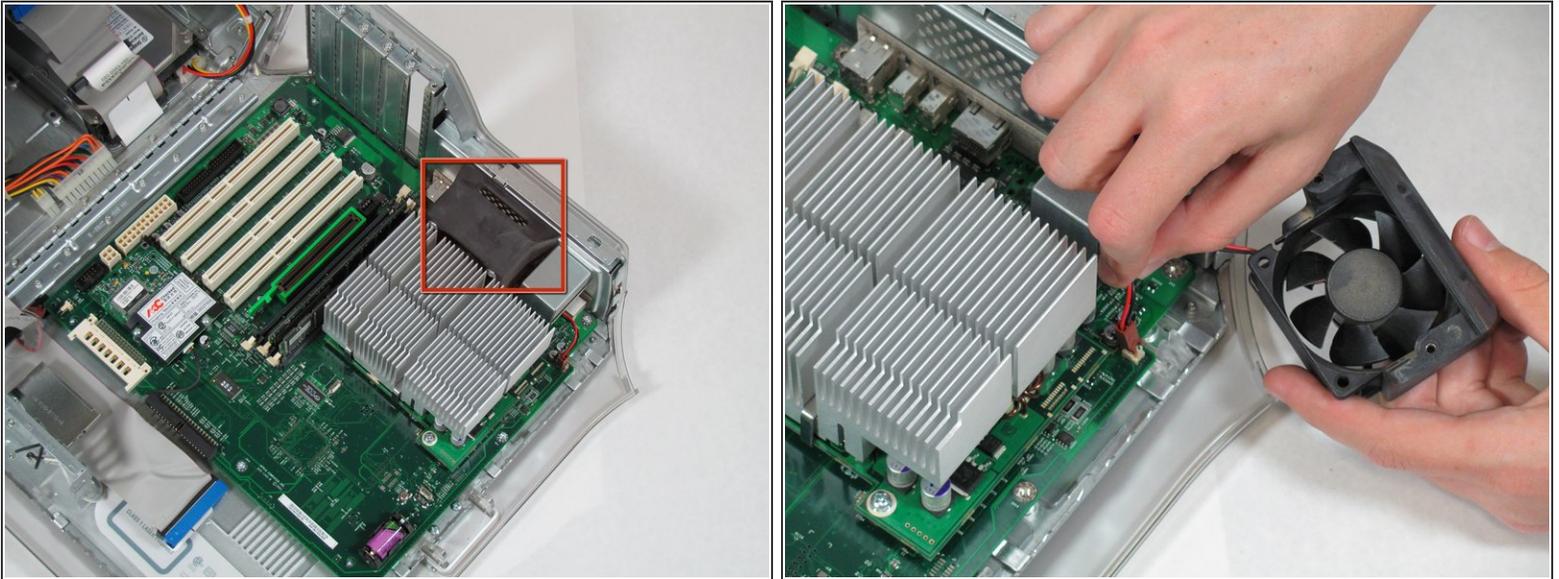


- Remove the fan unit by pulling straight up and out.
- ⓘ Be careful not to rip out the cord still attached to the motherboard. Remove it gently.

## Step 10

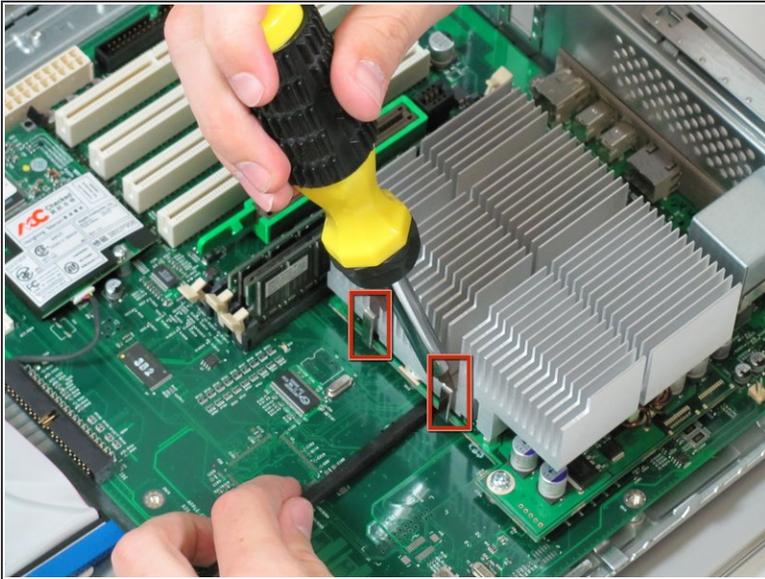

- You need detach the heat sink from the CPU. Locate the four clamps holding it down, two on each side.
- ⓘ Taking off the clamps can be difficult. Use a screwdriver to push down on the top of the clip. Then insert a spudger below the heat sink to pull it away from the board, releasing the heat sink.


## Step 11

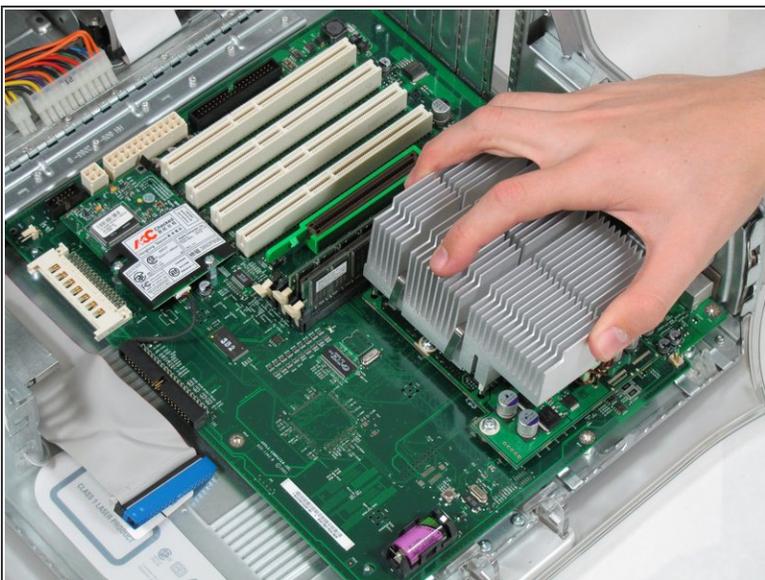

- Pull the heat sink up and off of the CPU.


This document was generated on 2020-11-17 09:24:58 PM (MST).

## Step 12

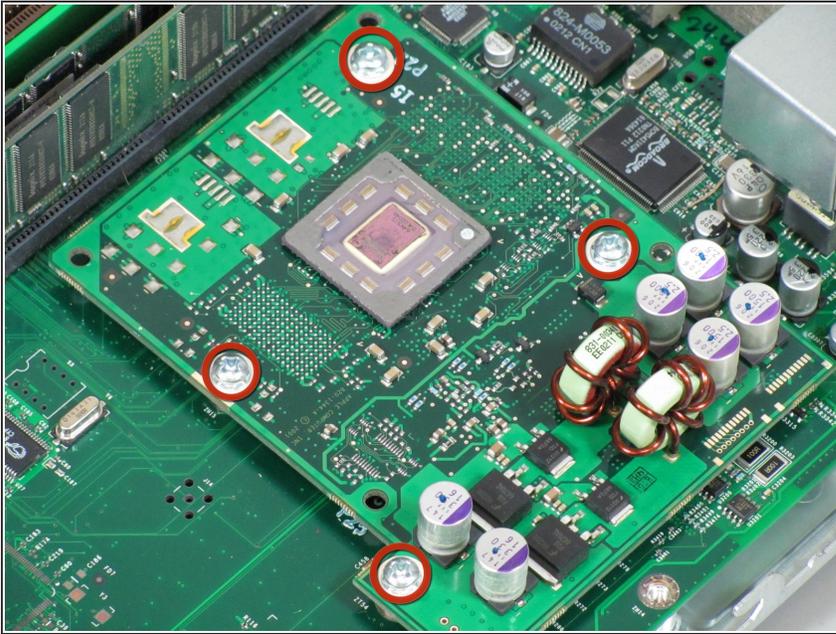

- Remove the four screws holding the CPU to the motherboard.

## Step 13

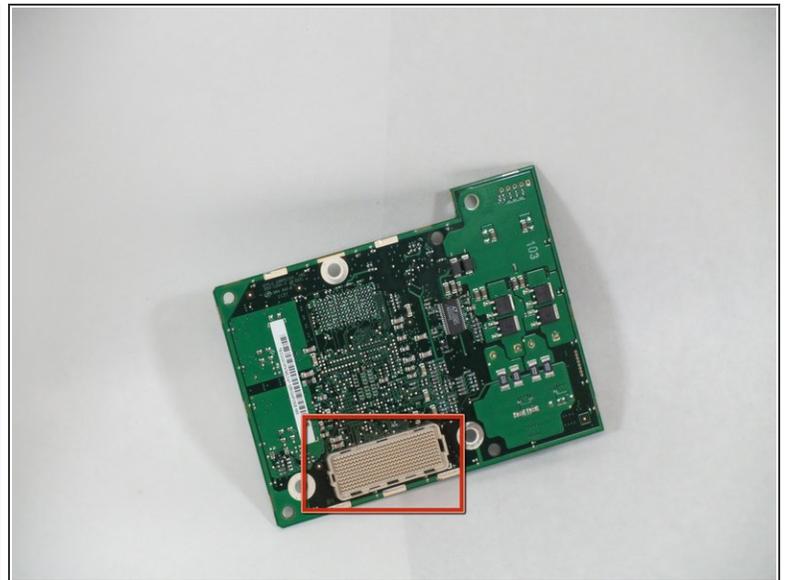

- Now you can remove the CPU by pulling it straight up from the motherboard.

**⚠** Be very careful when you detach the CPU. There is a connector that has hundreds of little prongs. You must not bend or break any of them! Be extremely careful.

## Step 14



- You can now replace the CPU.

To reassemble your device, follow these instructions in reverse order.