




Nikon D40 Lens Mount Replacement

A simple procedure to replace the lens mount.

Written By: Joe Leija

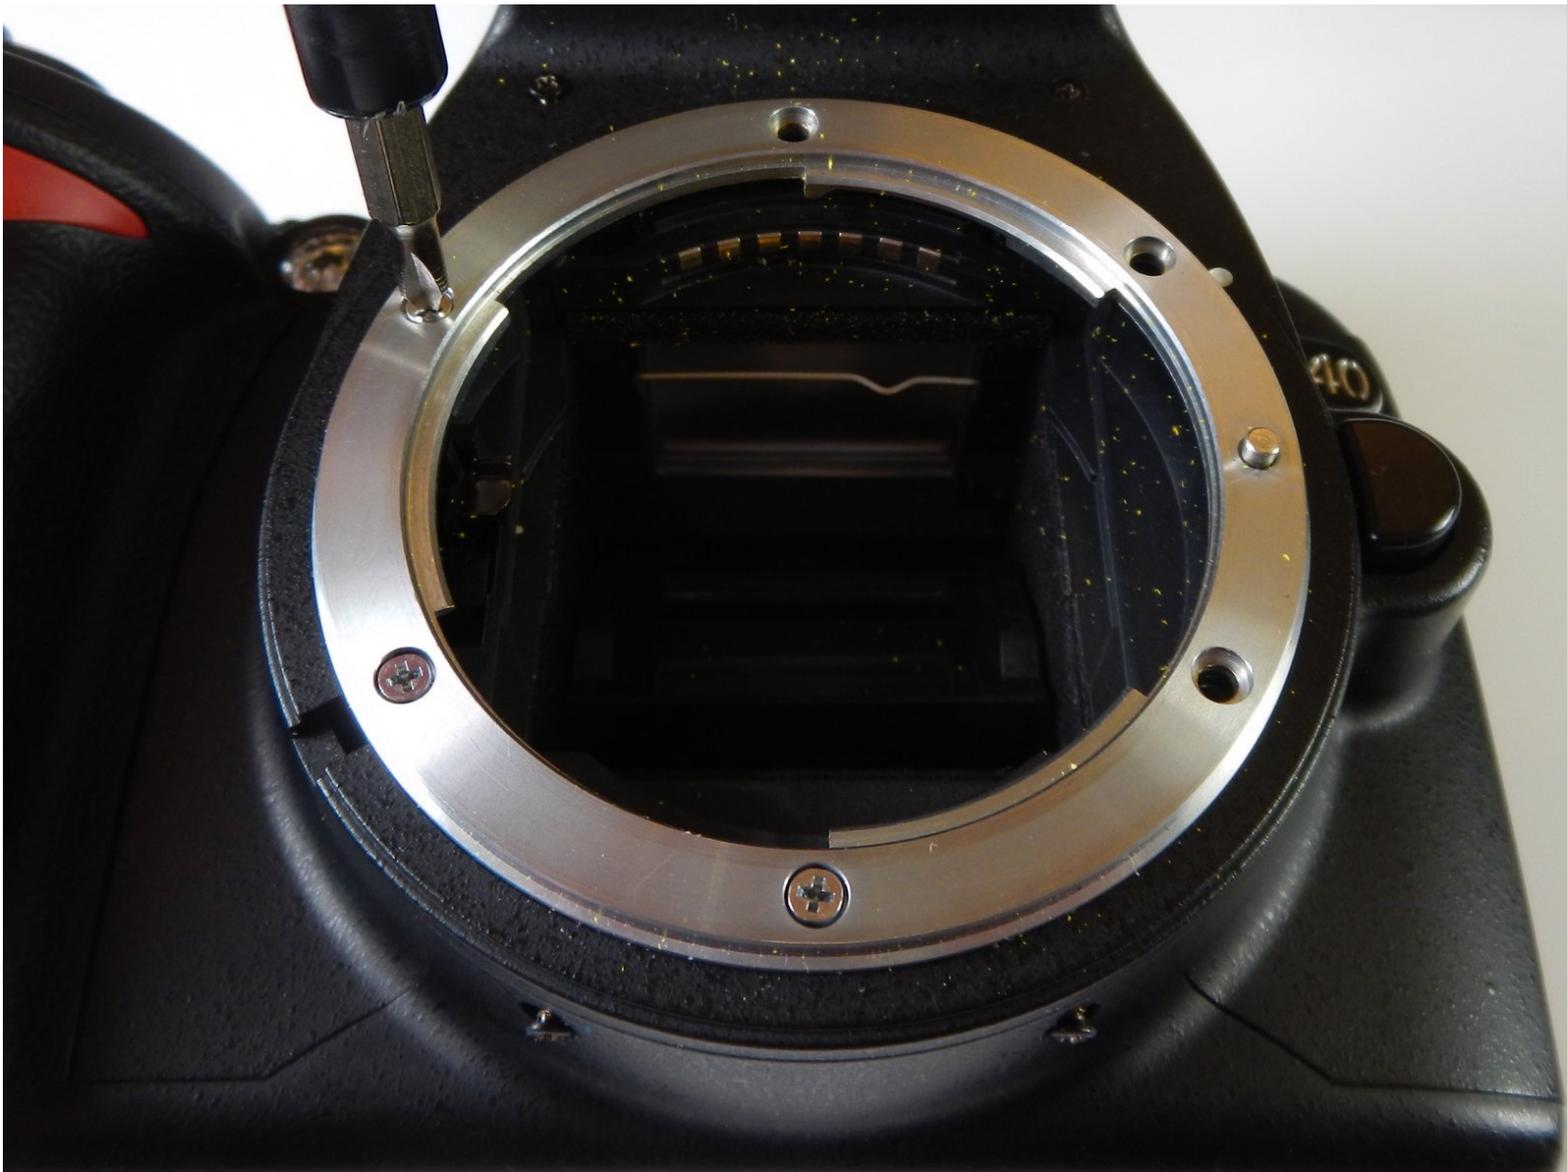


INTRODUCTION

Your lens mount may become unusable due to wear and tear. A simple replacement can make attaching a lens to your camera easy again.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Lens Mount

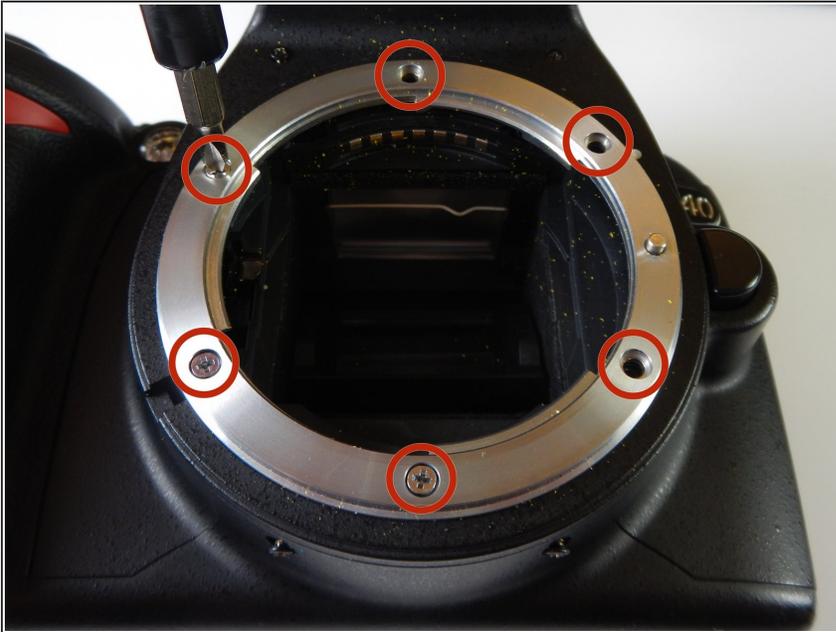

- Remove the six 5.0 mm Philips #0 screws that go through the lens mount.

Step 2



- Once all 6 screws are removed, the lens mount can be gently removed from the camera.

To reassemble your device, follow these instructions in reverse order.