



# Sansa e250 Memory Chip Replacement

Replacing the memory chip on your Sandisk Sansa e250 mp3 player.

Written By: [deleted]





## TOOLS:

- [Tweezers](#) (1)
-

## Step 1 — Memory Chip



- Peel off the small foam rectangle on the back of the mainboard and set to the side.
- Peel off the black tape and set off to the side.

## Step 2



- Gently pry up the memory chip and replace it with the new one.

To reassemble your device, follow these instructions in reverse order.