



# Brother XR-40 Needle Replacement

If a needle loses its point or gets bent, it may need to be replaced. This guide will show you how to replace the needle.

Written By: Kevin Bickers



## INTRODUCTION

Sewing needles can become dull or damaged and need replacement. Fortunately, replacing the needle is quick and easy, and only requires a few simple steps.

## Step 1 — Needle



- Adjust the needle to the top of its stroke using the hand wheel.

## Step 2



- Loosen the needle by turning the knob counterclockwise.

## Step 3



- Remove the needle.

To reassemble your device, follow these instructions in reverse order.