




# Kodak EasyShare C713 LCD Replacement

Replace the LCD in your Kodak EasyShare C713.

Written By: Taggart Ashby

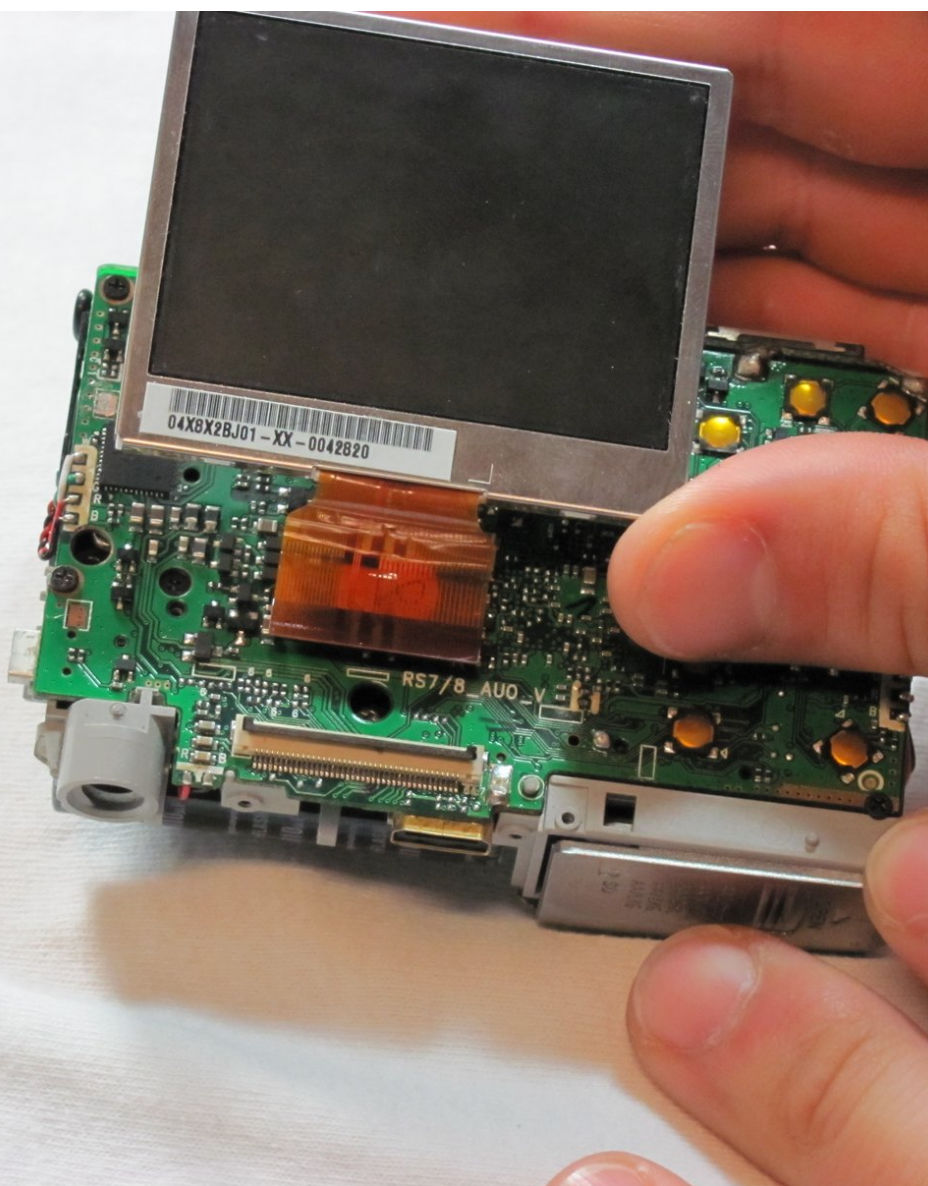

---

## INTRODUCTION

Removing and replacing the LCD and LCD casing.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Soldering Iron](#) (1)
-

## Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
- If this does not happen, gently open the door lifting from the outer bottom side of the camera.

## Step 2



- Remove the old batteries.






## Step 3 — Outer Case




- Remove the seven screws from the outer case with a Phillips #00.
  - All screws are 4.45mm.
  - There are 2 screws on the port side.
  - There are 2 screws on starboard side.
  - There are 3 screws on the bottom.

## Step 4

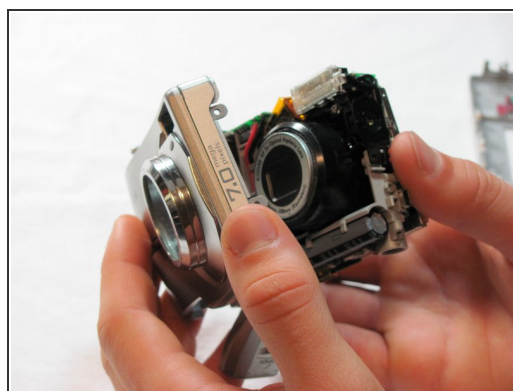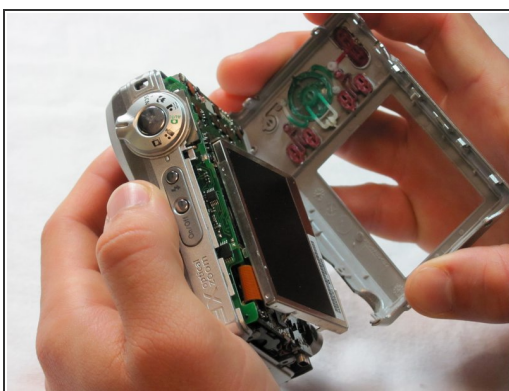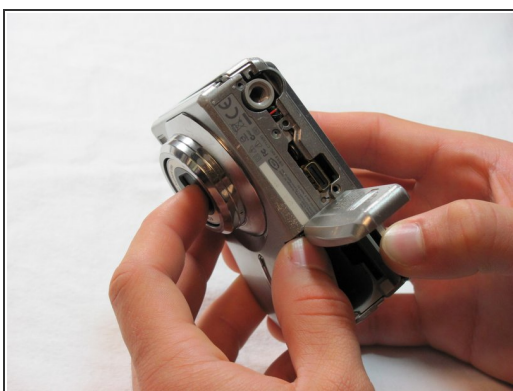

- ⚠ Make sure the battery cap is "up".
- Pull the outer case off with your hands.

## Step 5 — LCD

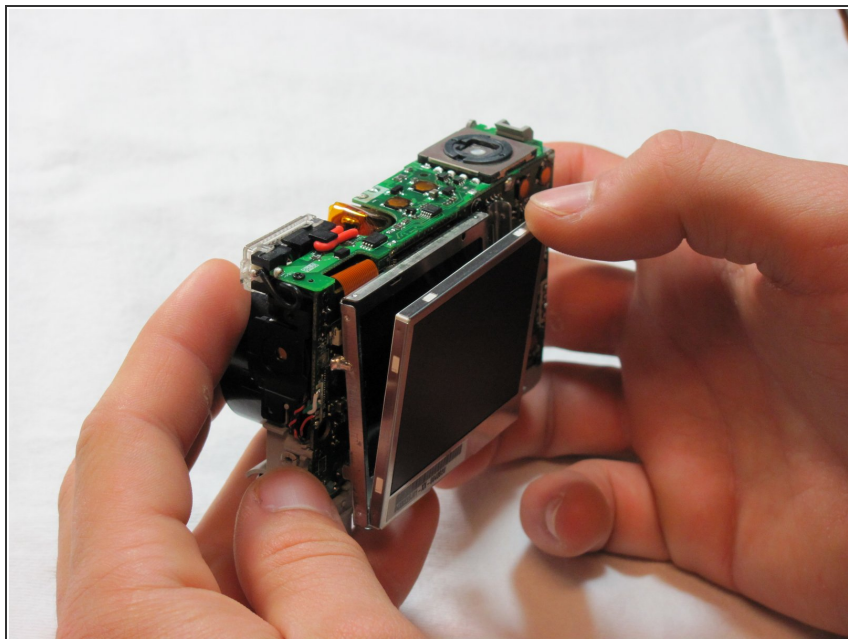

- ❗ The LCD screen is hinged at the bottom.
- Put your thumb in the upper right corner of the LCD screen.
- Pull the LCD screen out of its outer case with your thumb.



## Step 6



- Remove the screw underneath LCD screen with the Phillips #00. The screw measures 4.1mm in length.




## Step 7

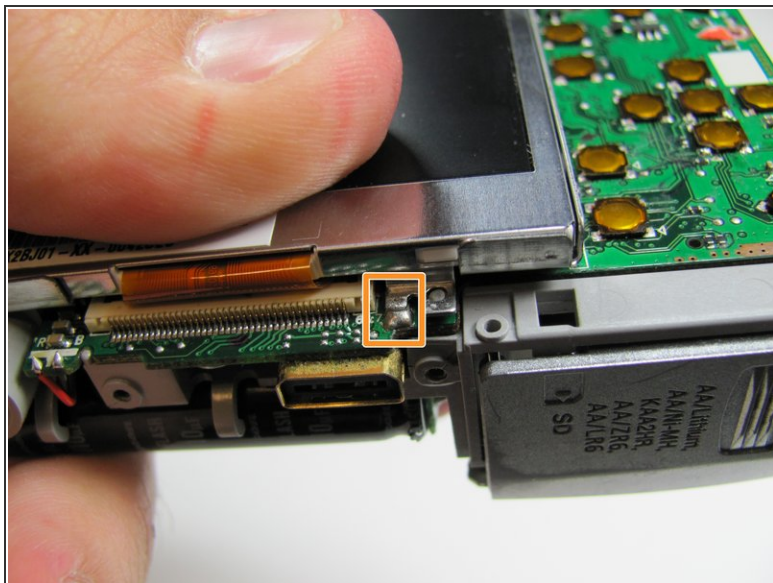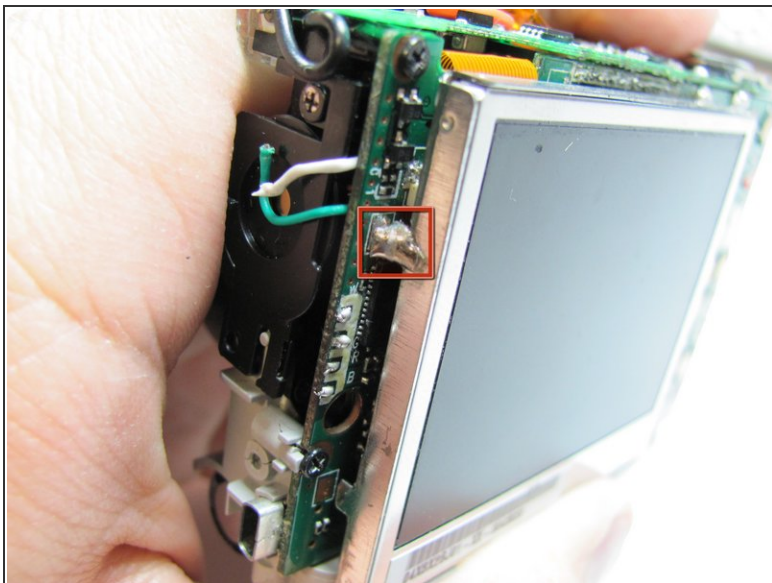

- Desolder the two points.
  - One on the port side.
  - One on the bottom.

## Step 8

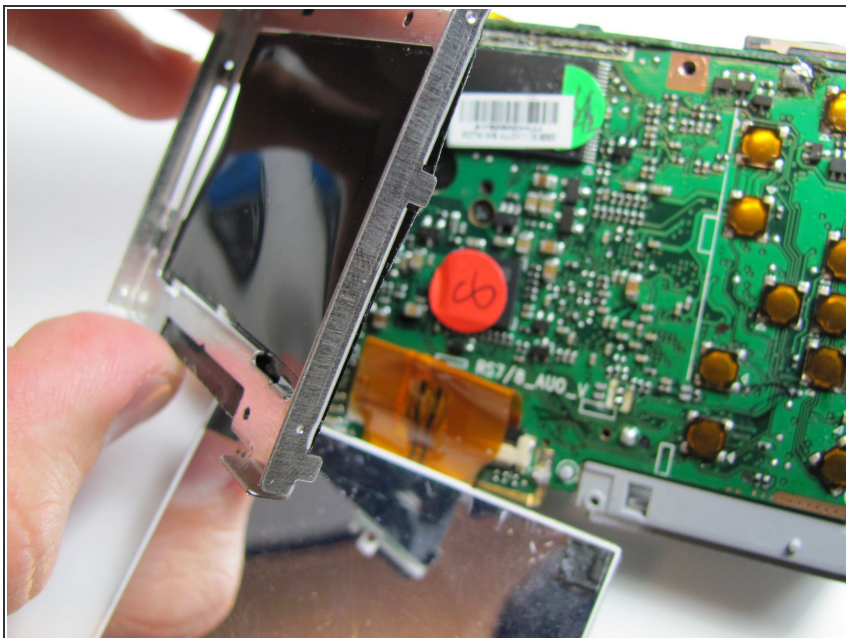


- After desoldering the LCD casing, just use your fingers to carefully remove it.

## Step 9



- Flip up the black tab on the bottom of the LCD screen with a fingertip.

## Step 10

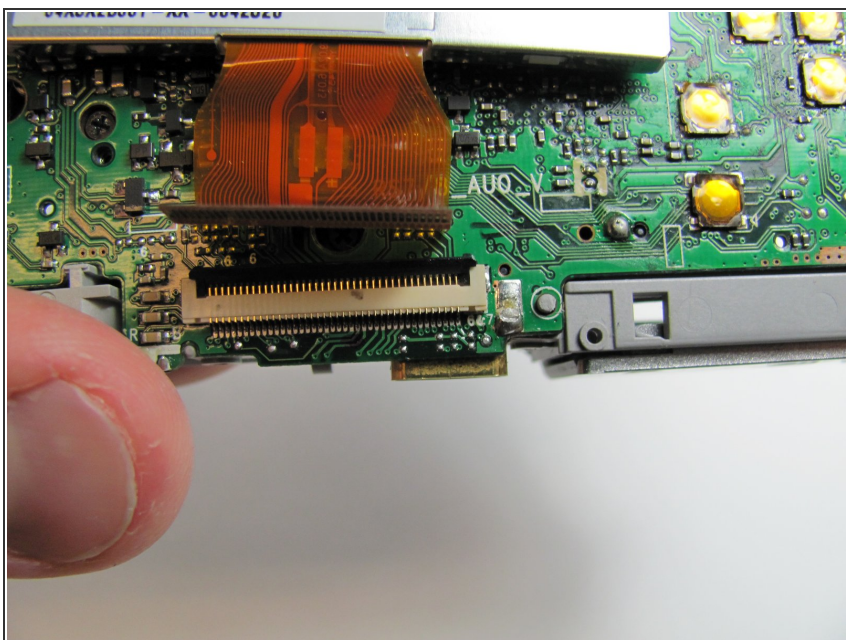

- Remove the LCD ribbon cable from inside the black tab.

To reassemble your device, follow these instructions in reverse order.