



# Dell Inspiron 1545 Battery Replacement

This guide will cover removing the battery from the laptop.

Written By: Nathan Lemay



---

## INTRODUCTION

The battery removal serves as a prerequisite for many of the more advanced guides and thus is a necessary step for all replacement guides.

---



### PARTS:

- [Dell Inspiron 1545, 1525, 1526 Replacement Battery \(312-0625\)](#) (1)
-

## Step 1 — Battery



- ✦ Before attempting to remove the battery ensure that the laptop is disconnected from all power sources and turned off.
- Turn the laptop over to its back.

## Step 2



- Slide the release latch while simultaneously pulling backwards on the battery.

