


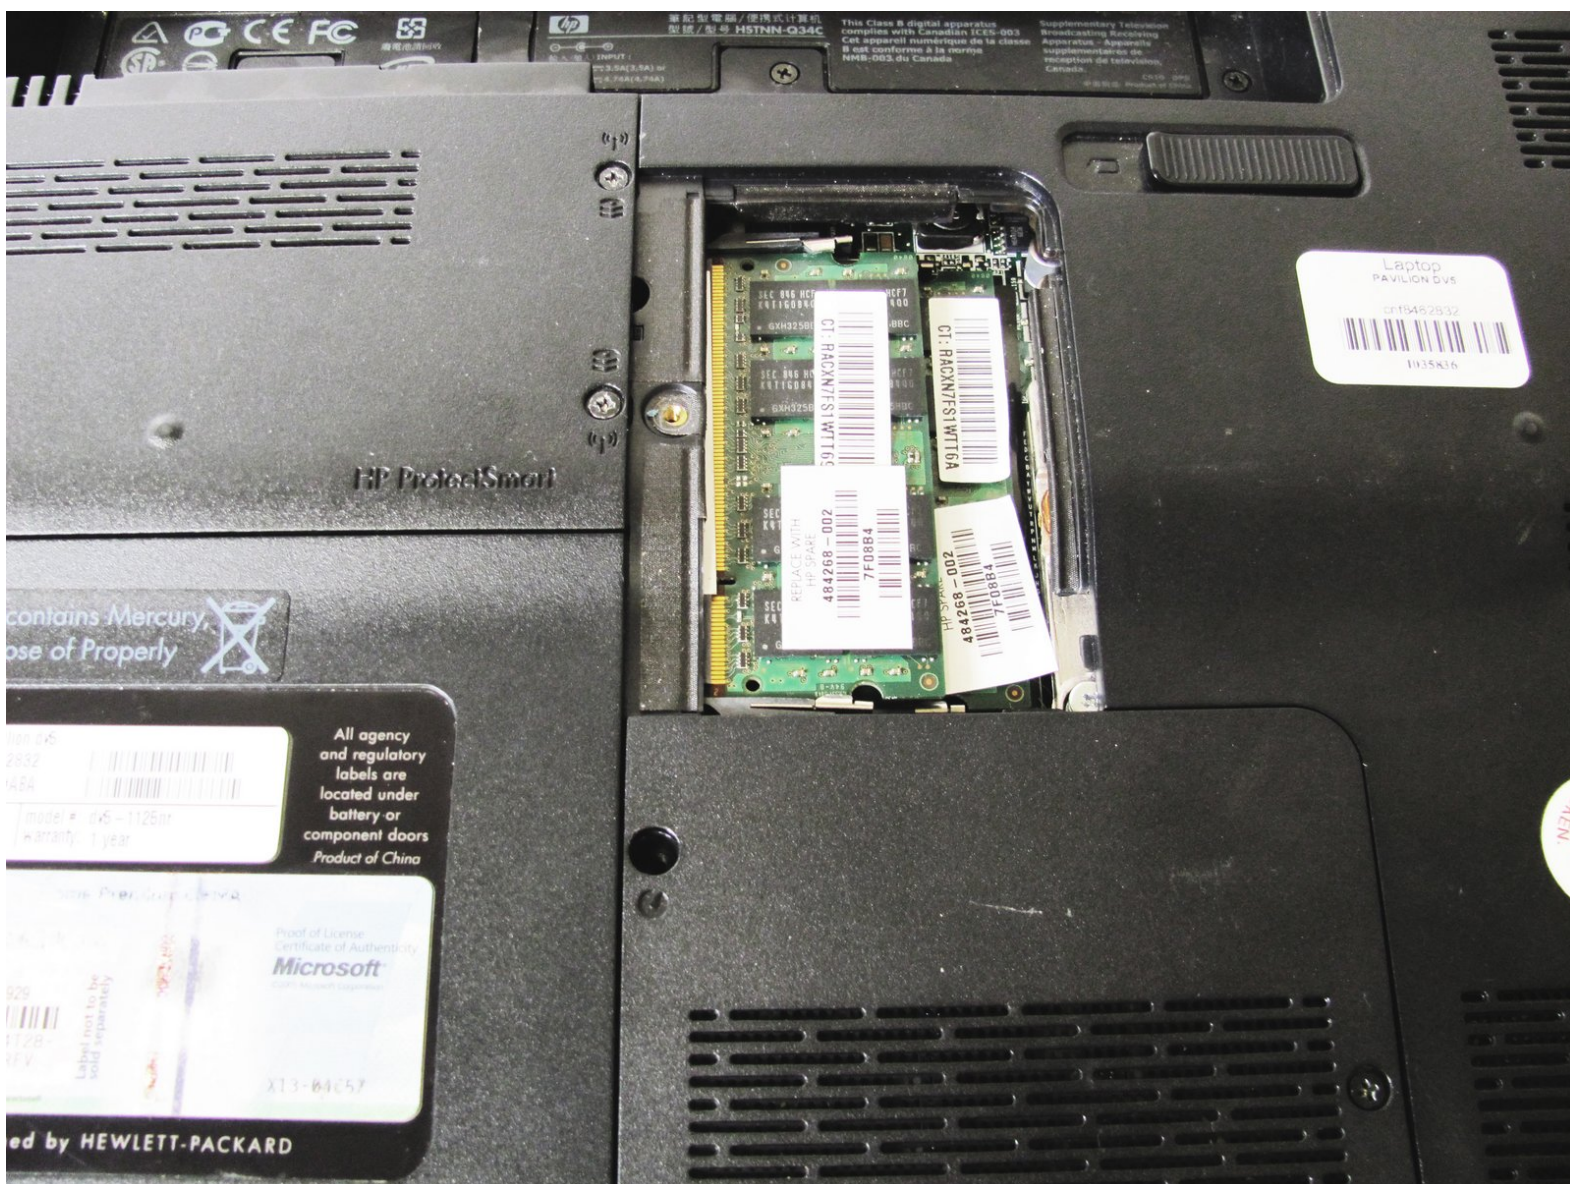

# HP dv5-1125nr RAM Replacement

This guide will show you how to access the RAM.

Written By: Nick Loey



---

## INTRODUCTION


Many laptop issues trace back to a faulty RAM card. Luckily your memory is fairly easy to replace, just follow this guide!

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery

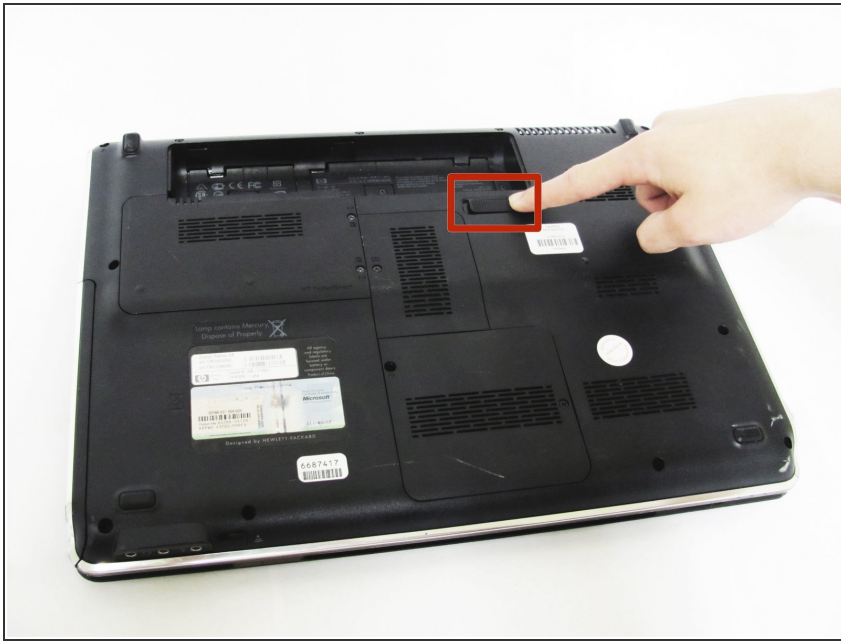

- ❗ Ensure your computer is shut down. Removing the battery while the laptop is still on may corrupt your files. Remove any power adapters and cords connected to the laptop body.
- Slide the switch to the left until the release clicks.

## Step 2

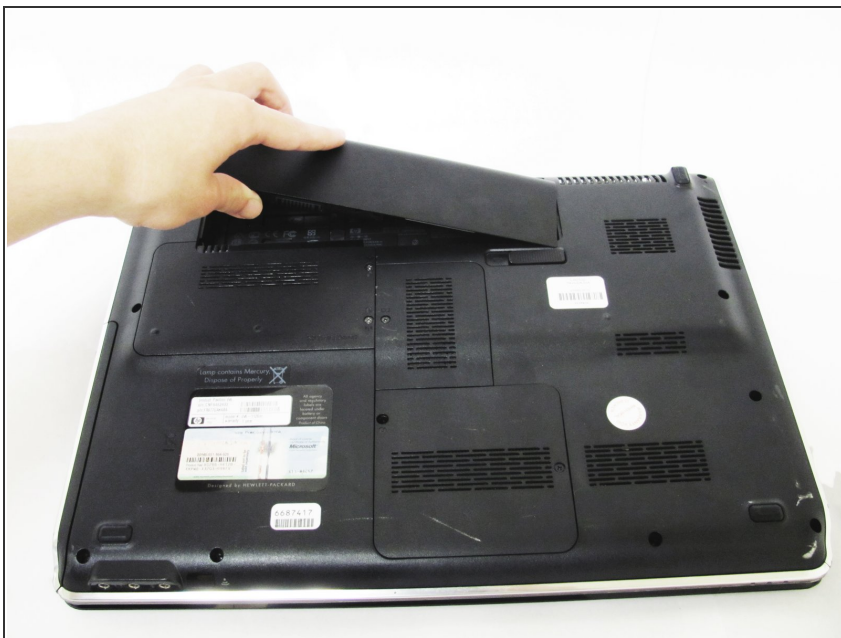

- Remove the battery.
- ❗ The release switch may need to be held down while removing the battery.



## Step 3 — RAM



- Remove the one 4mm Phillips screw from the RAM cover using a Phillips #00 screwdriver.


## Step 4



- Remove the RAM cover to reveal the module's underneath.

## Step 5



 Make sure to ground yourself before touching the RAM modules; they are very sensitive to static electricity.

- Push the two metal tabs on the side of the RAM module outwards, towards the battery and CMOS compartments (up and down).
- Once the module is released, gently pull the module upwards.
- Repeat for the RAM module underneath the first one.

To reassemble your device, follow these instructions in reverse order.