



# Blackberry Storm 9530 Front Buttons Replacement

One of the more daunting features of the phone...

Written By: melanie lim



# INTRODUCTION

One of the more daunting features of the phone to access, this guide will walk you step by step to a successful replacement, repair, or removal of these buttons.


## TOOLS:

[Spudger \(spatule antistatique\)](#) (1)

[Outil pour ouvrir iFixit](#) (1)

[Tournevis Torx T6](#) (1)

## Step 1 — Back Cover Removal

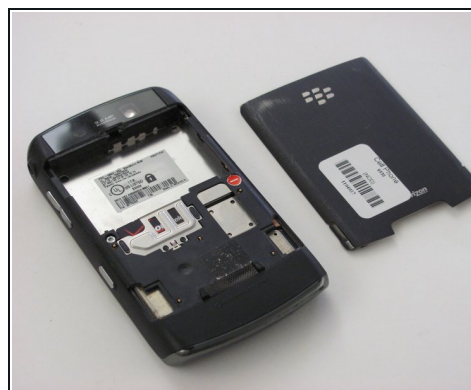


- Locate the two switches toward the bottom corners of the device's back cover.
- Use your thumbs or fingers to push the two switches forward at the same time and detach the back cover from the device.
- Check to make sure the back cover has fully detached from the device. You should be left with two separate pieces: the back cover, and the device with exposed internal hardware.

## Step 2



- Identify that the battery is visible once the back cover has been removed, and locate the battery in the rectangular-shaped top half of the device.
- Pry apart the battery and back of the device using the flat end of your spudger tool or using your finger if you do not have a spudger.
- ⓘ Your battery has a specific orientation resembling a horizontal rectangle. Make sure the gold colored leads are aligned with the gold colored strips on your battery before reassembling.


## Step 3 — SIM Card

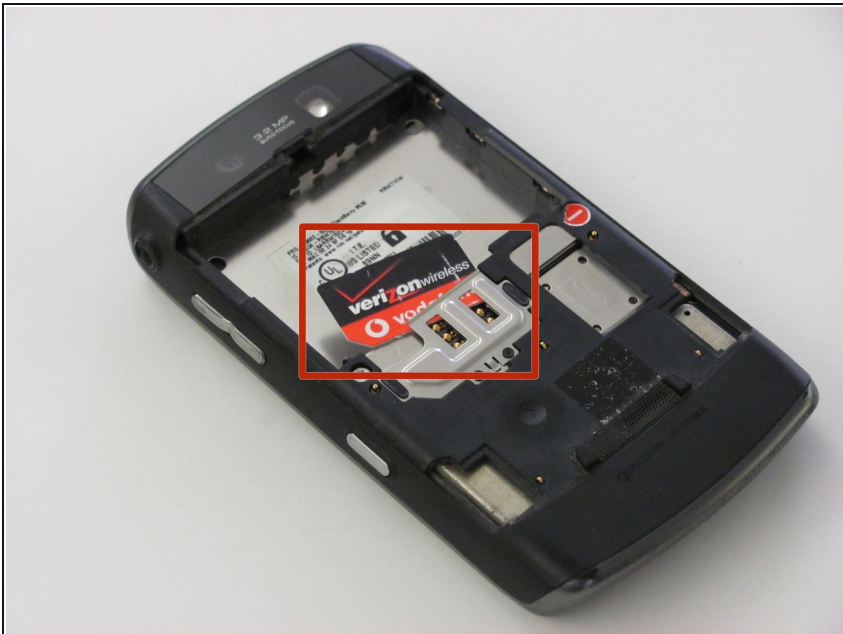

- Locate the SIM card once the battery has been removed. The SIM card is typically located in the center of the phone, and it is secured by a metal tray.



## Step 4

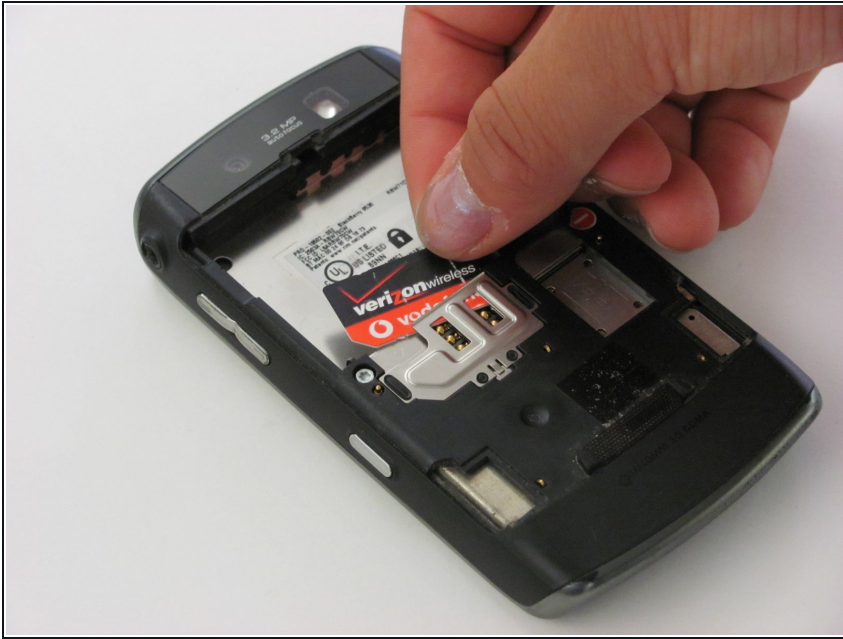


- Remove the SIM card carefully by sliding it upwards out of the metal tray. No tools are needed for this step.
- ❗ Your SIM card has a specific orientation to follow when it is replaced. Make sure the gold colored leads are aligned with the gold colored strips in the SIM card tray before reassembling.

## Step 5 — Back Speaker



- Place the opening tool underneath the camera lens' protective plastic cover and pry them apart with gentle force.
- Make sure the plastic cover has been fully removed by carefully lifting it away from the device with your fingers.

## Step 6

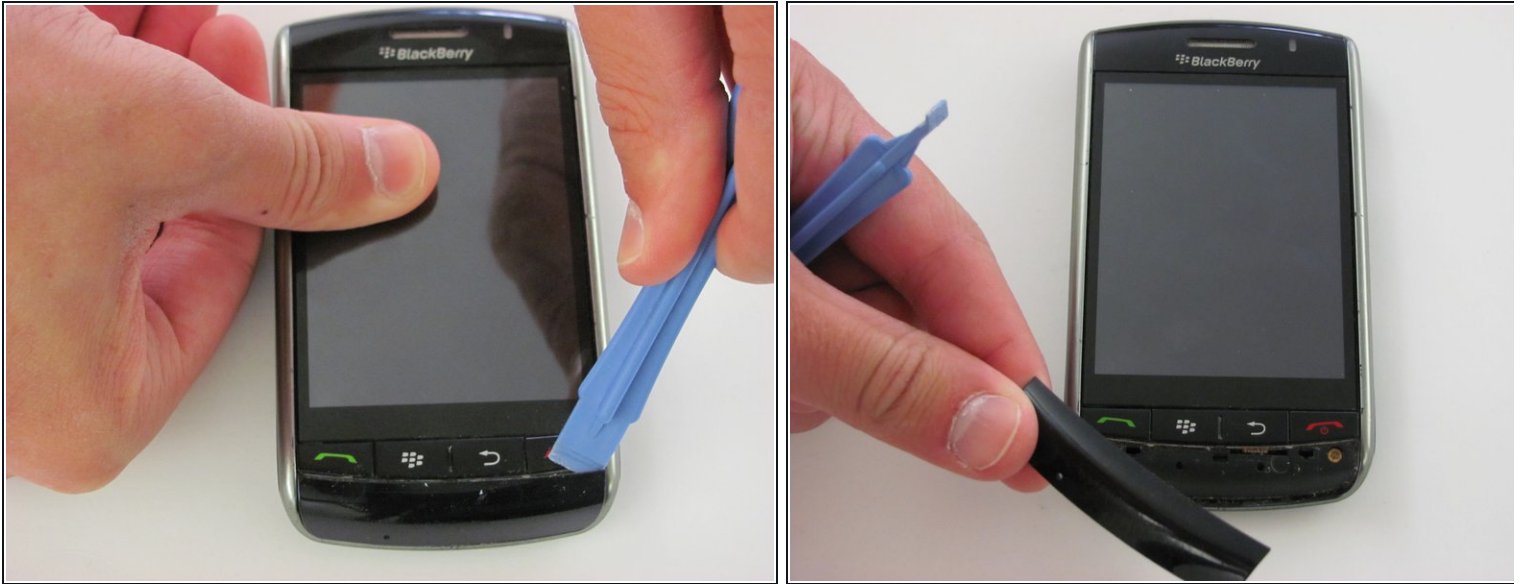

- Flip the device so that the touchscreen and BlackBerry logo is facing you.
- Place the opening tool underneath the front plastic cover located below the buttons with red and green phone symbols.
- Lift and remove the plastic cover once the opening tool is in place. Make sure the plastic cover can be fully detached from the rest of the device.

## Step 7



- Remove the two bronze Torx T6 3 mm screws below the red and green phone symbols.

## Step 8



- Remove the four silver Torx T6 3 mm screws on the back of the device.




## Step 9






- Pry the opening tool into the slit between the two plastic sides of the device to separate the back panel from the front panel.
- Slide the opening tool across the slit until you are left with two, separated front and back panels.

## Step 10

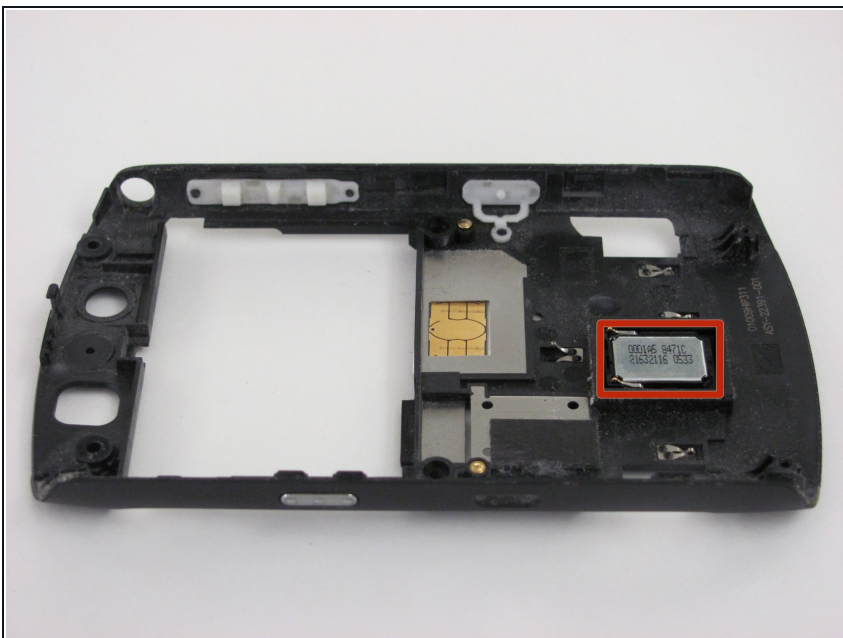

- Locate the silver speaker marked with numbers and letters on the back panel of the device.


## Step 11

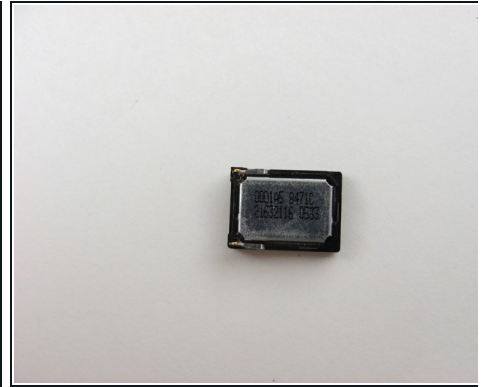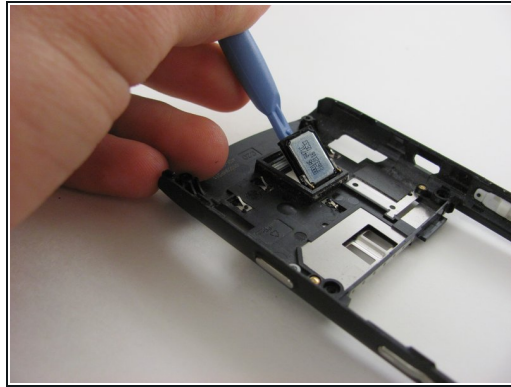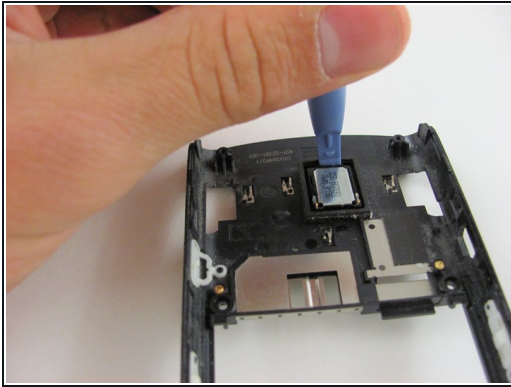

- Place the opening tool underneath the silver speaker component.
  - Use the opening tool to lift the speaker off of the panel with light force.
  - Set the speaker aside once it has been fully removed.
- ☒ When removing speakers, replacing or re-inserting them may result in looseness. This means that during re-assembly they may fall out or shift. An adhesive may be necessary to keep the speaker in place.



## Step 12 — Motherboard

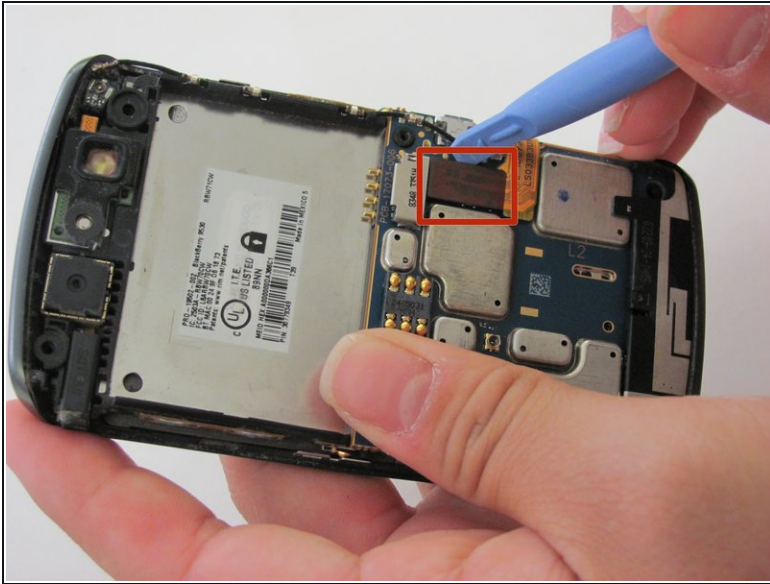


- Locate the red tabbed pin strip connected to the motherboard. The red tabbed pin strip is located on the right-hand side of the back of the phone.
- Disconnect the red tabbed pin strip from the motherboard by inserting the opening tool under the side of the tab and gently pulling upwards toward you.

## Step 13




- Locate the yellow tabbed pin strip which is directly next to the original location of the red tabbed pin strip.
- Disconnect the yellow tabbed pin strip from the motherboard using the same technique used to disconnect the red tabbed pin strip in the previous step.

## Step 14

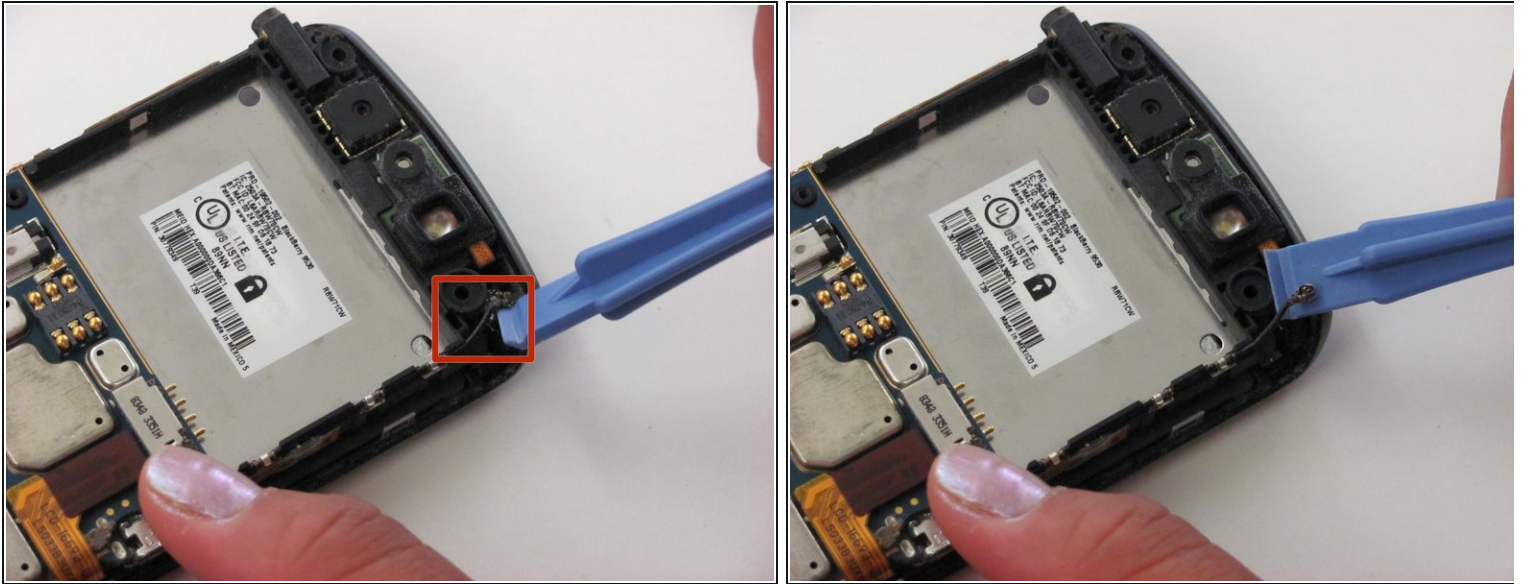


- Disconnect the antenna cable located at the top right corner of the black panel using the opening tool.
- Insert the opening tool underneath the side of the antenna connection, and gently pull upwards to disconnect the cable.

## Step 15

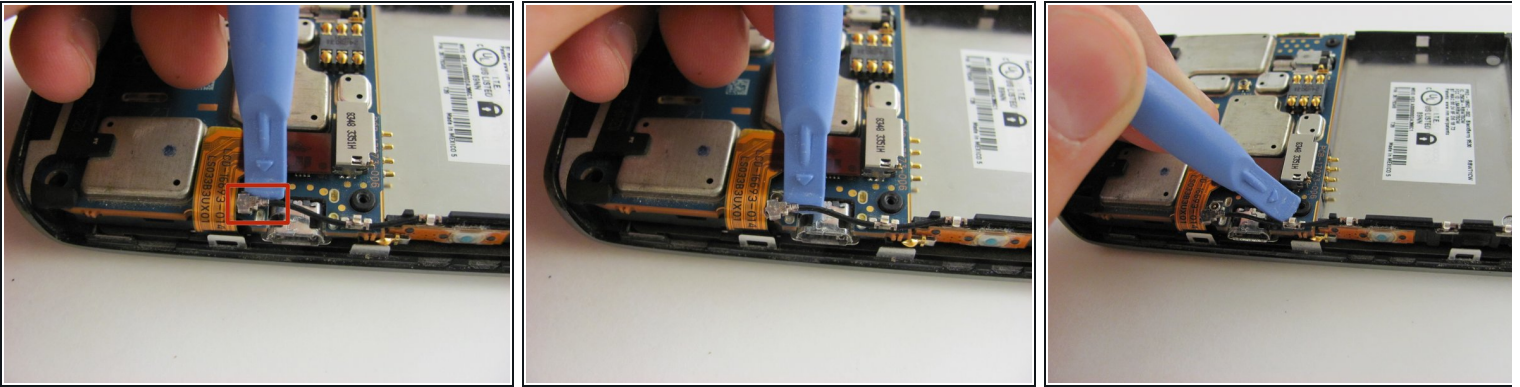

- Locate the second antenna connection toward the middle right area of the back panel. It is found in the corner where the red and yellow tabbed pin strips met.
- Remove the antenna connection using the same method done in the previous, top antenna removal step.
- Loosen the bottom metal cable grip (which pins down the cable) to separate the antenna from the motherboard entirely.


## Step 16

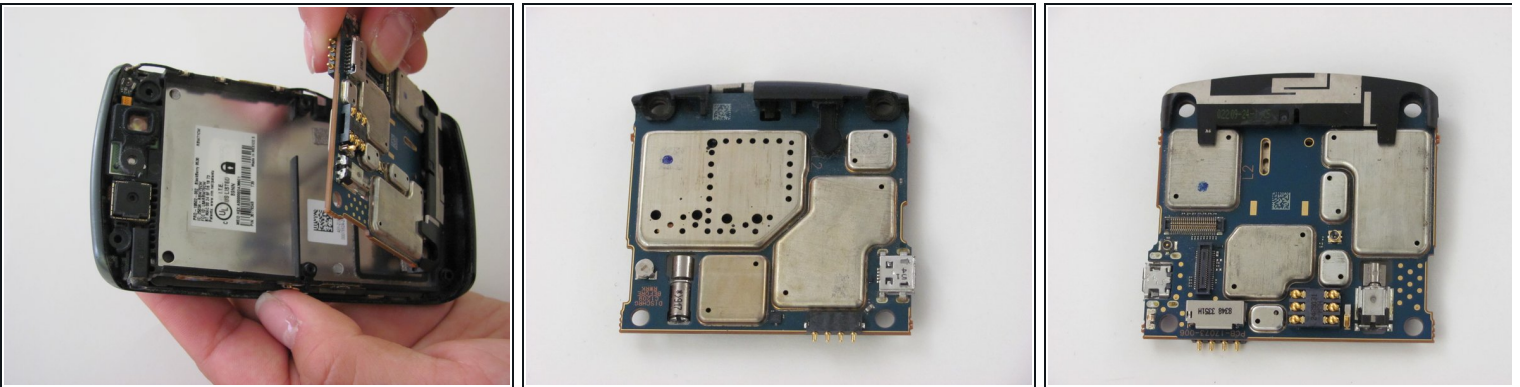

- Remove the entire motherboard now that all the components holding it down have been removed or disconnected.
- Grip the top right edge of the motherboard with your fingers and remove it by pulling it out gently.



## Step 17 — Volume Control and Convenience Key Buttons

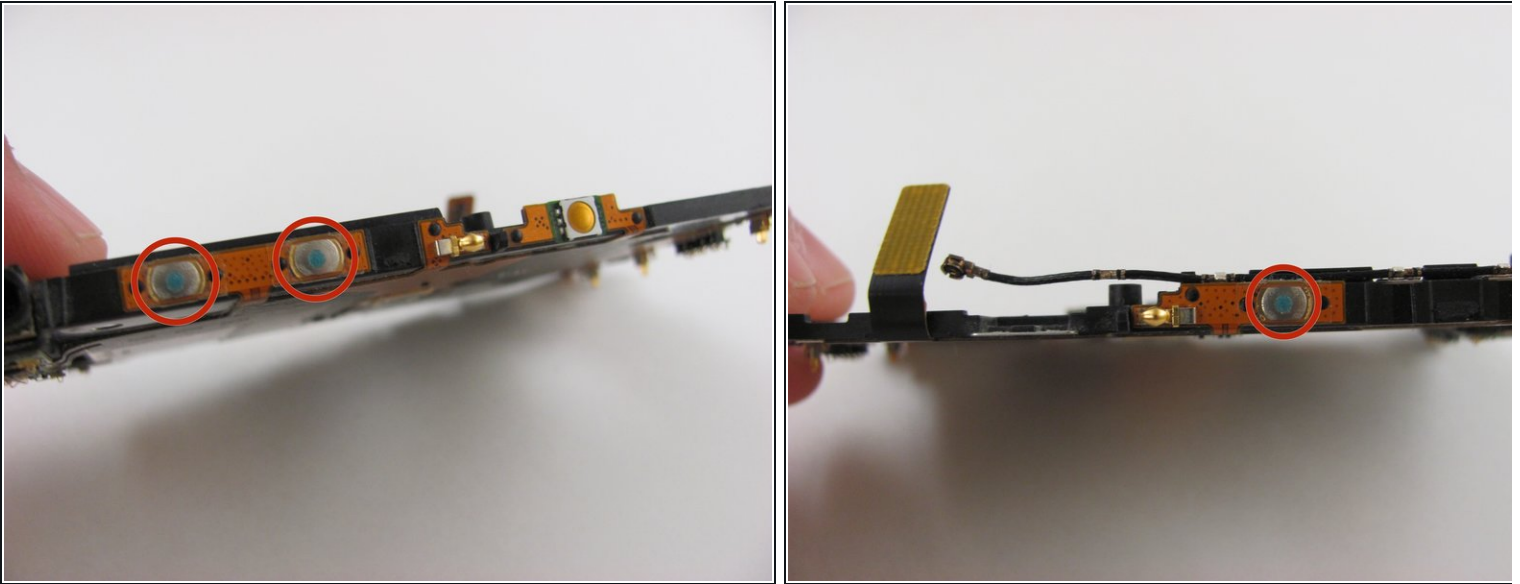

- Replace the volume control and convenience key buttons by replacing the entire middle panel.
- ⓘ Contact your plan provider or the phone manufacturer for details on obtaining a new panel.

## Step 18 — LCD/Touchscreen



- Notice that the LCD/touchscreen is placed directly beneath the side button panel.
- Prepare to remove the The LCD/touchscreen which rests directly on top of the front panel of the phone.
- Remove the LCD/touchscreen by pulling it off of the front panel once you have located it. No tools are necessary.

## Step 19 — Front Buttons





- If any one of these buttons is broken or needs replacement, then it is possible to replace the whole button strip.

## Step 20



- First, the flexible chip on the inside of the frame needs to be detached by using the prying tool.

## Step 21

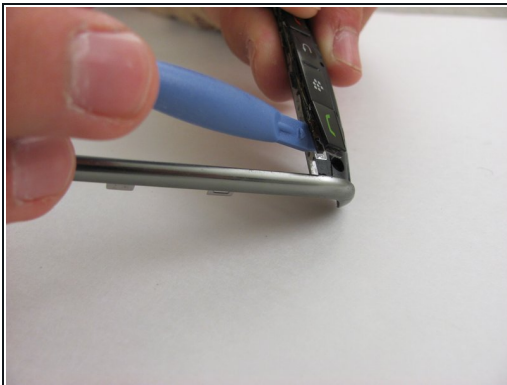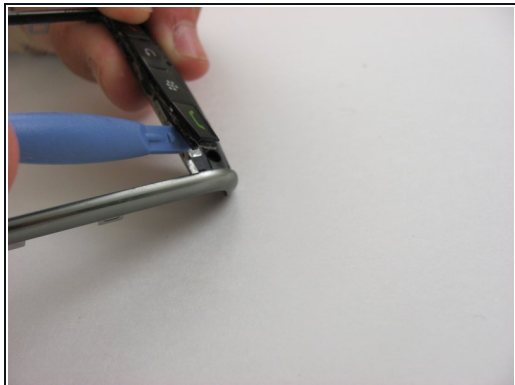

- Next, the buttons need to be pried from the front panel

---

To reassemble your device, follow these instructions in reverse order.