



# Sony NEX-7 Battery Replacement

If your camera runs out of batteries, you will need to take out the battery to charge it or put in a charged one.

Written By: Tyler



## INTRODUCTION

Use this guide to open the battery compartment and replace the battery.

## Step 1 — Battery



**!** We need to turn off the camera because we are removing components that could get damaged if the power is still on.

- If the camera is on, rotate the power switch on top of the camera counterclockwise to turn the camera off.

## Step 2



- Flip the camera over such that the power switch points down.
- Slide the switch on the bottom of the camera grip towards the lens to open the battery door.

### Step 3



- With the battery door open, push the blue lever in the battery compartment to release the battery.

To replace the battery, fit it in the slot, then close and lock the door.